

NJEX 8300L

L P G O D O R I Z A T I O N S Y S T E M



THE NJEX 8300L

INSTRUCTION & OPERATING MANUAL

Version: NJEX8300L 09042003

8300L TABLE OF CONTENTS

| | |
|--|-----------|
| 8300L Table of Contents | I |
| Section 1: First Things To Know About The 8300L | 1 |
| How to Use this Manual | 1 |
| Typographic Conventions | 1 |
| Getting Help | 1 |
| Operation Specifications | 2 |
| Warranty | 2 |
| Theory of Operation | 3 |
| System Accessories | 3 |
| Section 2: System Installation | 5 |
| Standard System Components | 5 |
| System Flow Schematic | 6 |
| Standard System Mounting | 7 |
| Standard System Connections | 8 |
| Skid System Components | 10 |
| System Flow Schematic | 12 |
| Skid System Mounting | 13 |
| Skid System Connections | 14 |
| Section 3: Filling the Bulk Odorant Tank | 17 |
| Filling the Tank for the First Time | 17 |
| Refilling the Bulk Odorant Tank | 18 |
| Section 4: System Control & Electronics | 19 |
| Overview | 19 |
| To Use The Key Pad | 19 |
| To Power Up The System | 20 |
| Test & Standby Keys | 21 |
| LPS and Battery w/Cover Removed | 22 |
| Communications Interface | 23 |
| Comm-Link Configuration | 23 |

8300L TABLE OF CONTENTS

| | |
|--|-----------|
| Section 5: Programming for Proportional-to-Flow Operation | 25 |
| Setting Operator Input Parameters | 25 |
| Odorant injection rate in lbs/10K Gal. (mg/liter) of LPG | 25 |
| Pump displacement in cc/stroke | 25 |
| Odorant density in lbs/gallon (g/cc) @ 60° F | 25 |
| Max gas flow in Gal./Min. (Liters/Min) | 26 |
| Low Flow Shut Off | 26 |
| Flow (no signal) input | 26 |
| Maximum Time/Stroke | 27 |
| The Odorant Output Setting | 27 |
| Odorant Tank | 28 |
| Expansion Tank Pressure Monitoring | 28 |
| Odorant Inlet Pressure Monitoring | 29 |
| Alarm to Relay Delay | 30 |
| Alarm to Call Out Delay | 30 |
| MODBUS Address | 30 |
| MODBUS Parameters | 31 |
| Conclusion | 31 |
| | |
| Section 6: Programming for Proportional-to-Time Operation | 33 |
| Setting Operator Input Parameters | 33 |
| Pump displacement in cc/stroke | 33 |
| Odorant density in lbs/gallon (g/cc.) @ 60°F | 33 |
| Time interval between strokes of the pump in xx.xx minutes/stroke: | 33 |
| The Odorant Output Setting | 34 |
| Odorant Tank | 34 |
| Expansion Tank Pressure Monitoring | 35 |
| Odorant Inlet Pressure Monitoring | 35 |
| Alarm to Relay Delay | 36 |
| Alarm to Call Out Delay | 36 |
| MODBUS Address | 37 |
| MODBUS Parameters | 37 |
| Conclusion | 38 |
| | |
| Section 7: Calibrating Signal Inputs | 39 |
| Analog Flow Input Calibration, 1-5 VDC / 4-20 mA | 39 |
| Expansion Tank Pressure Transmitter Zero Calibration | 41 |
| Odorant Inlet Pressure Transmitter Zero Calibration | 42 |
| Pulse Flow Input Calibration, Dry Contact & Voltage Pulse | 44 |
| Calculation for Determining the Span Frequency Example | 45 |
| Pulse Per Metered Volume Calibration | 45 |

8300L TABLE OF CONTENTS

| | |
|--|-----------|
| Section 8: Working with the N-300 System Displays | 47 |
| Display Functionality | 47 |
| To View Real Time Displays | 48 |
| Strokes Signaled | 48 |
| Odorant Injected | 48 |
| Pump Displacement..... | 48 |
| Pump Alarms..... | 48 |
| Meter Level – Verometer | 49 |
| Meter Alarms – Verometer | 49 |
| Meter Indicators, non-alarm | 49 |
| Expansion Tank | 50 |
| Odorant Inlet | 50 |
| Battery Voltage | 50 |
| Battery Alarm..... | 50 |
| Flow Input | 50 |
| Flow Input Alarms | 50 |
| Flow Input Indicators, non-alarm | 50 |
| Tank Level..... | 51 |
| Tank Level Alarm | 51 |
| Odorant Temperature | 51 |
| | |
| Section 9: Setting & Testing Alarms | 53 |
| Setting Alarm Out Status | 53 |
| Testing Alarm Out Status | 55 |
| Setting The Clock | 58 |
| | |
| Section 10: Mechanical System | 61 |
| Overview | 61 |
| Odorant Inlet Manifold & Bulk Odorant Filter Assembly | 62 |
| Fill Valve | 62 |
| Verometer..... | 63 |
| Model 8000 Pump | 64 |
| Odorant Discharge Manifold..... | 64 |
| NJEX Gas Filter | 65 |
| Solenoid Valve & Pneumatic Relay Manifold | 66 |
| Expansion Tank..... | 66 |
| | |
| Section 11: System Operation | 67 |
| Setting System Pressures and Valves | 67 |
| Low Pressure Relief Adjustment | 67 |
| Starting The System | 68 |
| To Stop The System | 69 |

8300L TABLE OF CONTENTS

| | |
|---|-----------|
| Section 12: System Maintenance | 71 |
| Preventative Maintenance Schedule | 71 |
| Recommended Maintenance Schedule | 71 |
| Weekly Inspection | 71 |
| Semi-Annual Inspection | 71 |
| Annual Inspection | 71 |
| Bi-Annual Inspection | 71 |
| Recommended Spare Parts List | 71 |
| Overflow Protector Assembly Inspection | 72 |
| Low Pressure Relief Adjustment | 73 |
| Conducting a Forward Purge | 74 |
| Venting Pressure Gas | 76 |
| Filling the Verometer | 78 |
| Priming & Starting the NJEX System | 80 |
| | |
| Section 13: 8300L System Troubleshooting | 83 |
| How to Use This Section | 83 |
| For Additional Help | 83 |
| Step-by-Step Resolution | 83 |
| Tank Level Alarms | 83 |
| Tank Level Alarm Troubleshooting Steps | 84 |
| Battery Alarm | 84 |
| Battery Alarm Troubleshooting Steps | 84 |
| Signal Alarms | 85 |
| Signal Non-Alarm Indicators | 85 |
| Signal Alarm & Non-Alarm Indicator Troubleshooting Steps | 85 |
| Loss of Flow Alarm Troubleshooting Steps | 85 |
| Overflow Alarm Troubleshooting Steps | 85 |
| Low Flow Non-Alarm Indicator Troubleshooting Steps | 86 |
| Overflow Non-Alarm Indicator Troubleshooting Steps | 86 |
| Verometer Alarms | 86 |
| Verometer Non-Alarm Indicators | 87 |
| Verometer Troubleshooting Steps | 87 |
| Verometer Cable Alarm Troubleshooting Steps | 87 |
| Verometer No-Fill Alarm Troubleshooting Steps | 87 |
| Verometer Slow-Fill Alarm Troubleshooting Steps | 88 |
| Verometer Leakage Alarm Troubleshooting Steps | 88 |
| Verometer Fill Valve Failure Alarm Troubleshooting Steps | 89 |
| Verometer Odorant Inlet Cable Alarm Troubleshooting Steps | 89 |
| Verometer Odorant Inlet Low Alarm Troubleshooting Steps | 90 |
| Verometer Odorant Inlet Hi Alarm Troubleshooting Steps | 90 |
| Verometer Expansion Tank Cable Alarm Troubleshooting Steps | 90 |
| Verometer Expansion Tank Low Alarm Troubleshooting Steps | 90 |
| Verometer Expansion Tank High Alarm Troubleshooting Steps | 91 |
| Verometer Overfill Non-Alarm Indicator Troubleshooting Steps | 91 |
| Verometer Fill Rate Non-Alarm Indicator Troubleshooting Steps | 91 |

8300L TABLE OF CONTENTS

Section 13: 8300L System Troubleshooting continued

| | |
|---|------------|
| Pump Alarms | 91 |
| Pump Over Pumping Alarm Troubleshooting Steps | 92 |
| Pump Under Pumping Alarm Troubleshooting Steps | 92 |
| Pump Failure Alarm Troubleshooting Steps | 93 |
| Appendix A: Illustrations | 95 |
| NJEX Model 8000 Pump Assembled | 95 |
| NJEX Model 8000 Pump Actuation Assembly, Exploded View | 96 |
| NJEX Model 8000 Pump, Diaphragm and Check Valve Assembly, Exploded View | 97 |
| Fill Valve, Exploded View | 98 |
| VM-2100 Verometer, with Filter Assembly, Exploded View | 99 |
| Bulk Odorant Filter | 100 |
| NJEX Gas Filter | 101 |
| Electronics Assembly | 102 |
| LPS-120/240 Charger Supply Unit | 103 |
| Heater Wiring Diagram | 104 |
| Back Pressure Regulator Diagram | 105 |
| Appendix B: N-300 Modbus Specifications | 107 |
| Communications Settings | 107 |
| N300 Modbus Function Support | 107 |
| Boolean Registers | 107 |
| Control Functions | 107 |
| Status Functions | 108 |
| Alarm Functions | 109 |
| Integer Registers | 110 |
| Result Data Functions | 110 |
| Parameter functions | 112 |
| Exception Responses | 112 |
| Appendix C: Response Forms | 113 |
| For the Record Form | 113 |
| NJEX Trouble Shooting Form | 114 |
| Appendix D: Documents | 115 |
| N-300 Controller Display Diagram | 115 |
| Wiring Control Document | 116 |
| Appendix E: ATEX | 117 |
| N-300 ATEX Connections | 117 |

8300L TABLE OF CONTENTS

SECTION 1: FIRST THINGS TO KNOW ABOUT THE 8300L

How to Use this Manual

The NJEX-8300L Operations Manual is a step-by-step guide containing the procedures needed to work with the 8300L System.

The NJEX System Series of odorizers implement the most advanced technology available in the industry. It is recommended that the technicians working with the NJEX Odorization Systems study the manual prior to initiating work on the system for the first time.

Typographic Conventions

To aid in readability, this manual uses several typographic conventions. References to illustrations, photographs, and other related content will appear in *italicized text* along with the location of where to find the item in the manual. Digital versions of the manual, available in Adobe Acrobat™ PDF format, will be highlighted further in *blue italic text* indicating the copy retains a hyperlink to the referenced item.

Measurement units are listed in italic parenthesis text following their US standard equivalent. As an example, for defining a distance, 15' (*4.5 meters*), is how the text will appear throughout the manual.

Items that require action, for example the pressing of a key for programming the controller, will feature the action item in sentence case **Bold Text** followed in normal text by the item such as, the **Up Arrow** key or **Main Power** switch.

Starting with Section 4, System Control & Electronics, the manual will begin discussing the in-depth operation of the N-300 electronic controller where many of these typographic conventions will be found. In the discussion about the controller, the technician will learn about the dual-use keypad. Here, the controller LCD will display a new function for the key located immediately below the displayed item. For example, an **Up Arrow** key may have ***Set** immediately above it on the LCD indicating to set, or enter, the selected item into the memory of the N-300 controller. The asterisk (*), immediately before **Set** on the LCD indicates the dual-use keypad is active.

Further discussion on the dual-use capability of the N-300 controller keypad will take place in [Section 4, System Control and Electronics, on page 19](#).

Getting Help

This manual provides solutions to typical questions about the 8300L system. If the answer can not be found within this manual, contact YZ Systems at:

T: 1.936.788.5593
T: 1.800.653.9435 (*800.NJEX.HELP*)
F: 1.936.788.5720
Em: Service@yzhq.com

When calling, have this manual close at hand. Whether calling or writing, please include in your communicate the following information:

- The serial number of the NJEX System and the version number of this manual. The serial number is located on the inside of the enclosure door just below the system flow diagram. The version number of this manual is located at the bottom of each page.
- A description of the problem and, if applicable the actions of the technical personnel when the problem occurred.
- A listing of any messages that may have appeared in the LCD on the N-300 controller, please include:
 1. The exact wording of the message(s).
 2. The version number of the Sentry software used.

SECTION 1: FIRST THINGS TO KNOW ABOUT THE 8300L

Operation Specifications

| | |
|--------------------------------|---|
| Maximum Odorant Output: | 68 gallons/day (257 liters/day) |
| Maximum Operating Pressure: | 1,440 psig (99.28 Bar (g)) |
| Operating Temp Range: | 0 to 140 degrees F. (17°C to 60°C) |
| Power Supply: | LPS-120/240 volt- 50/60Hz AC charger |
| Battery Reserve ¹ : | Approximately 30 days |
| Gas Flow Rate Input Signal: | 1-5 VDC, 4-20 mA or pulse |

Note: at temperatures below 32° F (0° C), conditioning of the actuation gas supply may be required. Where the actuation gas supply has a high water content and/or a low hydrocarbon dew point, additional actuation gas filtration or heating of the actuation gas supply may be necessary. Bottled nitrogen can also be used during cold operating conditions to avoid condensation in the actuation gas supply line. In addition, operation at extreme temperatures will affect seal and diaphragm performance. To prolong the service of seals and diaphragm, adequate heat should be provided to maintain an operating environment above 30° F (-1° C).

¹ Actual reserve time is dependant on age and condition of battery and the usage rate of the NJEX System.

SECTION 1: FIRST THINGS TO KNOW ABOUT THE 8300L

Theory of Operation

Operation of the 8300L centers around three primary components: the Model 8000 pump, the Model VM-2100 Verometer and the Model N-300 controller.

During normal operation, the Model 8000 pump injects an exact quantity of odorant at a rate determined by the N-300 controller. The quantity of odorant injected per stroke is set using a spacer in the pump actuation assembly. The rate at which the pump is actuated is determined by the N-300 controller.

The VM-2100 Verometer serves as a temperature compensated meter which verifies the amount of odorant injected by the Model 8000 pump. The N-300 controller uses an input signal from the Verometer to determine the amount of odorant that has been injected, as well as the odorant level within the Verometer. Once the odorant level falls to a predetermined low level point, the N-300 controller actuates a solenoid valve which opens the fill valve, allowing the Verometer to be refilled. Once the Verometer is filled, the N-300 controller closes the fill valve.

The N-300 controller allows the 8300L system to operate in either a time-based mode or a proportional-to-flow mode. In the time-based mode of operation, the N-300 controller actuates the Model 8000 pump at a regular time interval preset by the operator.

In the proportional-to-flow mode of operation, the N-300 controller uses a customer provided gas flow rate input signal and several operator input values to calculate the time between strokes of the pump. These operator input values include the odorant injection rate (*lbs/10K gallons or mg/liter*), pump displacement (*cc/stroke*), and the odorant density (*lbs/gal or g/cc*). The flow input signal is customer provided by either a flow computer or other flow monitoring devices. In this mode, the controller has the capability to distinguish between a low flow situation and a loss of flow input signal. For systems with analog inputs, if a loss of flow signal occurs, the controller automatically defaults back to a pre-selected percentage of the flow input.

The flow input signal is read by the N-300 controller eight times per pump stroke. These readings are averaged and the time duration until the next stroke is then calculated by the controller. The maximum time between strokes is 99.99 minutes (when gas is flowing), regardless of the time calculated by the controller.

Odorant usage by load information is available by utilizing the Sentry4 Software to access data from the N-300 controller. The per Load Odorant Usage data is documented from the odorizer performance data in conjunction with a customer provided loading cycle relay status, *refer to the Wiring Control Document on page 116 in Appendix D.*

Caution:

Excessive tubing lengths should be avoided. Installation of the NJEX Odorization system should be as close to the point of injection and Odorant Storage Tank as possible. Maximum tubing length should not exceed 15' (4.5 meters) with the tubing size maintained as indicated in this manual. If longer tubing lengths are required consult YZ Systems Technical Services at; 800.653.9435 or 1.936.788.5593.

System Accessories

- **Odorant Injection Probe**, includes a 316 stainless steel probe, and isolation valve for location at the pipeline. When ordering, please specify pipeline connection required, 1/2" or 3/4".
- 3/8" stainless steel discharge tubing **In-line Check Valve**. For placement in the odorant discharged tubing line immediately preceding the probe assembly, (*P/N A3-0025*).
- 3/8" stainless steel tubing **Dielectric Isolator Union**. These should be installed in every tubing line that attaches the odorizer to the pipeline in any manner. For example the supply gas, odorant discharge, and differential pressure switch connections, (*P/N A1-0183*).

A complete line of odorization accessories ranging from pre-odorized gas scrubbers to injection probes is available through YZ. Please contact your local representative or YZ toll free at 800.344.5399. For technical support call 800.653.9435.

SECTION 2: SYSTEM INSTALLATION

Standard System Components

Standard primary components of the NJEX-8300L include the following:

- **System Enclosure**, *figure 1*. Houses the Model 8300 pump, the Model VM-2100 Verometer, the fill valve, the solenoid valve/pneumatic relay manifold, the odorant discharge manifold, the system control enclosure, power supply enclosure, and odorant filter.
- **System Control Enclosure**. Houses the N-300 controller. (Not illustrated)
- **Power Supply Enclosure**. Houses the battery, charger supply, and I.S. Barrier. (Not illustrated)
- **Bulk Odorant Filter**, *figure 3*. Provides primary odorant filtration between the storage tank and the NJEX-8300L. The Bulk Odorant Filter is pre-installed inside the System Enclosure attachment to the odorant source is via an odorant inlet manifold equipped with 1/4" FNPT connection located on the back of the System Enclosure.
- **Service Tray**, (*Not Illustrated*), should be installed in the bottom of the system enclosure, to capture any drops that may occur during servicing of the odorizer.
- **Mechanical Cabinet Cable**, *figure 3*. Provides the connection between the system control enclosure and the electrical components in the mechanical section.
- **Expansion Tank**, *figure 2*. Provides a closed loop system for pressure fluctuations within the Verometer during the odorant fill/injection cycle.
- **NJEX Gas Filter**, *figure 2*. Installed between the actuation gas regulator and the actuation gas manifolds, this filter provides a 25 micron coalescent filtration to insure a clean pneumatic supply.
- **Actuation Gas Regulator**, *figure 3*. Provides additional regulation of supply gas to actuate the pump.

System Enclosure



Figure 1



Figure 2

Mechanical Cabinet Cable Actuation Gas Regulator




Figure 3

Bulk Odorant Filter

SECTION 2: SYSTEM INSTALLATION

System Flow Schematic

Figure 4



| Table 1 | |
|-----------------------------|----------------|
| 8300 | |
| Pipeline Pressure | Actuation |
| 200-400psi(13.89-27.6Bar) | 40psi(2.76Bar) |
| 400-600psi(27.6-41.4Bar) | 50psi(3.45Bar) |
| 600-800psi(41.4-55.2Bar) | 60psi(4.14Bar) |
| 800-1000psi(55.2-68.9Bar) | 70psi(4.83Bar) |
| 1000-1300psi(68.9-89.6Bar) | 80psi(5.52Bar) |
| 1300-1500psi(89.6-103.4Bar) | 90psi(6.21Bar) |

IMPORTANT: Read And Follow Steps 1-4 BEFORE Proceeding

- Place the controller in the standby mode.
- Close all valves marked "X".
- Open all valves marked "O".
- Place controller in the proper mode of operation as needed.

● - Open to build pressure to 60 psi (4.14 Bar) then close valve
 * - Adjust as needed

| | V2 | V3 | V4 | V5 | V6 | V8 | V9 | V10 | V11 | V12 | V13 | V14 | V15 | V16 | V17 |
|------------------|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|
| Normal Operation | X | X | X | X | O | O | * | X | X | O | O | X | O | O | O |
| System Purge | O | X | X | X | X | * | X | X | O | O | X | O | X | O | O |
| System Vent | O | O | X | X | X | * | X | X | O | O | X | O | X | O | X |
| Leak Test | O | O | X | X | X | * | X | X | O | O | X | O | X | O | X |
| Prime Pump | X | O | X | X | O | X | * | X | X | O | O | X | O | O | O |

LEGEND

| | | | | | | | | | |
|--|-----------------------------|--|------------------------------------|--|--|--|---|--|---|
| | Normally Closed Valve | | Liquid Odorant - Normal Operation | | V2 Purge Valve (Red Knob) | | V11 Odorant Storage Tank Vapor Return Valve | | SV1 Pump Actuation Pilot Solenoid Valve |
| | Normally Open Valve | | Purge/Drain Line | | V3 Prime Valve (Blue Knob) | | V12 Odorant Storage Tank Relief Valve Isolation Valve | | SV2 Fill Valve Solenoid Valve |
| | Pneumatic Relay | | Expansion Line | | V4 Expansion Tank Pressure Supply Valve (Gold Knob) | | V13 Odorant Storage Tank Blanket Gas Isolation Valve | | PT1 Expansion Tank Pressure Transducer |
| | Check Valve | | Intrinsically Safe Electrical Line | | V5 Expansion Tank Vent Valve (Green Knob) | | V14 Expansion Tank Drain Valve | | PT2 Odorant Inlet Pressure Transducer |
| | Float Valve | | Exhaust/Vent Line | | V6 Expansion Tank Overflow Preventor Isolation Valve | | V15 Odorant Storage Tank Supply Isolation Valve | | |
| | Pressure Gauge | | Actuation Line 75 psi (5.17 Bar) | | V7 Expansion Tank Overflow Preventor Isolation Valve | | V16 Gas Supply Isolation Valve (Black Knob) | | |
| | Electronic Level Transducer | | Fill Valve Actuation Line | | V8 Isolation Valve | | V17 System Odorant Supply Isolation Valve | | |
| | Solenoid Valve | | Pump Actuation Line | | V9 Fill Rate Control Valve | | | | |
| | Pressure Regulator w/Gauge | | | | V10 Odorant Storage Tank Fill Valve | | | | |
| | Pressure Relief Valve | | | | | | | | |
| | Pressure Transducer | | | | | | | | |

SECTION 2: SYSTEM INSTALLATION


Standard System Mounting

Figure 5

1. Bolt down the system enclosure to a concrete slab using the mounting holes (9/16") provided in the bottom of each leg of the enclosure. Recommended bolt/stud sizes for mounting the enclosure is 1/2".
2. Connect a ground wire from the grounding lug located on the enclosure leg to a properly installed ground rod, located adjacent to the system enclosure.

*Resistance to ground must be less than 1 Ohm.

| TABLE 1 | | | |
|---------|---------|---------|----|
| | A | B | C |
| SINGLE | 20 3/4" | 20 1/4" | 9" |
| DUAL | 40 1/4" | 39 1/2" | 9" |



SECTION 2: SYSTEM INSTALLATION

Standard System Connections

Required field connections to place the 8300L into operation are as follows:

1. Connect the LPS120/240 power supply to a source of AC power in accordance with explosion-proof code via a termination junction box (not shown) to be attached to the conduit provided at the upper left side on the system enclosure. The power requirement for 120VAC will be 100 mA. The power requirement for 240VAC will be 50 mA. These power inputs must be fused with a maximum of 15A, *figure 6*.
For ATEX installation refer to Section E, page 117.
2. 120/240 VAC electricity should be connected to the electrical inlet for the heater located on the lower side of the enclosure using 1/2" conduit and appropriate pack off. Power requirements for the heater are 1.67A for the 120VAC heater, and .833A for the 240VAC heater. Each heater is a thermostatically controlled 200Watt unit, *figure 7*, refer to the heater wiring diagram, page 104,
3. Connect the flow signal device to the termination block located in the system control enclosure, *figure 8*, refer to the *Wiring Control Document on page 116 in Appendix D*.
- 3a. If used, connect the optional Inhibit Input signal to the termination block located in the system control enclosure, *figure 8*, refer to the *Wiring Control Document on page 116 in Appendix D*.
- 3b. If used, connect the RS-485 communication wiring as required to the termination block located in the system control enclosure, *figure 8*, refer to the *Wiring Control Document on page 116 in Appendix D*.
4. Connect the Load Input signal device to the termination block located in the system control enclosure, *figure 8*, refer to the *Wiring Control Document on page 116 in Appendix D*.



Figure 6



Figure 7



Figure 8

SECTION 2: SYSTEM INSTALLATION

CAUTION:

Excessive tubing lengths should be avoided. Installation of the NJEX Odorization system should be as close to the point of injection and Odorant Storage Tank as possible. Maximum tubing length should not exceed 15' (4.5 meters) with the tubing size maintained as indicated in this manual. If longer tubing lengths are required consult YZ Systems Technical Services at; 800.653.9435 or 1.936.788.5593.

5. Connect the odorant supply source to the odorant inlet manifold with the recommended 1/4" stainless steel tubing, *figure 9*. A tank isolation valve should be incorporated between the storage tank and this connection, *figure 9*.
6. Connect the regulated actuation gas source, of 75 psi (5.17 Bar) supplied by the NJEX system owner, to the NJEX gas filter inlet fitting using a dielectric union, *figure 9*.

Note: in applications where the actuation gas supply has a high water content and/or a low hydrocarbon dew point, additional actuation gas filtration or heating of the 8300L system may be necessary. Bottled nitrogen can also be used during cold operating conditions to avoid condensation in the actuation gas supply line. Also, an actuation gas source pressure of 75 psi (5.17 Bar) should be adequate in most installations.

- 6a. Connect a regulated source of natural or inert gas, of 75 psi (5.17 Bar) supplied by the NJEX system owner, to valve V13 on the Bulk Odorant Storage Tank, and also to valve V4 on the Expansion Tank.
7. Connect the pipeline port of the odorant discharge manifold to a back pressure regulator, and then connect to the pipeline connection using a dielectric union and check valve, *figure 9*, [refer to the back pressure regulator diagram, page 105](#).




Figure 9

SECTION 2: SYSTEM INSTALLATION

Skid System Components

Introduction

The NJEX SkidMount Series of odorization systems is a total system approach to odorization. These systems are completely factory assembled, tested, and delivered requiring only three field connections to be fully operational. The NJEX SkidMount Systems offer all the advantages of our standard 8300L Systems plus the added benefit of an onboard odorant storage tank. The configuration allows for a total systems approach to odorization.

The SkidMount Systems come standard with an electronic level indicator factory connected to the N-300 controller. The controller has an alarm capability to indicate when the liquid level in the storage tank has fallen below a predetermined level set by the operator.

The Systems are available with 20, 60, 120, 250, 500 and 1000 gallon tank sizes.

Skid system primary components of the NJEX-8300L include the following:

- **Skid Mounted Tank** a pre-assembled, and tested Structural steel skid with odorant tank, valve package, skid piping, and system enclosure.
- **NJEX System Enclosure**, *figure 10*, houses and protects the; 8300 pump, VM-2100 Verometer, odorant fill valve, solenoid valve/pneumatic relay manifold, odorant discharge manifold, N-300 system controller enclosure, power supply enclosure, and bulk odorant filter.
- **System Control Enclosure** for the N-300 controller.
- **Power Supply Enclosure** for the battery and charging system.



Figure 10

SECTION 2: SYSTEM INSTALLATION

- **Bulk Odorant Filter**, *figure 11*, provides primary odorant filtration between the storage tank and the NJEX-8300L. The bulk odorant filter is pre-installed inside the system enclosure attachment to the odorant source is via a bulk filter manifold equipped with 1/4" FNPT connection located on the back of the system enclosure.
- **Mechanical Interconnect Cable**, *figure 11*, provides the connection between the system control enclosure and the electrical components located in the mechanical section.
- **Expansion Tank**, *figure 12*, provides a closed loop system for pressure fluctuations within the Verometer during the odorant fill and injection cycle.
- **NJEX Gas Filter**, *figure 12*, installed between the actuation gas regulator and the actuation gas manifolds provides a 25 micron coalescent filtration to insure a clean pneumatic supply.
- **Actuation Gas Regulator**, *figure 11*, provides additional regulation of supply gas to actuate the pump.
- **Service Tray**, (*Not Illustrated*), should be installed in the bottom of the system enclosure, to capture any drops that may occur during servicing of the odorizer.

Mechanical Cabinet Cable Actuation Gas Regulator



Figure 11

Bulk Odorant Filter




Figure 12

SECTION 2: SYSTEM INSTALLATION

System Flow Schematic

Figure 13



| Table 1 | |
|-----------------------------|--------------------|
| 8300 | |
| Pipeline Pressure | Actuation Pressure |
| 200-400psi(13.89-27.6Bar) | 40psi(2.76Bar) |
| 400-600psi(27.6-41.4Bar) | 50psi(3.45Bar) |
| 600-800psi(41.4-55.2Bar) | 60psi(4.14Bar) |
| 800-1000psi(55.2-68.9Bar) | 70psi(4.83Bar) |
| 1000-1300psi(68.9-89.6Bar) | 80psi(5.52Bar) |
| 1300-1500psi(89.6-103.4Bar) | 90psi(6.21Bar) |

IMPORTANT: Read And Follow Steps 1-4 BEFORE Proceeding

- Place the controller in the standby mode.
- Close oil valves marked "X".
- Open all valves marked "O".
- Place controller in the proper mode of operation as needed.

- Open to build pressure to 60 psi (4.14 Bar) then close valve
- Adjust as needed

| | V2 | V3 | V4 | V5 | V6 | V8 | V9 | V10 | V11 | V12 | V13 | V14 | V15 | V16 | V17 |
|------------------|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|
| Normal Operation | X | X | X | X | O | O | * | X | X | O | O | X | O | O | O |
| System Purge | O | X | X | X | X | * | X | X | O | O | X | O | O | O | O |
| System Vent | O | O | X | O | X | X | * | X | X | O | O | X | O | O | X |
| Leak Test | O | O | O | X | X | X | * | X | X | O | O | X | O | O | X |
| Prime Pump | X | O | X | X | O | X | * | X | X | O | O | X | O | O | O |

LEGEND

| | | | | | | | | | |
|--|-----------------------------|--|------------------------------------|-----|---|-----|---|-----|-------------------------------------|
| | Normally Closed Valve | | Liquid Odorant - Normal Operation | V2 | Purge Valve (Red Knob) | V11 | Odorant Storage Tank Vapor Return Valve | SV1 | Pump Actuation Pilot Solenoid Valve |
| | Normally Open Valve | | Purge/Drain Line | V3 | Prime Valve (Blue Knob) | V12 | Odorant Storage Tank Relief Valve Isolation Valve | SV2 | Fill Valve Solenoid Valve |
| | Pneumatic Relay | | Expansion Line | V4 | Expansion Tank Pressure Supply Valve (Gold Knob) | V13 | Odorant Storage Tank Blanket Gas Isolation Valve | PT1 | Expansion Tank Pressure Transducer |
| | Check Valve | | Intrinsically Safe Electrical Line | V5 | Expansion Tank Vent Valve (Green Knob) | V14 | Expansion Tank Drain Valve | PT2 | Odorant Inlet Pressure Transducer |
| | Float Valve | | Exhaust/Vent Line | V6 | Expansion Tank Overflow Preventor Isolation Valve | V15 | Odorant Storage Tank Supply Isolation Valve | | |
| | Pressure Gauge | | Actuation Line 75 psi (5.17 Bar) | V7 | Expansion Tank Overflow Preventor | V16 | Gas Supply Isolation Valve (Black Knob) | | |
| | Electronic Level Transducer | | Fill Valve Actuation Line | V8 | Isolation Valve | V17 | System Odorant Supply Isolation Valve | | |
| | Solenoid Valve | | Pump Actuation Line | V9 | Fill Rate Control Valve | | | | |
| | Pressure Regulator w/Gauge | | | V10 | Odorant Storage Tank Fill Valve | | | | |
| | Pressure Relief Valve | | | | | | | | |
| | Pressure Transducer | | | | | | | | |


SECTION 2: SYSTEM INSTALLATION

Skid System Mounting

Figure 14

1. Bolt down the system to a concrete slab using the 3/4" mounting holes provided in the skid. The size of the concrete slab is recommended to exceed the NJEX System skid length and width dimensions by 12". Recommended mounting bolt/stud sizes are either 11/16" or 5/8" for securing the skid to the slab.
2. Connect a ground wire from one of the grounding lugs located on the skid to a properly installed ground rod located adjacent to the skid.
*Resistance to ground must be less than 1 Ohm.

| Tank Capacity | C | D | Approx. Weight Dry |
|---------------|------|-----|--------------------|
| 20 gal. | 34" | 34" | 450 lbs. |
| 60 gal. | 52" | 52" | 550 lbs. |
| 120 gal. | 96" | 47" | 850 lbs. |
| 250 gal. | 122" | 32" | 1200 lbs. |
| 500 gal. | 147" | 47" | 1700 lbs. |
| 1000 gal. | 220" | 47" | 2900 lbs. |



SECTION 2: SYSTEM INSTALLATION

Skid System Connections

Required field connections to place the 8300L into operation are as follows:

1. Connect the LPS120/240 power supply to a source of AC power in accordance with explosion-proof code via a termination junction box (not shown) to be attached to the conduit provided at the upper left side on the system enclosure. The power requirement for 120VAC will be 100 mA. The power requirement for 240VAC will be 50 mA. These power inputs must be fused with a maximum of 15A, *figure 15*.
For ATEX installation refer to Section E, page 117.
2. 120/240 VAC electricity should be connected to the electrical inlet for the heater located on the lower side of the enclosure using 1/2" conduit and appropriate pack off. Power requirements for the heater are 1.67A for the 120VAC heater, and .833A for the 240VAC heater. Each heater is a thermostatically controlled 200Watt unit, *figure 16*, refer to the heater wiring diagram, page 104,
3. Connect the flow signal device to the termination block located in the system control enclosure, *figure 17*, refer to the *Wiring Control Document on page 116 in Appendix D*.
- 3a. If used, connect the optional Inhibit Input signal to the termination block located in the system control enclosure, *figure 17*, refer to the *Wiring Control Document on page 116 in Appendix D*.
- 3b. If used, connect the RS-485 communication wiring as required to the termination block located in the system control enclosure, *figure 17*, refer to the *Wiring Control Document on page 116 in Appendix D*.
4. Connect the Load Input signal device to the termination block located in the system control enclosure, *figure 17*, refer to the *Wiring Control Document on page 116 in Appendix D*.



Figure 15



Figure 16



Figure 17

SECTION 2: SYSTEM INSTALLATION

CAUTION:

Excessive tubing lengths should be avoided. Installation of the NJEX Odorization system should be as close to the point of injection and Odorant Storage Tank as possible. Maximum tubing length should not exceed 15' (4.5 meters) with the tubing size maintained as indicated in this manual. If longer tubing lengths are required consult YZ Systems Technical Services at; 800.653.9435 or 1.936.788.5593.

5. Connect the odorant supply source to the odorant inlet manifold with the recommended 1/4" stainless steel tubing, *figure 9*. A tank isolation valve should be incorporated between the storage tank and this connection, *figure 18*.
6. Connect the regulated actuation gas source, of 75 psi (5.17 Bar) supplied by the NJEX system owner, to the NJEX gas filter inlet fitting using a dielectric union, *figure 18*.

Note: in applications where the actuation gas supply has a high water content and/or a low hydrocarbon dew point, additional actuation gas filtration or heating of the 8300L system may be necessary. Bottled nitrogen can also be used during cold operating conditions to avoid condensation in the actuation gas supply line. Also, an actuation gas source pressure of 75 psi (5.17 Bar) should be adequate in most installations.

- 6a. Connect a regulated source of natural or inert gas, of 75 psi (5.17 Bar) supplied by the NJEX system owner, to valve V13 on the Bulk Odorant Storage Tank, and also to valve V4 on the Expansion Tank.
7. Connect the pipeline port of the odorant discharge manifold to a back pressure regulator, and then connect to the pipeline connection using a dielectric union and check valve, *figure 18*, refer to the back pressure regulator diagram, page 105.




Figure 18

SECTION 3: FILLING THE BULK ODORANT TANK

Filling the Tank for the First Time

CAUTION:

Odorant has a very strong odor, which if allowed to escape to the atmosphere, may cause problems in the local community. Take necessary precautions when filling an odorant storage tank to assure that the local community is not disrupted during the filling process. Verify that the entire system has no pressure in it before beginning. Additionally, all personnel should wear protective clothing, and use equipment as recommended by the chemical manufacturer during this time. If you are uncertain about any aspect of the odorant itself, you should contact the manufacturer of your chemical prior to proceeding.

1. Verify correct position of valves before beginning, figure 19.

Open: **V12**, and **V13***

Closed: **V10**, **V11**, and **V15**

*Note Gas Supply to **V13** should NOT be turned on during this procedure.

2. Attach inert or natural gas supply to **V10**.

3. To purge the tank open valve **V10** to introduce inert or natural gas to the tank to begin displacing any ambient air from the empty tank. Continue until pressure on the gage located directly above **V13** is observed, then partially open **V11** to allow ambient air from the tank to begin flowing out. Allow this process to continue until all ambient air from the tank is purged, and only inert gas or natural gas is emitting from this valve, then close **V11** and **V10**. The time required to accomplish this task will vary with the tank size.
4. Vent purge gas by opening **V11** partially until tank pressure just reaches zero, and then close **V11**.
5. Attach odorant supply to **V10**, open **V10**, and begin transferring odorant to the bulk tank.
6. Connect a line from **V11** to a flare or vapor recovery device, and open **V11**.

CAUTION:

Fill tank to a maximum level of 80% of the tank capacity.

7. Close **V10** and **V11**, and remove odorant transfer equipment, and line to flare or vapor recovery device.
8. Turn Gas Supply to **V13** on, and open **V13** and **V15**.
9. Continue through the remaining procedures in this manual.




Figure 19

SECTION 3: FILLING THE BULK ODORANT TANK

Refilling the Bulk Odorant Tank

CAUTION:

Odorant has a very strong odor, which if allowed to escape to the atmosphere, may cause problems in the local community. Take necessary precautions when filling an odorant storage tank to assure that the local community is not disrupted during the filling process. Verify that the entire system has no pressure in it before beginning. Additionally all personnel should wear protective clothing, and use equipment as recommended by the chemical manufacturer during this time. If you are uncertain about any aspect of the odorant itself, you should contact the manufacturer of your chemical prior to proceeding.

1. Place the N-300 controller in the Standby Mode by pressing the **Standby** key.
2. Verify correct position of valves before beginning, figure 20.

Open: **V12**

Closed: **V10, V11, V13, V15**

3. Connect a line from **V11** to a flare or vapor recovery device, and open **V11**.
4. Attach odorant supply to **V10**, open **V10**, and begin transferring odorant to the bulk tank.

CAUTION:

Fill tank to a maximum level of 80% of the tank capacity.

5. Close **V10** and **V11**, and remove odorant transfer equipment, and line to flare or vapor recovery device.
6. Open **V13** and **V15**.
7. Place the N-300 controller in the Run Mode by pressing the **Standby** key.




Figure 20

SECTION 4: SYSTEM CONTROL & ELECTRONICS

Overview

The 8300L control/electronics system is composed of the system control enclosure and the LPS 120/240 charger supply, *figure 21*. Individual components of the system are shown below and are described in the following pages. A flow chart of the N-300 controller menu system is illustrated on the *N-300 Display Diagram located on page 116 in Appendix D*.



Figure 21

To Use The Key Pad

The three main keys have multiple function capabilities. Each key is labeled with it's primary function used in moving through the menu, they are as follows:

Select / Enter



The Select/Enter Key Up Arrow Key & Down Arrow Key

These keys also have alternative functions. These alternative functions will be reflected in the commands, preceded by an asterisk "*", that appear in a corresponding position to the key on the N-300 display. For example in *figure 22*

- To choose ***Start**, you would press the **Select / Enter** key.
- To choose ***Dsp**, you would select the  Key.
- To choose ***Set**, you would select the  Key.



Figure 22

SECTION 4: SYSTEM CONTROL & ELECTRONICS

To Power Up The System

Open the N-300 Controller Enclosure, *figure 23*, and find the toggle switch **S1** located just below center on the right side of the Printed Circuit Board – PCB. Turn on the main power switch by toggling the switch to up position.

Once powered-up, the menu sequence, *figure 24*, will appear. Follow the menu instructions on the LCD screen as they are presented.

Check to ensure the serial number and model type shown match the serial number and model type on the left side of the electronics enclosure and on the inside of mechanical enclosure door. Also check to ensure the verometer calibration number matches the verometer tag number located at the top of the verometer assembly, *figures 25, 26 & 27*.

Next you may have the option of accepting a set of Pre-Configured operating parameters, that have been programmed into the Sentry Module, *figure 28*. This option will only come up if it has been set up in Sentry and not previously uploaded.

Record the version x.xx number, *figure 29*, in the **For the Record Form** located on Page 113 in Appendix C of this manual for future reference.

IMPORTANT:

If the serial number, model type, or the verometer tag number do not match the corresponding numbers in the N-300 controller consult the factory before proceeding further.




Figure 23



Figure 24




Figure 25



Figure 26





Figure 27



Figure 28



Figure 29



SECTION 4: SYSTEM CONTROL & ELECTRONICS

Test & Standby Keys

The **Test key**, *figure 30*, is located in the upper right quadrant of the N-300 touch pad and is used to manually stroke the pump. Simply press the test key touch pad to stroke the pump. Each time the test key is pushed, the pump should actuate and the N-300 display will show **Strk** just above the **Test** key touch pad. The strokes signaled counter, located in the display section of the N-300 will advance for each stroke of the pump. The odorant injected counter, located in the display section of the N-300 will also advance when the pump displaces a sufficient volume of odorant to register .001 lb (.001 kg) of odorant.

The **Standby key**, *figure 31*, allows the operator to locally inhibit the operation of the N-300 controller, by simply pressing this key. This creates a standby mode for the 8300L system. In the event of a no flow condition in the pipeline, the operator can switch the 8300L to a standby mode for extended periods of time, or to temporarily suspend operation of the system for maintenance. When flow is initiated once more, or the maintenance has been completed, the 8300L can be switched from standby to operation without the need to restart the N-300 controller, by simply pressing the standby key once again.

Remote Inhibit Mode, can also be applied to interrupt odorization in a manner similar to the standby mode; however, it is initiated by applying a dry contact, or open collector signal, to the termination board TB1, terminals #9 and #10, *refer to the Wiring Control Document on page 116 in Appendix D*. The **Remote Inhibit Mode's** function is identical to the **Standby Mode**. Activation will be indicated on the N-300 display and the Sentry4 event file differently. **Rmt Inhb** will appear on the N-300 main screen display where the count down time normally appears, *figure 31*.




Figure 30



Figure 31

SECTION 4: SYSTEM CONTROL & ELECTRONICS

Battery & Power Supply Assembly

The 8300L standard system is powered using a 120/240 AC/DC Line Power Supply – LPS, *figure 32*, intrinsically safe barrier, and an enclosure for Class I, Division 1, Group C, D locations. *refer to the Wiring Control Document on page 116 in Appendix D*. The battery is included in the system to provide system operation and back up power for up to 30 days, in the event of an AC power failure. The battery is continuously monitored and an alarm signal is sent if the voltage falls below 11.0 volts. During normal charging operation the LED, located on the front of the LPS-120/240 will illuminate.




Figure 32

SECTION 4: SYSTEM CONTROL & ELECTRONICS

Communications Interface

There are three methods of communicating information out of the N-300 controller.

- **Method 1**, utilizes Communications Modbus protocol. Specifications to permit configuration can be found in [Appendix B, page 107](#).
- **Method 2**, utilizes the Sentry Software installed on a computer. In this mode the computer can communicate with the NJEX system & obtain information, or the NJEX system may be configured to notify the computer and provide it with information.
- Connections for Method 1 or 2 are via an RS-485 two wire connection. In a safe, nonhazardous area this may be connected to a RS-232 converter for interface with a SCADA system if required, [refer to the Wiring Control Document on page 116 in Appendix D](#).
- **Method 3**, utilizes two output relays. One relay is for **Alarm Output**, and provides single output communication to indicate some type of some alarm has occurred with the odorizer. The second output relay is for a **Scaled Pulse** relative to a programed volume of odorant injected by the system, [refer to the Wiring Control Document on page 116 in Appendix D](#).

Comm-Link Configuration

The 8300L system may be communicated to through on one or two available RS485 communication ports.

The N-300 Modbus specification can be found in the [Appendix B, page 107](#).

SECTION 5: PROGRAMMING FOR PROPORTIONAL-TO-FLOW OPERATION

Setting Operator Input Parameters

- Choose **Set** in the main menu, *figure 33*.
- Choose **Par** – *parameters* in the set selection menu, *figure 34*.
- Choose **Flow** in the set parameters menu, *figure 35*.
- Choose **Set** in the proportional-to-flow menu, *figure 36*.

Setting the odorant injection rate in lbs/10K gallons(mg/liter) of LPG

To set the injection rate, *figure 37*, press and release the **Select** key. The value entry will begin to flash when chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into memory. Press the **Down Arrow** key to advance to the next parameter.


Pump displacement in cc/stroke

To set the pump displacement, *figure 38*, press and release the **Select** key. The value entry will begin to flash when chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into memory. Press the **Down Arrow** key to advance to the next parameter.

Odorant density in lbs/gallon (g/cc) @ 60° F

To set the odorant density, *figure 39*, press and release the **Select** key. The value entry will begin to flash when chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into memory. Press the **Down Arrow** key to advance to the next parameter.

*designates optional key function



SECTION 5: PROGRAMMING FOR PROPORTIONAL-TO-FLOW OPERATION

Setting Operator Input Parameters,

Continued

Max gas flow in Gal/min (liters/min)

Max gas flow is the maximum flow rate at which the flow input reaches full scale span.

To set the max gas flow, *figure 40*, press and release the **Select** key. The value entry will begin to flash when selected. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into the memory. Press the **Down Arrow** key to advance to the next parameter.

The **low flow shut off setting**, allows a preset point in a percentage of max gas flow desired to the N-300 to stop injecting odorant. This allows the controller to sense low flow conditions where the operation is not desired. This setting will override the max time / stroke setting parameter. When flow again increases above the preset point the N-300 resumes operation.

To set the low flow shut off, *figure 41*, press and release the **Select** key. The value entry will begin to flash when selected. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into the memory. Press the **Down Arrow** key to advance to the next parameter.

The **flow (no signal) input setting**, is the predetermined percentage of max gas flow that the operator would like the controller to default to in the event that the actual flow input signal is lost.

Note: the **Flow (no signal) input** functions will only be active with analog input signals 1-5 VDC and 4-20 mA.

To set the flow (no signal) input, *figure 42*, press and release the **Select** key. The value entry will begin to flash when selected. Use the **Up Arrow** key to increase




Figure 40




Figure 41




Figure 42



SECTION 5: PROGRAMMING FOR PROPORTIONAL-TO-FLOW OPERATION


the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into the memory. Press the **Down Arrow** key to advance to the next parameter.

The maximum time/stroke setting, is the maximum time between strokes, when a stroke time is actually calculated, desired regardless of the time calculated by the controller. *This feature is not active under low-flow or no-flow conditions.*

To set the maximum time/stroke, *figure 43*, press and release the **Select** key. The value entry will begin to flash when selected. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into memory. Press the **Down Arrow** key to advance to the next parameter.

The odorant output setting, controls the scaling of the odorant output relay in lbs/pulse (*kg/pulse*). This indicates how much odorant has been injected with each pulse of the output relay located **TB1**, terminals **#19** and **#20**, *refer to the Wiring Control Document on page 116 in Appendix D.*

To set the odorant output, *figure 44*, press and release the **Select** key. The value entry will begin to flash when selected. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into memory. Press the **Down Arrow** key to advance to the next parameter.



SECTION 5: PROGRAMMING FOR PROPORTIONAL-TO-FLOW OPERATION

Setting Operator Input Parameters,

Continued

Odorant Tank

Optional Set-up: Functional ONLY if a complete YZ Skid Mounted Tank System is supplied.



1. **Disabled:** no level monitoring, 0% = disabled, both Low & High settings must be disabled.
2. **Enabled:** 0-100% level monitoring with two alarms that may be triggered from this level reading, a High Tank Level Tank Alarm, and a Low Tank Level Tank Alarm.

To set the alarm level points, *figure 45*, press and release the **Select** key. The Low Level value will begin to flash when chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. This alarm should typically be set between 5% and 25%. When a new value has been chosen, press the **Enter** key to store the new Low Level Alarm setting into memory. The entered value will stop flashing when it has been loaded into memory, the High Level value will begin to flash. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the desired value. This alarm should typically be set at less than 80%. When a new value has been chosen, press the **Enter** key to store the new High Level Alarm setting into memory. Press the **Down Arrow** key to advance to the next menu.

Expansion Tank Pressure Monitoring

Typical expansion tank pressure is approximately 25 psi (1.72 Bar). There are two alarms that can be triggered, a High Pressure Expansion Tank Alarm, and a Low Pressure Expansion Tank Alarm, *figure 46*

1. **Disabled:** no expansion tank pressure monitoring, 0% = disabled, both Low & High settings must be disabled. Normal operation should have this function enabled.
2. **Enabled:** Low Level should typically be set @ 23 psi (1.58 Bar), but is adjustable from 0 psi (0 Bar) up to the high level set point. High Level should typically be set @ 27 psi (1.86 Bar), but is adjustable from 0 psi (0 Bar) up to 99 psi (6.82 Bar).



SECTION 5: PROGRAMMING FOR PROPORTIONAL-TO-FLOW OPERATION

To set the alarm level points, *figure 47*, press and release the **Select** key. The Low Pressure value will begin to flash when chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new Low Pressure setting into memory. The entered value will stop flashing when it has been loaded into memory. Next the High Pressure value will begin to flash. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new High Pressure setting into memory. Press the **Down Arrow** key to advance to the next menu.




Figure 47

Odorant Inlet Pressure Monitoring

For the fill valve to function correctly a pressure differential between the Bulk Odorant Storage Tank and the Expansion Tank, must be maintained. This differential should never be less than 5 psi (.35 Bar) and typically not more than 10 psi (.69 Bar). There are two alarms that may be triggered from the Odorant Inlet Pressure reading, a High Odorant Inlet Alarm, and a Low Odorant Inlet Alarm.

To set the alarm level points, *figure 48*, press and release the **Select** key. The Odor Inlet Low value will begin to flash when chosen. Nominal low pressure in the Odorant Storage Tank is 30 psi (2.07 Bar). Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new Odor Inlet Low setting into memory. The entered value will stop flashing when it has been loaded into memory. Next the Odor Inlet High value will begin to flash. Nominal high pressure in the Odorant Storage Tank is 35 psi (2.41 Bar). Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new Odor Inlet High setting into memory. Press the **Down Arrow** key to advance to the next menu.




Figure 48

SECTION 5: PROGRAMMING FOR PROPORTIONAL-TO-FLOW OPERATION

Setting Operator Input Parameters,

Continued

Alarm to Relay Delay

Is a programmable time that can be entered to allow for a period of time to occur between the initial issuance of an alarm and the actual remote reporting of the alarm via the alarm relay output.

1. 0 = No Relay Contact Delay
2. 1 - 240 = Number of Minutes Delay
3. > 240 = Disabled, No Alarm Relay Contact will occur

To set the alarm delay time, *figure 49*, press and release the **Select** key. The Alarm to Delay value will begin to flash when chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the value.

Alarm to Call Out Delay

Is a programmable time that can be entered to allow for a period of time to occur between the initial issuance of an alarm and the actual automatic call out function via a modem or Modbus communication port.




1. 0 = No Alarm Call Out Delay
2. 1 - 240 = Number of Minutes Delay
3. > 240 = Disabled, No Alarm Call Out will occur

To set the alarm to call out delay time, *figure 50*, press and release the **Select** key. The Alarm to Callout Delay value will begin to flash when chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the value.

MODBUS Address

In Modbus Protocol, each piece of equipment that will be polled for information must be assigned a Slave I.D. address, to allow the SCADA or other Host device to properly address the device to be polled for information. This parameter is to program the odorizer's Modbus address. Any address from 1-247 may be programmed. If 0 is programmed this function will be disabled, *figure 51*.

Note: the Modbus address is also used as the Sentry4 I.D.



SECTION 5: PROGRAMMING FOR PROPORTIONAL-TO-FLOW OPERATION

MODBUS Parameters

(Not required unless MODBUS is utilized)

There are 4 items of information that may be entered on this screen. They are baud, parity, framing mode, comm port designation, *figure 52*.

- 1st press the **Enter / Select** key and the baud rate window will begin to flash. Next use the **Up Arrow** or **Down Arrow** key to increment the value to the required baud rate of your Modbus system. Available baud rates are 1200, 2400, 4800, and 9600.
- Next press the **Enter / Select** key and the parity window will begin to flash. Next use the **Up Arrow** or **Down Arrow** key to increment the value to the required parity of your Modbus system. Parity options are odd, even, and none.
- The 3rd pressing of the **Enter / Select** key will bring you to the framing mode window will begin to flash. Next use the **Up Arrow** or **Down Arrow** key to increment the value to the required framing mode of your Modbus system. Available options are: RTU or ASCII.
- The final time you press the **Enter / Select** key, the comm port selection can be made. The N-300 has two comm ports. Use the **Up Arrow** or **Down Arrow** key to increment the value to select one of three options:




Figure 52

MODBUS Parameters

- .. No Comm Port is used for Modbus;
ONLY Comm 2 is available for Sentry4
- 1. Comm 1 will be used for Modbus; and
Comm 2 is available for Sentry4.
- 12 Both Comm 1 & Comm 2 will be used for Modbus;
NO Comm is available for Sentry4.

Conclusion

This concludes programming the N-300 controller in Proportional-to-Flow Mode. If this NJEX System is the only unit that will be initialized at this time, [Section 7, page 39, Calibrating Signal Inputs](#), will contain the next appropriate information on the NJEX 7300 based on Proportional-to-Flow Mode operation. If other NJEX units will be operating in Proportional-to-Time Mode then proceed to the following Section 6.

SECTION 6: PROGRAMMING FOR PROPORTIONAL-TO-TIME OPERATION

Setting Operator Input Parameters

Choose **Set** from the main menu, *figure 53*.

Choose **Par** from the set selection menu, *figure 54*.

Choose **Time** from the set parameters menu, *figure 55*.

Choose **Set** from the proportional-to-time menu, *figure 56*.

Pump displacement in cc/stroke

To set the pump displacement, *figure 57*, press and release the **Select** key. The value entry will begin to flash when chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into memory. Press the **Down Arrow** key to advance to the next parameter.

Odorant density in lbs/gallon (g/cc.) @ 60°F


To set the odorant density, *figure 58*, press and release the **Select** key. The value entry will begin to flash when selected. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into memory. Press the **Down Arrow** key to advance to the next parameter.

Time interval between strokes of the pump in xx.xx minutes/stroke:

1. 0.00 minutes = proportional-to-time disabled.
2. 0.02 to 99.99 minutes = proportional-to-time enabled.

To set the time/strokes, *figure 59*, press and release the **Select** key. The value entry will begin to flash when chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value.

*designates optional key function



SECTION 6: PROGRAMMING FOR PROPORTIONAL-TO-TIME OPERATION

Setting Operator Input Parameters,

Continued

When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into memory. Press the **Down Arrow** key to advance to the next parameter.

The Odorant Output Setting

This controls the scaling of the odorant output relay in lbs/pulse. This indicates how much odorant has been injected with each pulse of the output relay located **TB1**, terminals **#19** and **#20**, refer to the *Wiring Control Document on page 116 in Appendix D*.

To set the odorant output, figure 60, press and release the **Select** key. The value entry will begin to flash when selected. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into memory. Press the **Down Arrow** key to advance to the next parameter.

Odorant Tank

Optional Setup Note: This parameter functions only if a complete YZ Skid Mounted Tank System is supplied.

1. **Disabled:** no level monitoring, 0% = disabled, both Low & High settings must be disabled.
2. **Enabled:** 0-100% level monitoring with two alarms that may be triggered from this level reading, a High Tank Level Tank Alarm, and a Low Tank Level Tank Alarm.

To set the alarm level points, figure 61, press and release the **Select** key. The Low Level value will begin to flash when chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. This alarm should typically be set between 5% and 25%. When a new value has been chosen, press the **Enter** key to store the new Low Level Alarm setting into memory. The entered value will stop




Figure 60




Figure 61

SECTION 6: PROGRAMMING FOR PROPORTIONAL-TO-TIME OPERATION

flashing when it has been loaded into memory, the High Level value will begin to flash. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the desired value. This alarm should typically be set at less than 80%. When a new value has been chosen, press the **Enter** key to store the new High Level Alarm setting into memory. Press the **Down Arrow** key to advance to the next menu.

Expansion Tank Pressure Monitoring

The expansion tank pressure should typically remain at approximately 25 psi (1.72 Bar). There are two alarms that can be triggered a High Pressure Expansion Tank Alarm, and a Low Pressure Expansion Tank Alarm.

1. **Disabled:** no expansion tank pressure monitoring, 0 = disabled, Both Low & High settings must be disabled. Normal operation should have this function enabled.
2. **Enabled:** Low Level should typically be set @ 23 psi (1.58 Bar), but is adjustable from 0 psi (0 Bar) up to the high level set point. High Level should typically be set @ 27 psi (1.86 Bar), but is adjustable from 0 psi (0 Bar) up to 99 psi (6.82 Bar).

To set the alarm level points, figure 62, press and release the **Select** key. The Low Pressure value will begin to flash when chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new Low Pressure setting into memory. The entered value will stop flashing when it has been loaded into memory and the High Pressure value will begin to flash. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new High Pressure setting into memory. Press the **Down Arrow** key to advance to the next menu.

Odorant Inlet Pressure Monitoring

In order for the fill valve to function correctly a pressure differential between the Bulk Odorant Storage Tank and the Expansion Tank, must be maintained. This differential should never be less than 5 psi (.35 Bar) and typically not more than 10 psi (.69 Bar). There are two alarms that can be triggered from the Odorant Inlet Pressure reading, a High Odorant Inlet Alarm, and a Low Odorant Inlet Alarm, figure 63.




Figure 62




Figure 63



SECTION 6: PROGRAMMING FOR PROPORTIONAL-TO-TIME OPERATION

Setting Operator Input Parameters,

Continued

To set the alarm level points, *figure 64*, press and release the **Select** key. The Odorant Inlet Low value will begin to flash when chosen. Nominal low pressure in the Odorant Storage Tank is 30 psi (2.07 Bar). Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new Odorant Inlet Low setting into memory. The entered value will stop flashing when it has been loaded into memory and the Odorant Inlet High value will begin to flash. Nominal high pressure in the Odorant Storage Tank is 35 psi (2.41 Bar). Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new Odorant Inlet High setting into memory. Press the **Down Arrow** key to advance to the next menu.

Alarm to Relay Delay

Is a programmable time that can be entered to allow for a period of time to occur between the initial issuance of an alarm and the actual remote reporting of the alarm via the alarm relay output.

1. 0 = No Relay Contact Delay
2. 1 - 240 = Number of Minutes Delay
3. > 240 = Disabled, No Alarm Relay Contact will occur

To set the alarm delay time, *figure 65*, press and release the **Select** key. The Alarm to Delay value will begin to flash when chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the value.

Alarm to Call Out Delay

Is a programmable time that can be entered to allow for a period of time to occur between the initial issuance of an alarm and the actual automatic call out function via a modem or Modbus communication port.

1. 0 = No Alarm Call Out Delay
2. 1 - 240 = Number of Minutes Delay
3. > 240 = Disabled, No Alarm Call Out will occur




Figure 64








Figure 65



SECTION 6: PROGRAMMING FOR PROPORTIONAL-TO-TIME OPERATION

To set the alarm to call out delay time, *figure 66*, press and release the **Select** key. The Alarm to Callout Dly value will begin to flash when chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the value.

MODBUS Address

In Modbus Protocol, each piece of equipment that will be polled for information must be assigned a Slave I.D. address, to allow the SCADA or other Host device to properly address the device to be polled for information. This parameter is to program the odorizer's Modbus address. Any address from 1-247 may be programmed. If 0 is programmed this function will be disabled, *figure 67*.

Note: the Modbus address is also used as the Sentry4 I.D.

MODBUS Parameters

(Not required unless MODBUS is utilized)

There are 4 items of information that may be entered on this screen. They are baud, parity, framing mode, comm port designation, *figure 68*.

- 1st press the **Enter / Select** key and the baud rate window will begin to flash. Next use the **Up Arrow** or **Down Arrow** key to increment the value to the required baud rate of your Modbus system. Available baud rates are 1200, 2400, 4800, and 9600.
- Next press the **Enter / Select** key and the parity window will begin to flash. Next use the **Up Arrow** or **Down Arrow** key to increment the value to the required parity of your Modbus system. Parity options are odd, even, and none.
- The 3rd pressing of the **Enter / Select** key will bring you to the framing mode window will begin to flash. Next use the **Up Arrow** or **Down Arrow** key to increment the value to the required framing mode of your Modbus system. Available options are: RTU or ASCII.
- The final time you press the **Enter / Select** key, the comm port selection can be made. The N-300 has two comm ports. Use the **Up Arrow** or **Down Arrow** key to increment the value to select one of three options:




Figure 66




Figure 67





Figure 68



SECTION 6: PROGRAMMING FOR PROPORTIONAL-TO-TIME OPERATION

Setting Operator Input Parameters,

Continued

MODBUS Parameters, *Continued*

- .. No Comm Port is used for Modbus;
ONLY Comm 2 is available for Sentry4
- 1. Comm 1 will be used for Modbus; and
Comm 2 is available for Sentry4.
- 12 Both Comm 1 & Comm 2 will be used for Modbus;
NO Comm is available for Sentry4.

Conclusion

This concludes programming the N-300 controller in Proportional-to-Time Mode. If the NJEX 8300 System is the only unit that will be initialized at this time the following Section 7, Calibrating Signal Inputs will contain the next appropriate information based on Proportional-to-Time Mode operation.

SECTION 7: CALIBRATING SIGNAL INPUTS

Analog Flow Input Calibration, 1-5 VDC / 4-20 mA

IMPORTANT:

Many factors effect the signal between the signal source and the NJEX System. Elements of the signal electrical system such as the gauge and length of the wire, isolation barrier, grounding, transient voltages, and the condition of the signal generated by the flow device can effect the signal and how that signal is received by the NJEX System. To truly calibrate the NJEX System to the signal, use only the flow equipment that will be part of the odorization system such as; a flow computer, RTU, PLC, pulse index drive, or differential pressure transducer.

Choose ***Set** in the main menu, *figure 69*.

Choose ***Cal** in the set selection menu, *figure 70*.

Choose ***Inputs** in the calibration set menu, *figure 71*.

Choose ***Flow** in the calibration selection menu, *figure 72*.

Choose ***Ang** in the flow input type menu, for analog voltage or current inputs, i.e., 1-5VDC or 4-20mA, *figure 73*.


Choose ***Lin** for input signals that are linear with respect to flow i.e., flow computers, RTU's, etc, *figure 74*.

-OR-

Choose ***NonLin** for input signals that are non-linear with respect to flow i.e., differential pressure transmitters, etc., *figure 75*.

Choose ***Zero** to calibrate the zero set point, *figure 75*.

Zero Adjustment, *figure 76*, is used to calibrate the N-300 controller for 0% of the metered flow in the pipeline. The N-300 is factory calibrated for 0% of flow to directly correspond to 1.00 VDC (4.0 mA) at the flow input terminal board **TB1** terminals **#2** and **#3**, refer to the *Wiring Control Document* on page 116 in Appendix D.



SECTION 7: CALIBRATING SIGNAL INPUTS

Analog Flow Input Calibration, 1-5 VDC / 4-20 mA, *Continued*

To calibrate the zero set point, *figure 77*, apply 1.00 VDC (4.0 mA) to the TB1 terminal #2 (+ positive signal input) and terminal #3 (- negative signal input). If a Differential Pressure Transducer – DPT is used, output from the transmitter should be 1.00 VDC (4.0mA) at 0 inches of water column differential (0" w.c.).

1. Press & release the ***Read** key and the voltage present at the input terminals will be shown flashing in the display.
2. Press & release the ***Accept** key to load the zero point into the memory. This value will stop flashing when this is completed, *figure 78*.



Note: if an error message appears, *figure 79*, the voltage at the input terminal is outside of the calibration range of .6V -1.4VDC (2.4 mA - 5.6 mA).

Choose Span to calibrate the full span set point, *figure 80*, the span adjustment is used to calibrate the N-300 controller for 100% of metered flow in the pipeline. The N-300 is factory calibrated for 100% of flow to directly correspond to 5.00 VDC (20 mA) at the flow input terminal board TB1 terminals #2 and #3, *refer to the Wiring Control Document on page 116 in Appendix D*.

To calibrate the span set point, apply 5.00 VDC (20 mA) to TB1 terminal #2 (+ positive signal input) and terminal #3 (- negative signal input). If a DPT is used, output from the transmitter should be 5.00 VDC (20 mA) at maximum range of the meter, for example 5.00 VDC (20 mA) at 100 inches of water column differential (100" w.c.).

1. Press & release the ***Read** key and the voltage present at the input terminals will be shown flashing in the display, *figure 81*.
2. Press & release the ***Accept** key to load the span setting into the memory. This value will stop flashing when this is completed, *figure 82*.

Note: if an error message appears, *figure 83*, the voltage at the input terminal is outside of the calibration range of 3.0V-5.5VDC (12 mA - 22 mA).



SECTION 7: CALIBRATING SIGNAL INPUTS

Expansion Tank Pressure Transmitter Zero Calibration

Note: the N-300 should be in the stopped mode when performing the following calibrations.

Choose ***Set** in the main menu, *figure 84*.

Choose ***Cal** in the set selection menu, *figure 85*.

Choose ***Inputs** in the calibration set menu, *figure 86*.

Choose ***Pres** in the calibration menu, *figure 87*.

Choose ***XTank** in the Calibrate Pressure menu. The transmitter voltage is 1-5VDC. The only field calibration is the zero reference, which can be set in this display, *figure 88*.


Zero Adjustment, is used to calibrate the N-300 controller to a zero pressure reference point. The transmitter is factory calibrated for the span value referenced to a specific pressure above this set point.

To calibrate the zero set point, remove all pressure from the expansion tank by venting the expansion tank pressure via valve V-5. The output from the transmitter should be 1.00 VDC.

1. Press & release the ***Read** key, *figure 89*, and the actual voltage present from the transmitter will be shown flashing in the display.
2. Press & release the ***Accept** key, *figure 90*, to load the zero point into the memory. This value will stop flashing when this is accomplished.

Note: if an error message appears, *figure 91*, the voltage is outside of the calibration range of .6V-1.4VDC.

3. If the odorant inlet transmitter requires zero calibration at this time, proceed to the [Odorant Inlet Pressure Transducer Zero Calibration in the next sub-section](#) prior to pressurizing the expansion tank.
- 3a. **Important**, If the odorant inlet transmitter is not to be zero calibrated at this time, close **V5** and adjust the expansion tank pressure back to 25 psi (1.72 Bar), by manually opening valve **V4** until the proper pressure is obtained, then close **V4**.



SECTION 7: CALIBRATING SIGNAL INPUTS

Odorant Inlet Pressure Transmitter Zero Calibration

Note: the N-300 should be in the stopped mode when performing the following calibrations.

Choose ***Set** in the main menu, *figure 92*.

Choose ***Cal** in the set selection menu, *figure 93*.

Choose ***Inputs** in the calibration set menu, *figure 94*.


Choose ***Pres** in the calibration section menu, *figure 95*.

Prior to performing the odorant inlet transmitter calibration, remove all pressure from the odorant inlet by:

- Verifying that the verometer is not at the full level.
- Close **V8**.
- Close the Odorant Supply Valve **V17**, located at the Bulk Odorant Filter inside of the enclosure.
- If the expansion tank has pressure in it, remove it by venting the expansion tank pressure via **V5**.
- Open **V3**.
- In the display screen tell the verometer to fill.
- This should bring the transmitter pressure to zero.

Choose ***Odor** in the Calibrate Pressure menu, *figure 96*. The transmitter voltage is 1-5VDC. The only field calibration is the zero reference, which may be set here.

Zero Adjustment, *figure 97*, is used to calibrate the N-300 controller to a zero pressure reference point. The transmitter is factory calibrated for the span value referenced to a specific pressure above this set point.




SECTION 7: CALIBRATING SIGNAL INPUTS

To calibrate the zero set point, The output from the transmitter should be 1.00 VDC.

1. Press & release the ***Read** key and the actual voltage present from the transmitter will be shown flashing in the display, *figure 98*.
2. Press & release the ***Accept** key to load the zero point into the memory. This value will stop flashing when this is accomplished, *figure 99*.

Note: if an error message appears, *figure 100*, the voltage is outside of the calibration range of .6V-1.4VDC.

Return all valves and pressures to normal settings before restarting the system.



SECTION 7: CALIBRATING SIGNAL INPUTS

Pulse Flow Input Calibration, Dry Contact & Voltage Pulse

Choose ***Set** from the main menu, *figure 101*.

Choose ***Cal** from the set select menu, *figure 102*

Choose ***Inputs** from the calibration set menu, *figure 103*.

Choose ***Flow** from the flow input type menu, *figure 104*.

Choose ***Pulse** from the flow input type menu for digital pulse inputs, i.e. dry contact, voltage pulse, etc, *figure 105*.

Calculate Pulse Input Frequency

Using *example 1 or 2 on page 45* a technician can calculate the Pulse Input Frequency required to effectively calibrate the NJEX System.

The pulse input frequency must be between 10 -1000 pulses per second (Hz). Choose PPS, *figure 106*.

Span Adjustment, is used to calibrate the N-300 controller for 100% of metered flow at maximum input frequency, i.e. 50 pulses per second at maximum gas flow.

To set the span adjustment, *figure 107*, press and release the **Select** key. The value entry will begin to flash when it is chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen press the **Enter** key to store the value into memory. The value entry will stop flashing when loaded into the memory.

Figure 101
pmp bat vmtr sig tnk
PropFlow Idle
*Strt *Dsp *Set

Figure 102
pmp bat vmtr sig tnk
Set Selection
*Par *Cal *Esc

Figure 103
pmp bat vmtr sig tnk
Calibration Set
*Clk *Inputs *Esc

Figure 104
pmp bat vmtr sig tnk
Calibration
*Flow *Pres *Esc

Figure 105
pmp bat vmtr sig tnk
Flow Input Type
*Ang *Pulse *Esc

Figure 106
pmp bat vmtr sig tnk
Pulse Input
*PPS *PPMV *Esc

Figure 107
pmp bat vmtr sig tnk
Span Adjustment
50 Pul/sec *Esc

SECTION 7: CALIBRATING SIGNAL INPUTS

Figure 109

Calculation for Determining the Span Frequency

$$\frac{A \times B}{60} = C$$

A = Number of pulses per gallon (liter) of LPG as determined by the flow metering device.
B = Maximum LPG flow rate in gallons (liters) per minute.
C = Pulse Input Span frequency in pulses per second.

Example 1:
$$\frac{30 \text{ Pulses/Gal.} \times 100 \text{ Gal./min.}}{60 \text{ sec/min.}} = 50 \text{ PPS}$$

Example 2:
$$\frac{10 \text{ Pulses/Liter} \times 300 \text{ Liter/min.}}{60 \text{ sec/min.}} = 50 \text{ PPS}$$

Pulses/Metered Vol. Adjustment, is used to calibrate the number of pulses that the N-300 will count to determine that a particular metered volume (gallon or liter), of LPG has flowed. This value will be determined by the Flow Metering Device. The N-300 display will then display a count up to the predetermined number of gallons or liters required for the pump to stroke, as determined by the rest of the parameters, and then the pump will stroke, and the process will recycle again.

To set the PPMV value, figure 108, press and release the **Select** key. The value entry will begin to flash when it is chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen press the **Enter** key to store the value into memory. The value entry will stop flashing when loaded into the memory.




Figure 108

SECTION 8: WORKING WITH THE N-300 SYSTEM DISPLAYS

Display Functionality

Characters in the display will change to indicate the varying conditions of NJEX System operation. As discussed in the [Introduction, Section 1](#) and in [Section 4 System Control and Electronics](#), the display interacts with the keyboard to access the different levels or areas in the programming function of the N-300 controller.

That extra-functionality in the display plays a further roll in the case of Alarm Indicators and Non-Alarm Indicators.

With the activation of an alarm indicator, the alarm function of the NJEX System turns into an **UPPER CASE** character set. For example, **pmp** – pump, becomes **PMP** indicating that an alarm is active, [figure 110](#).

To indicate the specific activity of the alarm, the N-300 will flash a description, and solid black box – ■, in the top line of the display, [figure 111](#).


The character change indicating that a monitored condition is in alarm status is further accompanied by a flashing LED light. Any time an alarm is simulated or real, a bright red LED light will flash in the alarm light indicator, located just below the **Select / Enter** key. Any time a non-alarm is simulated or real, a bright green LED light will flash in the indicator light indicator, located just below the **Down Arrow** key, [figure 112](#).

Further discussion of the display functions can be found under the [Setting & Testing Alarms, Section 9 beginning with page 53](#).



```
PMP bat vmtr sig tnk
PropFlow Idle
*Strt *Dsp *Set
```

Figure 110



```
■ Pump Failure
pmp bat vmtr sig tnk
PropFlow Idle
*Strt *Dsp *Set
```

Figure 111



Figure 112

SECTION 8: WORKING WITH THE N-300 SYSTEM DISPLAYS

To View Real Time Displays

Choose ***Dsp** in the main menu, *figure 113*.

Strokes signaled are the number of pump strokes signaled by the N-300 controller are shown in this display, *figure 114*.

To reset strokes signaled, press the ***Rst** key and follow instructions, *figures 115-115a*.

Odorant Injected, *figure 116*, is the cumulative total of odorant injected in lbs. (kg) is shown in this display.

To reset lbs. (kg) injected, *figures 117*, press the ***Rst** key and follow instructions, *figures 117-117a*.

Note: Pounds – lbs. (kg) injected will increment only when a valid pump displacement has been calculated. Pounds – lbs. (kg) injected will not increment during fill valve alarm condition.

Pump Displacement


This display illustrates the last value, in cc / stroke, calculated by the N-300 with volume data supplied by the Verometer, *figure 118*.

Note: an asterisk "*" following the value illustrated in the display designates that a value has not been calculated at present, and the previously set or programmed pump displacement will be displayed, refer to the *Programming Sections 5 & 6, beginning on pages 25 & 33*.

Pump Alarms

There are three conditions that will result in a pump alarm indication.

- **Over Pumping**, *figure 119*, the calculated pump displacement exceeds the set pump displacement by 30%.
- **Under Pumping**, *figure 120*, the calculated pump displacement is less than the set pump displacement by 30%.
- **Pump Failure**, *figure 121*, the calculated pump displacement is less than the set pump displacement by 75%. For example, low displacement due to an empty meter, the pump cannot inject odorant when required if the meter which supplies the odorant to the pump is empty.



SECTION 8: WORKING WITH THE N-300 SYSTEM DISPLAYS

Meter Level – Verometer

This display illustrates the Verometer level in percent. As odorant is pumped out of the Verometer, the N-300 controller will automatically refill the meter when the meter level reaches 0%, *figure 122*.

To manually fill the Verometer, *figure 122a*, press the *Fill key and follow the instructions. The following represent There conditions that will result in a meter alarm indication.


Meter Alarms – Verometer

These are of the displays containing 12 alarm and non-alarm indicators, *figures 123-134*, to provide information on Verometer operation.

- **Vmtr-Cable**, the Verometer cable is not communicating to the controller, *figure 123*.
- **No Fill**, the meter has failed to fill, *figure 124*.
 - a. The meter has failed to fill to 100% within six minutes
 - b. The fill was inhibited due to leakage detection
- **Slow Fill**, the meter has failed to fill within three minutes, *figure 125*.
- **Fill Valve**, the fill valve has failed to close, *figure 126*.
- **OdorInlet-Cable**, inlet fill valve pressure transmitter is not communicating with the controller, *figure 127*.
- **OdorInlet Lo**, the required inlet pressure of odorant is lower than allowed, *figure 128*.
- **OdorInlet Hi**, the required inlet pressure of odorant is higher than allowed, *figure 129*.
- **XTank-Cable**, the expansion tank cable outlet fill valve pressure transmitter is not communicating with the controller, *figure 130*.
- **XTank Low**, the expansion tank pressure has fallen below the programmed low-pressure setting, *figure 131*.
- **XTank Hi**, the expansion tank pressure has risen above the programmed high-pressure setting, *figure 132*.

Meter Indicators, non-alarm

- **Over Fill**, the meter has been filled in excess of 112%.
 - a. The Verometer Fill Rate is too fast, in excess of 10 seconds, *figure 133*.
 - b. The verometer Fill Valve has failed to close.
- **Fill Rate**, the meter has filled too fast, in excess of 10 seconds, *figure 134*.



SECTION 8: WORKING WITH THE N-300 SYSTEM DISPLAYS

To View Real-Time Displays,

Continued

Expansion Tank

This display illustrates the expansion tank pressure, *figure 135*.

Odorant Inlet

Displays the pressure of the bulk odorant storage tank via the pressure transmitter located at the fill rate control valve, *figure 136*.

Battery Voltage

The battery voltage is shown in this display, *figure 137*.

- **Battery Alarm**, a low battery is when the voltage is less than 11.0 VDC, *figure 137a*.

Flow Input


This display, *figure 138*, illustrates the flow rate as a percentage of the maximum gas flow. The following represent the alarms that are associated with this area of the N-300 controller.

Flow Input Alarms

- **Loss of Signal**, *figure 139*, the flow signal is less than .5 VDC, for the analog input only.
- **Over Flow**, *figure 140* the flow input has exceeded 125% of the maximum gas flow.

Flow Input Indicators, non-alarm

- **Low Flow**, *figure 141*, the flow input has fallen below the low flow shut off set point [refer to Section 5, Programming for Proportional-to-Flow page 26](#).
- **Over Flow**, *figure 142*, the flow input has exceeded 110% of the maximum gas flow, but is still less than 125% of maximum gas flow.
- **No Flow**, *figure 143*, is presently indicated by the flow signal.



SECTION 8: WORKING WITH THE N-300 SYSTEM DISPLAYS

Note: the flow input display is active in the Proportional-to-Flow mode only.

Tank Level

This display, *figure 145*, illustrates the odorant supply level in the bulk odorant storage tank.

Note: The tank level indication is active only when there is a YZ supplied tank.





Tank Level Alarm

- **Low Level**, *figure 146*, the odorant supply tank level has fallen below the low level set point, *refer to Programming for Proportional-to-Flow and Programming for Proportional-to-Time Sections 5 & 6, pages 28 & 34.*
- **High Level**, *figure 147*, the odorant supply tank level rises above the high level set point, *refer to Programming for Proportional-to-Flow and Programming for Proportional-to-Time Sections 5 & 6, pages 28 & 34.*

Note: the tank level display is only active when it is not disabled (>00% = Low & High Level).

Odorant Temperature

This display, *figure 148*, illustrates the odorant temperature, time and date.



SECTION 9: SETTING & TESTING ALARMS

Setting Alarm Out Status

Alarm outputs can be configured to enable or disable which alarms deactivate the alarm output contact located on **TB1**, terminals **#17** and **#18**, refer to the *Wiring Control Document* on page 116 in Appendix D. Only an entire alarm area may be disabled for example, pump alarms.

CAUTION:

Alarm outputs are critical for monitoring system performance. Outputs should not be disabled except for testing/troubleshooting.

Choose ***Set** in the main menu, figure 149.

Choose ***Par** – parameters in the Set Selection menu, figure 150.

Choose ***Flow** or ***Time** in the Set Parameters menu, figures 151.

Choose ***Alarm** from the Proportional-to-Time or Proportional-to-Flow menu, figure 152.

Choose ***Set** from the Alarm Out Status menu, figure 153.

To set the pump alarm status, figure 154, press and release the **Select** key. The entered value will flash when it is chosen. Use the **Down Arrow** or **Up Arrow** keys to change the setting. Press the **Enter** key to load the entry into memory. The display will stop flashing when the entered value is loaded into the memory. Press the **Down Arrow** key to advance to the next parameter.

To set the battery alarm status, figure 155, press and release the **Select** key. The entered value will begin to flash when chosen. Use the **Up Arrow** or **Down Arrow** keys to change the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into memory. Press the **Down Arrow** key to advance to the next parameter.




Figure 149




Figure 150




Figure 151




Figure 152




Figure 153




Figure 154




Figure 155



SECTION 9: SETTING & TESTING ALARMS

Setting Alarm Out Status, *Continued*


To set the **Verometer alarm status**, *figure 156*, press and release the **Select** key. The entered value will begin to flash when chosen. Use the **Up Arrow** or **Down Arrow** keys to change the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into memory. Press the **Down Arrow** key to advance to the next parameter.

To set the **Signal alarm status**, *figure 157*, press and release the **Select** key. The entered value will begin to flash when chosen. Use the **Up Arrow** or **Down Arrow** keys to change the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into memory. Press the **Down Arrow** key to advance to the next parameter.

Note: this alarm window option will only display if you have chosen the *Proportional-to-Flow* path.

Note: this option should only be active if your system was supplied with a *YZ skid mounted odorant storage tank*.

To set the **Tank alarm status**, *figure 158*, press and release the **Select** key. The entered value will begin to flash when chosen. Use the **Up Arrow** or **Down Arrow** keys to change the value. When a new value has been chosen, press the **Enter** key to store the new value into memory. The entered value will stop flashing when it has been loaded into memory. Press the **Down Arrow** key to advance to the next parameter.



SECTION 9: SETTING & TESTING ALARMS

Testing Alarm Out Status

Alarm outputs that have been disabled will deactivate the alarm output contact located on **TB1**, terminals **#17** and **#18**, refer to the [Wiring Control Document on page 116 in Appendix D](#). You may test the alarm output in general by choosing the **Alarm SwitchTest** option below, [figure 164-165](#), or you may choose to **Simulate** specific alarms as illustrated in this section as well.

Choose ***Set** in the main menu, [figure 159](#).

Choose ***Par** – parameters in the Set Selection menu, [figure 160](#).

Choose ***Flow** or ***Time** in the Set Parameters menu, [figure 161](#).


Choose ***Alarm** from the Proportional-to-Time or Flow menus, [figure 162](#).

Choose ***Test** from the Alarm Out Status menu, [figure 163](#).

Choose ***SW** in the Switch / Simulation menu, [figures 164](#).

To activate the Alarm Test Switch, [figures 165](#), press and release the **Select** key. The entered value will flash when it is chosen. Use the **Down Arrow** or **Up Arrow** keys to change the setting. **ON / Relay Open** indicates the alarm relay is in the test mode. **OFF / Relay Closed** indicates the relay is in the normal mode. Press the **Enter** key to load the entry into memory. When the unit is in the **Alarm Test Mode**, a bright red light will flash in the alarm light indicator located just below the **SELECT / ENTER** switch. The display will stop flashing when the entered value is loaded into the memory. Press the **Up Arrow** key to advance to return to the Switch / Simulation menu.

Choose ***Sim** in the Switch / Simulation menu. Any time an alarm is simulated or real, a bright red light will flash in the alarm light indicator located just below the **SELECT / ENTER** switch. Any time a Non-Alarm is simulated or real, a bright green light will flash in the indicator light indicator located just below the **Down Arrow** key.




SECTION 9: SETTING & TESTING ALARMS

Testing Alarm Out Status, *Continued*

To Simulate the pump alarm status, figures 166-169, press and release the **Select** key. The **pmp Alarm** indicator in the upper left area of the N-300 display will flash when it is selected. Use the **Down Arrow** or **Up Arrow** keys to simulate which type of pump alarm to activate. This will be shown by the solid block appearing next to **Over Pump**, **Under Pump**, or **Pump Failure** text at the top of the N-300 display, and the **PMP** indicator will be displayed in UPPER CASE letters, and will flash on and off. Press the **Enter** key to return to the simulation selection screen. The display will stop flashing. Press the **Down Arrow** key to advance to the next simulation option.

To Simulate the battery alarm status, figures 170-171, press and release the **Select** key. The **bat** alarm indicator in the upper left center area of the N-300 display will flash when it is selected. Use the **Down Arrow** or **Up Arrow** keys to simulate a **Low Battery** alarm. This will be shown by the solid block appearing next to **Low Battery** text at the top of the N-300 display, and the **BAT** indicator will now be displayed in UPPER CASE letters, and will flash on and off. Press the **Enter** key to return to the simulation selection screen. The display will stop flashing. Press the **Down Arrow** key to advance to the next simulation option.

To Simulate the verometer alarm status, figures 172-183, press and release the **Select** key. The **vmtr** alarm indicator in the upper center area of the N-300 display will flash when it is selected. Use the **Down Arrow** or **Up Arrow** keys to simulate which type of Verometer alarm to simulate. This will be shown by the solid block appearing next to **Odor Inlet-Cabl**, **Odor Inlet Lo**, **Odor Inlet Hi**, **XTank-Cable**, **XTank Low**, **XTank High**, **Fivalve-Fail**, **Leakage**, **Slow Fill**, **No Fill**, or **Vmtr-Cable**, text at the top of the N-300 display, and the **VMTR** indicator will now be displayed in UPPER CASE letters, and will flash on and off. Additionally, at this position two Verometer Indicators, **Overfill** and **Fillrate**, that are non-alarms may be simulated in the same manner. They will be indicated at the same location on the N-300 display, but will not have the solid block appearing next to them, and the **vmtr**




SECTION 9: SETTING & TESTING ALARMS

indicator will again be in the lower case, but will continue to flash off and on. Press the **Enter** key to return to the simulation selection screen. The display will stop flashing. Press the **Down Arrow** key to advance to the next simulation option.

To Simulate the Signal alarm status, figures 184-189, press and release the **Select** key. The **sig** alarm indicator in the upper left area of the N-300 display will flash when it is chosen. Use the **Down Arrow** or **Up Arrow** keys to simulate which type of signal alarm to simulate. This will be shown by the solid block appearing next to **Over Flow > 125%**, or **Loss of Signal** text at the top of the N-300 display, and the **SIG** indicator will now be displayed in UPPER CASE letters, and will flash on and off. Additionally at this position three signal Indicators, **OverFlow >110%**, **No Flow**, and **Low Flo Shtoff**, that are non-alarms may be simulated in the same manner. They will be indicated at the same location on the N-300 display, but will not have the solid block appearing next to them, and the **sig** indicator will again be in the lower case, but will continue to flash on and off. Press the **Enter** key to return to the simulation selection screen and the display will stop flashing. Press the **Down Arrow** key to advance to the next simulation option.

To simulate the Tank alarm status, figures 190-192, press and release the **Select** key. The **tnk** alarm indicator in the upper left area of the N-300 display will flash when it is chosen. Use the **Down Arrow** or **Up Arrow** keys to simulate which type of tank alarm to simulate. This will be shown by the solid block appearing next to **Odor Tank Low**, or **Odor Tank High** text at the top of the N-300 display, and the **TNK** indicator will now be displayed in UPPER CASE letters, and will flash on and off. Press the **Enter** key to return to the simulation selection screen. The display will stop flashing.



SECTION 9: SETTING & TESTING ALARMS

Setting The Clock

The internal clock in the N-300 should be maintained to reflect the current local time and date. When a system is first placed into service the clock should be set for local time and date. This clock is a 24 hour, military time, clock and therefore the hour of the day will be set between 00:00 and 23:59. It is important that this time and date be correct as data logged will be reflected from this clock setting. If daylight savings time, or other similar hour-shift adjustment, is observed, these changes should be made manually to the clock as they occur. Any change to the clock will be logged in the Sentry4 data file.

Choose ***Set** in the main menu, *figure 193*.

Choose ***Cal** in the set selection menu, *figure 194*.

Choose ***Clk** in the calibration selection menu, *figure 195*.

To set the Clock, *figure 196*, press and release the **Select** key. First, the numerical value for the **Month** will begin flashing when chosen. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new value has been chosen, press the **Enter** key to store the new **Month** into memory. The entered value will stop flashing when it has been loaded into memory, then the numerical **Day** of the month value will begin to flash. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new **Day** value has been chosen, press the **Enter** key to store the new **Day** into memory and the **Day of The Week** will begin to flash. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new **Day of the Week** has been chosen, press the **Enter** key to store the new **Day of the Week** into memory. Now the **Year** value will begin to flash. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new **Year** has been chosen, press the **Enter** key to store the new **Year** into memory. The last two settings will be for the **Hour** of the day and the minutes after the **Hour**. The **Hour** value will begin to flash. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the

Figure 193

```
pmp bat vmtr sig tnk
PropFlow      Idle
*Strt *Dsp *Set
```

Figure 194

```
pmp bat vmtr sig tnk
Set Selection
*Par  *Cal *Esc
```

Figure 195

```
pmp bat vmtr sig tnk
Calibration Set
*Clk  *Inputs *Esc
```

Figure 196

```
pmp bat vmtr sig tnk
Set Date and Time
12:07 07-12-Thu-2001
```

SECTION 9: SETTING & TESTING ALARMS

value. When a new **Hour** has been chosen, press the **Enter** key to store the new **Hour** into memory. Last the **Minutes** after the **Hour** will begin to flash. Use the **Up Arrow** key to increase the value and the **Down Arrow** key to decrease the value. When a new **Minute** value has been chosen, press the **Enter** key to store the new setting into memory. This concludes the Clock Setting Section. Press the **Up Arrow** key three times to return to the main menu.

SECTION 10: MECHANICAL SYSTEM

Overview

The 8300L mechanical system, figures 197, 198 and 199 are composed of the bulk odorant filter, fill valve, Verometer, 8000 pump, odorant discharge manifold, NJEX gas supply filter, solenoid manifold, pneumatic relay manifold, and the expansion tank. Individual components of the system are shown below and described in the following pages.

Mechanical Cabinet Cable Actuation Gas Regulator



Figure 197

Bulk Odorant Filter



Figure 198




Figure 199

SECTION 10: MECHANICAL SYSTEM

Odorant Inlet Manifold & Bulk Odorant Filter Assembly

The odorant inlet manifold & bulk odorant filter assembly, *figure 200*, is located adjacent to each pump / verometer assembly and performs the following functions:

- Provides the system's odorant supply connection by means of a 1/4" FNPT connection located on the back of the enclosure.
- Provides a pressure gage to show odorant supply pressure from storage tank.
- Provides an odorant supply isolation valve.
- Houses the first of two odorant filter systems within the 8300L System.
- Acts as the odorant return manifold during system purge operations, *refer to Conducting a Forward Purge in Section 12, page 74.*

In the event that the internal filter elements become dirty, a bulk odorant filter repair kit is available.

Fill Valve

The purpose of the fill valve is to control odorant flow into the Verometer, *figure 201*. The fill valve is opened when a pneumatic signal from the solenoid valve manifold depresses the fill valve diaphragm. The valve is closed when the pneumatic signal is removed and the fill valve spring returns the check valve wafer to its seat. The transfer of odorant from the bulk storage tank to the Verometer, when this valve is activated, is dependant on an adequate pressure differential between the bulk storage tank and the Verometer, with the bulk storage tank retaining the higher of the two pressures. These pressures are monitored by two pressure transmitters mounted in the system. One transmitter monitors the incoming pressure from the bulk storage tank, while the other, mounted on the expansion tank, monitors the pressure in the verometer. A differential pressure range of 5 - 10 psi (.345 - .69 Bar) must be present, with the differential not exceeding either end of the range.

The threaded inlet connection to the fill valve allows access to the check valve wafer, return spring, and o-ring seal without disturbing the diaphragm and its seals.



Figure 200



Figure 201

SECTION 10: MECHANICAL SYSTEM

Verometer

The purpose of the Verometer, *figure 202*, is to act as an odorant meter, verifying the amount of injected odorant. The Verometer contains a level monitoring device allowing the N-300 controller to compare the actual amount of odorant injected to the displacement setting of the pump. The N-300 also controls filling the Verometer and activating the Verometer alarm functions based on input from the level monitoring device.

Odorant enters the Verometer from the fill valve. Odorant exits the Verometer by passing through a second filter element on its way to the pump. The filter element is held in place by the filter plug located at the bottom of the Verometer.

The upper portion of the Verometer, above the odorant fluid level, is connected to the expansion tank by stainless steel tubing and the odorant discharge manifold. The purposes for this configuration are:

1. The Verometer / expansion tank connection provides a closed loop system which prevents odorant escape into the atmosphere.
2. As the Verometer is filled, pressure builds within the closed Verometer / expansion tank system. The additional volume provided by the expansion tank prevents the accumulating pressure in the Verometer from equaling the blanket gas pressure in the odorant storage tank. This ensures an uninterrupted flow of odorant from the storage tank to the Verometer.



Figure 202

SECTION 10: MECHANICAL SYSTEM

Model 8000 Pump

The NJEX 8000 pump, *figure 203*, is a pneumatically actuated, positive displacement, reciprocating plunger pump. The 8000 is actuated with compressed air or pipeline gas at a pressure of 30 - 90 psi (2.07 - 6.21 Bar), refer to *Section 2, the System Flow Schematic, figure 4, on page 6*. The pump has an adjustable displacement of 6.0cc, 5.0cc, 4.0cc, 3.0cc, or 2.0cc. It achieves proportional-to-flow injection through adjustment of the stroke rate. The 8000 is rated for a maximum stroke rate of 30 strokes per minute.

Each time the pump strokes, the plunger displaces hydraulic fluid against the pump diaphragm, which in turn displaces odorant through the discharge check valve. The pump diaphragm acts as an isolation device between the hydraulic fluid and the odorant, minimizing the risk of odorant escape into the atmosphere. Each time the plunger returns, it completely removes itself from the plunger seal. This allows any air trapped in the hydraulic system to be vented.



Figure 203

Odorant Discharge Manifold

This manifold is located on the back wall of the mechanical enclosure, just to the left of the verometer and above the pump, *figure 204*. This manifold, located inside the enclosure, has three connections on the bottom of the manifold. The inlet connection in the center of the manifold is the pump discharge, the connection to the right is to the Verometer and the third connection to the left is to the purge bypass loop. These fittings are connected at factory to the appropriate component.

Three outlet ports for the odorant discharge manifold are located on the back of the manifold and extend through the enclosure wall. When facing the back of the enclosure from right to left, these ports are for the expansion tank drain, the pipeline connection, and the expansion tank pressure connection.



Figure 204

SECTION 10: MECHANICAL SYSTEM

Two valves located this manifold control the flow of the odorant blanket gas through the manifold. The valve located on the left, with the blue knob is the purge valve **V3**. The valve, with the red knob, is the bypass valve, **V2**. During normal operation, both valves are closed. The bypass valve is opened to empty the 8300L of odorant, *refer to Section 12, page 74, illustration 228* while the purge valve is opened as part of preparing the system for operation *refer to Section 12, page 80, illustration 231*.

An integral wafer check valve is built into the odorant discharge manifold. The wafer is located on top of the plug that is inserted in the bottom of the manifold. This check valve is located in the fluid path between the pump discharge connection and the pipeline connection port.

The gage located on top of this manifold displays the Expansion Tank pressure.

NJEX Gas Filter

A 25 micron coalescent filter is provided with each 8300L. This filter, *figure 205*, is installed on the back outside of the enclosure and should be connected to the regulated (*75 psi / 5.17 Bar*) actuation gas supply provided by the system operator. By conditioning the incoming actuation gas, a clean pneumatic supply will be provided to the solenoid valves. This will ensure a longer operational life for the pneumatic control system. If the actuation gas supply has a high water content and / or a low hydrocarbon dew point, additional filtration and heating of the actuation gas supply may be necessary. Bottled nitrogen can also be used as an alternate gas supply source if gas conditioning is a problem.



Figure 205

SECTION 10: MECHANICAL SYSTEM

Solenoid Valve & Pneumatic Relay Manifold

Two low power solenoid valves are mounted on this manifold, *figure 206*. The solenoid valve, **SV2** located on the left, actuates the fill valve, while the other solenoid valve, **SV1** located on the right, pilots the pump pneumatic relay valve.

One pneumatic relay valve is also mounted on this manifold. It is located just below the solenoid valves and serves to actuate the pump when it receives a pneumatic signal from the pilot relay discussed in the previous paragraph.

Supply and exhaust ports are located on the outside of the manifold to permit operator connections on the back of the system enclosure.

Additionally, there is located on this manifold, valve **V16** lower left with a black knob. **V16** is normally open, and is the supply gas isolation valve.




Figure 206

Expansion Tank

The expansion tank, *figure 207*, is mounted on the back of the enclosure and acts as a pressure source and buffer for the Verometer. As the Verometer is filled or emptied, blanket gas flows into or out of the expansion tank as required. Because of the relatively large difference in the volumes of the Verometer and the expansion tank, the fluctuation in operating pressure within this system is minimal.

Mounted on the expansion tank are: a relief valve, preset to 85 psi (5.86 Bar); an overflow protector/low pressure relief assembly mounted to valve (**V6** with a silver knob); a vent valve (**V5** with a green knob), a pressurizing valve (**V4** with a gold knob); and an expansion tank drain valve (**V14** with a silver knob), on the bottom of the tank.

Valve **V4** is normally closed, but is opened to charge the expansion tank with gas as required during system start up or purge process. Additionally, valve **V5** is normally closed, but is opened to vent the gas from the expansion tank for maintenance. Valve **V14** is normally closed, but can be opened as an optional step in the forward purge process to purge any liquid from the expansion tank that may have accumulated, and place it back into the bulk storage tank.



Figure 207

SECTION 11: SYSTEM OPERATION

Setting System Pressures and Valves

Before attempting to start the system, check for proper valve positions as indicated on the normal operation schematic on the enclosure door, and set all pressures accordingly, *figure 208*.

1. Adjust supply gas regulator to provide 75 psi (5.17 Bar) to the NJEX gas filter.
2. Temporarily open valve **V4** to fill the expansion tank to a pressure of 25 psi (1.72 Bar) then close **V4**.
3. Verify low pressure relief operation and adjust as necessary to maintain a specific pressure of 25psi (1.72 Bar).
4. Adjust the pump actuation regulator to the required pressure to inject into pipeline pressure as indicated on the normal operation schematic located on the enclosure door.
5. Adjust the blanket gas regulator for the bulk storage tank.
6. Check entire system for gas leaks and verify that the set pressures remain constant.



Figure 208

Low Pressure Relief Adjustment

The overflow protector, *figure 209*, incorporates a low pressure relief in the cap assembly for the purpose of maintaining the maximum expansion tank pressure at 25 psi (1.72 Bar).

To test and adjust follow these steps:

1. With valve **V6** open, slowly open valve **V4** until gas begins discharging at exhaust port of the overflow protector.
2. Close valve **V4** and see where pressure stabilizes which should be 25 psi (1.72 Bar).
3. If adjustment is needed:
 - a) First, loosen adjustment lock nut, located at the top of the overflow protector. To increase pressure in the tank, turn the adjustment screw in, or to the right. To lower pressure tank, turn the adjustment screw out, or to the left.
 - b) Tighten the lock nut.
 - c) Repeat until the desired pressure of 25 psi (1.72 Bar) is obtained as described in step 2 above.




Figure 209

SECTION 11: SYSTEM OPERATION

Starting The System

Turn the main power switch, located inside the N-300 enclosure, *figure 210*. To access the switch, pull out and upward on the lever located on the right side of the N-300 enclosure. On the circuit board inside the N-300 enclosure, the On / Off switch is located on the lower right side. Flip the switch up to turn the main power on.

Once the NJEX System is powered-up, the following menus will appear in the LCD screen on the N-300 controller, follow instructions provided.

- Observe the LCD screen to ensure the **Serial Number**, *figure 211* and **Model Type**, *figure 212* shown match the **Serial Number** and **Model Type** on the inside of the enclosure door.
- Verify **Verometer Calibration Number** matches the Verometer tag number located at the top of the Verometer assembly, *figure 213*.
- For future reference, record the **Version x.xx** number, *figure 214*, in the *For the Record form*, located in the *Appendix*, on page 113 of this manual.

IMPORTANT:

If the serial number, model type or the verometer tag number does not match the corresponding numbers featured on the N-300 controller consult the factory before proceeding further.

Press the **Down Arrow** key, *figure 215* four times to scroll the display menu to the **Meter Level** display, *figure 216*.

Press the **Select / Enter** key to choose the ***Fill** command, *figure 216*. The meter level window will then display the option ***No *Yes**, *figure 217*. Choose ***Yes** by pressing the **Down Arrow** key. The meter level display will show the Verometer level as the meter reservoir fills to 100%.

Note: initial filling may take 2-3 minutes. After initial fill, a fill cycle should take 45 seconds to 1 minute.




Figure 210




Figure 211



Figure 212



Figure 213




Figure 214




Figure 215




Figure 216




Figure 217

SECTION 11: SYSTEM OPERATION

Open valve **V3** and use the **Test** key to stroke the pump a minimum of 20 times. Additional strokes may be necessary if the pump displacement is restricted with a pump stroke spacer.

A decrease in the Verometer Level should be observed. Close valve **V3** and press the **Up Arrow** key four times to return to the main menu.

Choose the ***Start** entry from the main menu, *figure 218*. The meter level display, *figure 219* will indicate the Verometer level as the verometer refills to 100%.

Next, choose the mode of operation in the Proportional-to-Flow or Time display, for either the ***Flow** or ***Time** entry, *figure 220*.

Note: the ***Time** option will not appear if disabled at the time interval setting, refer to [Section 6, page 33](#).


To start the pump press the ***Yes** entry, *figure 221*.

If the calculated time / stroke is less than the minimum, the **Time / Stroke Calculated Exceeds Minimum** display will appear, and the system will not start, *figure 222*. Refer to [Section 5, pages 25 - 26, Proportion-to-Flow Mode, Setting Operator Input Parameters, to set the correct parameters for the NJEX 8300L System](#).

The **Prop Flow / Time x:xx:xx** display that follows, *figure 223*, provides a count down to the next pump stroke.

To Stop The System

To stop the pump, in the **Prop Flow/Time x:xx:xx** display, *figure 223*, press the ***Stop** entry. The following **Stop Pump** display, *figure 224*, then provides the option to press the ***No** or ***Yes** entry. Press the ***Yes** entry to stop the pump.



SECTION 12: SYSTEM MAINTENANCE

Preventative Maintenance Schedule

A preventative maintenance program serves to anticipate maintenance issues prior to waiting until the system requires service. Like changing the oil & filters in an automobile, by choosing to service the various parts and operation in the NJEX System at regular intervals, the technician can perform the maintenance service when desired, rather than when required, such as in the middle of night.

The key is to perform maintenance before it is required. The preventative maintenance schedule implemented should consider the application of the odorizer. Many of these considerations include: the weather environment; the condition of, the actuation gas, the odorant and the odorant bulk storage tank, and the pump stroke frequency. All of these issues must be considered when establishing a preventative maintenance schedule.

Recommended Maintenance Schedule Weekly Inspection

1. Verify gas pressures
2. Check for gas and odorant leaks
3. Examine the oil level in the pump
4. View the N-300 Controller for alarm indications

Semi-Annual Inspection

1. Inspect overflow protector and service as needed
2. Inspect tube fittings and valve packings for leaks.

Annual Inspection

1. Change filters
2. Rebuild pump
3. Replace solenoids
4. Clean and service the pneumatic relay valve
5. Test the relief valve and service, as needed
6. Test regulators and service, as needed
7. Condition the odorant, as needed.
8. Test the NJEX System performance

Bi-Annual Inspection

1. Perform the annual inspection listed above
2. Replace the battery
3. Replace pneumatic relay valve

Recommended Spare Parts List

| Part # | Description | Recommended Quantity |
|---------|---|----------------------|
| A4-0010 | 3-way solenoid valve | 2 |
| A3-0290 | Pneumatic relay valve | 1 |
| C4-0133 | NJEX gas filter replacement filter element | 1 |
| D3-0103 | Bulk odorant filter element replacement kit | 1 |
| D3-0102 | Model 8000 pump seal replacement kit | 1 |
| D3-0126 | Verometer filter element kit | 1 |
| D2-0001 | NJEX pump oil, 16 oz. pint | 1 |

SECTION 12: SYSTEM MAINTENANCE

Overflow Protector Assembly Inspection

The overflow protector assembly should be inspected as follows on each NJEX System in operation, *figure 225*:

1. Isolate the protector by closing valve **V6** located just below the overflow protector on the expansion tank.
2. Slowly remove the protector upper housing, **item A**, by unscrewing it from the protector lower valve body, **item B**.
3. Inspect the dart and o-ring seal, **item C**, located in the upper body. It should not be sticky or unusually shaped. If any distortion to this o-ring is found it should be replaced immediately. A normal fitting o-ring will exhibit a slight interference between the dart and the o-ring when in contact with each other. This contact is what causes the seal when necessary.
4. Inspect the cap to body o-ring, **item D**, and lubricate or replace as necessary.
5. Inspect the reset push button. When pushed in, the button should depress, then spring back freely. If any sticking occurs, the o-ring, **item E**, should be lubricated.
6. To reinstall the protector upper housing, first assure that the dart is fully inserted into the housing contacting the o-ring seal. Second, install the upper housing onto the lower body, assuring that the cap comes to a full seated position against the protector lower body.
7. Depress the **Reset** button to reset the dart.
8. Slowly open valve **V6** below the protector.
9. The **Reset** button on the side of the overflow protector is utilized to test the function of the low pressure relief and to reset the overflow dart. Pressing this button will over-ride the low pressure relief and the overflow protection dart.




Figure 225

Note: This should be inspected by the maintenance technician on a regular basis. Caution should always be used as odorant may escape if the expansion tank has been allowed to filled with odorant. Odorant fill of the expansion tank is not a normal or recommended operating condition.

SECTION 12: SYSTEM MAINTENANCE

Low Pressure Relief Adjustment

The overflow protector incorporates a low pressure relief in the cap assembly for the purpose of maintaining the maximum expansion tank pressure at 25 psi (1.72 Bar).

To test and adjust follow these steps:

1. With valve **V6** open, *figure 227*, slowly open valve **V4**, *figure 226*, until gas begins discharging at exhaust port.
2. Close valve **V4** and see where pressure stabilizes which should be 25 psi (1.72 Bar).
3. If adjustment is needed:
 - a) First, loosen adjustment lock nut, located on top of the overflow protector. To increase pressure in the tank, turn the adjustment screw in, or to the right. To lower pressure tank, turn the adjustment screw out, or to the left.
 - b) Tighten lock nut.
 - c) Repeat until the desired pressure of 25 psi (1.72 Bar) is obtained as described in in step 2 above.



Figure 226




Figure 227

SECTION 12: SYSTEM MAINTENANCE

Conducting a Forward Purge

Figure 228

Refer to the Conducting a Forward Purge Operational Schematic figure 228, on page 75.


1. Place the NJEX System in **Standby** mode by pressing the **Standby** key on the N-300 controller.
2. Close valves **V8** and **V6**
3. Open valve **V4** until pressure reaches 50-60 psi (3.4-4 Bar) in the expansion tank, then close valve **V4**.
4. Scroll to the **Meter Level** display on the N-300 controller
5. Open valve **V2** until:
 - a) **Empty** is indicated in the **Meter Level** display

And

 - b) Gas bubbling in the bulk odorant storage tank becomes audible.
6. Close valve **V17**
7. Proceed to the Venting Pressure Gas procedure on [page 76](#).

SECTION 12: SYSTEM MAINTENANCE

Figure 228



| 8300 | |
|-----------------------------|--------------------|
| Pipeline Pressure | Actuation Pressure |
| 200-400psi(13.89-27.6Bar) | 40psi(2.76Bar) |
| 400-600psi(27.6-41.4Bar) | 50psi(3.45Bar) |
| 600-800psi(41.4-55.2Bar) | 60psi(4.14Bar) |
| 800-1000psi(55.2-68.9Bar) | 70psi(4.83Bar) |
| 1000-1300psi(68.9-89.6Bar) | 80psi(5.52Bar) |
| 1300-1500psi(89.6-103.4Bar) | 90psi(6.21Bar) |

IMPORTANT: Read And Follow Steps 1-4 BEFORE Proceeding

- Place the controller in the "standby" mode.
- Close all valves marked "X".
- Open all valves marked "O".
- Place controller in the proper mode of operation as needed.
 - - Open to build pressure to 60 psi (4.14 Bar) then close valve.
 - * - Adjust as needed.

| | V2 | V3 | V4 | V5 | V6 | V8 | V9 | V10 | V11 | V12 | V13 | V14 | V15 | V16 | V17 |
|------------------|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|
| Normal Operation | X | X | X | X | O | * | X | X | X | O | O | X | O | O | O |
| System Purge | O | X | ● | X | X | X | * | X | X | O | O | X | O | O | O |
| System Vent | O | O | X | O | X | X | * | X | X | O | O | X | O | O | X |
| Leak Test | O | O | O | X | X | X | * | X | X | O | O | X | O | O | X |
| Prime Pump | X | O | X | X | O | X | * | X | X | O | O | X | O | O | O |

LEGEND

- | | | | |
|---|--|---|---|
| <ul style="list-style-type: none"> Normally Closed Valve Normally Open Valve Pneumatic Relay Check Valve Float Valve Pressure Gauge Electronic Level Transducer Solenoid Valve Pressure Regulator w/Gauge Pressure Relief Valve Pressure Transducer | <ul style="list-style-type: none"> Liquid Odorant - Normal Operation Purge/Drain Line Expansion Line Intrinsically Safe Electrical Line Exhaust/Vent Line Actuation Line 75 psi (5.17 Bar) Fill Valve Actuation Line Pump Actuation Line | <ul style="list-style-type: none"> V2 Purge Valve (Red Knob) V3 Prime Valve (Blue Knob) V4 Expansion Tank Pressure Supply Valve (Gold Knob) V5 Expansion Tank Vent Valve (Green Knob) V6 Expansion Tank Overflow Preventor Isolation Valve V7 Expansion Tank Overflow Preventor Isolation Valve V8 Isolation Valve V9 Fill Rate Control Valve V10 Odorant Storage Tank Fill Valve V11 Odorant Storage Tank Vapor Return Valve V12 Odorant Storage Tank Relief Valve Isolation Valve V13 Odorant Storage Tank Blanket Gas Isolation Valve V14 Expansion Tank Drain Valve V15 Odorant Storage Tank Supply Isolation Valve V16 Gas Supply Isolation Valve (Black Knob) V17 System Odorant Supply Isolation Valve | <ul style="list-style-type: none"> SV1 Pump Actuation Pilot Solenoid Valve SV2 Fill Valve Solenoid Valve PT1 Expansion Tank Pressure Transducer PT2 Odorant Inlet Pressure Transducer |
|---|--|---|---|

SECTION 12: SYSTEM MAINTENANCE

Venting Pressure Gas

Figure 229

Refer to the Venting Pressure Gas Operational Schematic figure 229, on page 77.

1. Open valve **V3**


CAUTION:

Vented gas will have a strong odorant smell.

2. Connect a **Gas Flare Device** or **Odorant Filter / Scrubber** as required, to the **Expansion Tank Vent** connection on the Expansion Tank
3. Slowly open valve **V5** and allow all pressure to vent from the NJEX System
4. Perform required maintenance, then proceed to the Fill Procedure on [page 78](#).

SECTION 12: SYSTEM MAINTENANCE

Figure 229



| 8300 | |
|------------------------------|-----------------|
| Pipeline Pressure | Actuation |
| 200-400psi (13.89-27.6Bar) | 40psi (2.76Bar) |
| 400-600psi (27.6-41.4Bar) | 50psi (3.45Bar) |
| 600-800psi (41.4-55.2Bar) | 60psi (4.14Bar) |
| 800-1000psi (55.2-68.9Bar) | 70psi (4.83Bar) |
| 1000-1300psi (68.9-89.6Bar) | 80psi (5.52Bar) |
| 1300-1500psi (89.6-103.4Bar) | 90psi (6.21Bar) |

IMPORTANT: Read And Follow Steps 1-4 BEFORE Proceeding

- Place the controller in the standby mode.
- Close all valves marked "X".
- Open all valves marked "O".
- Place controller in the proper mode of operation as needed.
 - - Open to build pressure to 60 psi (4.14 Bar) then close valve
 - * - Adjust as needed

| | V2 | V3 | V4 | V5 | V6 | V8 | V9 | V10 | V11 | V12 | V13 | V14 | V15 | V16 | V17 |
|------------------|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|
| Normal Operation | X | X | X | X | O | * | X | X | X | O | O | X | O | O | O |
| System Purge | O | X | ● | X | X | X | * | X | X | O | O | X | O | O | O |
| System Vent | O | O | X | O | X | X | * | X | X | O | O | X | O | O | X |
| Leak Test | O | O | O | X | X | X | * | X | X | O | O | X | O | O | X |
| Prime Pump | X | O | X | X | O | X | * | X | X | O | O | X | O | O | O |

LEGEND

- | | | | |
|---|--|---|---|
| <ul style="list-style-type: none"> Normally Closed Valve Normally Open Valve Pneumatic Relay Check Valve Float Valve Pressure Gauge Electronic Level Transducer Solenoid Valve Pressure Regulator w/Gauge Pressure Relief Valve Pressure Transducer | <ul style="list-style-type: none"> Liquid Odorant - Normal Operation Purge/Drain Line Expansion Line Intrinsically Safe Electrical Line Exhaust/Vent Line Actuation Line 75 psi (5.17 Bar) Fill Valve Actuation Line Pump Actuation Line | <ul style="list-style-type: none"> V2 Purge Valve (Red Knob) V3 Prime Valve (Blue Knob) V4 Expansion Tank Pressure Supply Valve (Gold Knob) V5 Expansion Tank Vent Valve (Green Knob) V6 Expansion Tank Overflow Preventor Isolation Valve V7 Expansion Tank Overflow Preventor Isolation Valve V8 Isolation Valve V9 Fill Rate Control Valve V10 Odorant Storage Tank Fill Valve V11 Odorant Storage Tank Vapor Return Valve V12 Odorant Storage Tank Relief Valve Isolation Valve V13 Odorant Storage Tank Blanket Gas Isolation Valve V14 Expansion Tank Drain Valve V15 Odorant Storage Tank Supply Isolation Valve V16 Gas Supply Isolation Valve (Black Knob) V17 System Odorant Supply Isolation Valve | <ul style="list-style-type: none"> SV1 Pump Actuation Pilot Solenoid Valve SV2 Fill Valve Solenoid Valve PT1 Expansion Tank Pressure Transducer PT2 Odorant Inlet Pressure Transducer |
|---|--|---|---|

SECTION 12: SYSTEM MAINTENANCE

Filling the Verometer


Figure 230

Refer to the Filling the Verometer Operational Schematic figure 230, on page 79.

1. Close valve **V2**, **V3**, and **V5**
2. Open valve **V4** until gauge reads 25 psi (1.72 Bar) and then close **V4**.
3. Open valve **V17**
4. Place the NJEX System in **Standby** mode by pressing the **Standby** key on the front of the N-300 controller. The Standby LED indicator will begin to flash on and off.
5. Scroll to the **Meter Level** display on the N-300 controller and select ***Fill**.
6. Press **Standby** key to reactivate normal operation. The Verometer will begin to fill.
7. Proceed to the Prime & Start procedure of [page 80](#).

SECTION 12: SYSTEM MAINTENANCE

Figure 230



| 8300 | |
|------------------------------|--------------------|
| Pipeline Pressure | Actuation Pressure |
| 200-400psi (13.89-27.6Bar) | 40psi (2.76Bar) |
| 400-600psi (27.6-41.4Bar) | 50psi (3.45Bar) |
| 600-800psi (41.4-55.2Bar) | 60psi (4.14Bar) |
| 800-1000psi (55.2-68.9Bar) | 70psi (4.83Bar) |
| 1000-1300psi (68.9-89.6Bar) | 80psi (5.52Bar) |
| 1300-1500psi (89.6-103.4Bar) | 90psi (6.21Bar) |

IMPORTANT: Read And Follow Steps 1-4 BEFORE Proceeding

- Place the controller in the standby mode.
- Close all valves marked "x".
- Open all valves marked "o".
- Place controller in the proper mode of operation as needed.
 - o - Open to build pressure to 60 psi (4.14 Bar) then close valve
 - * - Adjust as needed

| | V2 | V3 | V4 | V5 | V6 | V8 | V9 | V10 | V11 | V12 | V13 | V14 | V15 | V16 | V17 |
|------------------|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|
| Normal Operation | x | x | x | x | o | * | x | x | x | o | o | x | o | o | o |
| System Purge | o | x | o | x | x | x | * | x | x | o | o | x | o | o | o |
| System Vent | o | o | x | o | x | x | * | x | x | o | o | x | o | o | x |
| Leak Test | o | o | o | x | x | x | * | x | x | o | o | x | o | o | x |
| Prime Pump | x | o | x | x | o | x | * | x | x | o | o | x | o | o | o |

LEGEND

- Normally Closed Valve
- Normally Open Valve
- Pneumatic Relay
- Check Valve
- Float Valve
- Pressure Gauge
- Electronic Level Transducer
- Solenoid Valve
- Pressure Regulator w/Gauge
- Pressure Relief Valve
- Pressure Transducer
- Liquid Odorant - Normal Operation
- Purge/Drain Line
- Expansion Line
- Intrinsically Safe Electrical Line
- Exhaust/Vent Line
- Actuation Line 75 psi (5.17 Bar)
- Fill Valve Actuation Line
- Pump Actuation Line
- V2** Purge Valve (Red Knob)
- V3** Prime Valve (Blue Knob)
- V4** Expansion Tank Pressure Supply Valve (Gold Knob)
- V5** Expansion Tank Vent Valve (Green Knob)
- V6** Expansion Tank Overflow Preventor Isolation Valve
- V7** Expansion Tank Overflow Preventor Isolation Valve
- V8** Isolation Valve
- V9** Fill Rate Control Valve
- V10** Odorant Storage Tank Fill Valve
- V11** Odorant Storage Tank Vapor Return Valve
- V12** Odorant Storage Tank Relief Valve Isolation Valve
- V13** Odorant Storage Tank Blanket Gas Isolation Valve
- V14** Expansion Tank Drain Valve
- V15** Odorant Storage Tank Supply Isolation Valve
- V16** Gas Supply Isolation Valve (Black Knob)
- V17** System Odorant Supply Isolation Valve
- SV1** Pump Actuation Pilot Solenoid Valve
- SV2** Fill Valve Solenoid Valve
- PT1** Expansion Tank Pressure Transducer
- PT2** Odorant Inlet Pressure Transducer

SECTION 12: SYSTEM MAINTENANCE

Priming & Starting the NJEX System


Figure 231

Refer to the Priming & Starting Operational Schematic figure 231, on page 81.

1. Verify that the system is in the “Idle” mode on on the main display. If it is not follow steps to stop operation found in Section 11.
2. Place unit in the **Standby** mode by pressing the Standby key located on the front of the N-300 controller. The **Standby** LED will begin the flash on and off.
3. Verify that valve **V8** is closed.
4. Open valve **V3**
5. Press **Standby** key to reactivate normal operation.
6. Manually stroke the pump 15-20 times.
7. Close valve **V3**
8. Open valve **V8**
9. Select ***Start** from the main N-300 controller menu, and follow N-300 instructions to start the system found in Section 11.

SECTION 12: SYSTEM MAINTENANCE

Figure 231



| Table 1 | |
|-----------------------------|--------------------|
| 8300 | |
| Pipeline Pressure | Actuation Pressure |
| 200-400psi(13.89-27.6Bar) | 40psi(2.76Bar) |
| 400-600psi(27.6-41.4Bar) | 50psi(3.45Bar) |
| 600-800psi(41.4-55.2Bar) | 60psi(4.14Bar) |
| 800-1000psi(55.2-68.9Bar) | 70psi(4.83Bar) |
| 1000-1300psi(68.9-89.6Bar) | 80psi(5.52Bar) |
| 1300-1500psi(89.6-103.4Bar) | 90psi(6.21Bar) |

IMPORTANT: Read And Follow Steps 1-4 BEFORE Proceeding

- Place the controller in the "standby" mode.
- Close all valves marked "X".
- Open all valves marked "O".
- Place controller in the proper mode of operation as needed.

- Open to build pressure to 60 psi (4.14 Bar) then close valve.
- Adjust as needed.

| | V2 | V3 | V4 | V5 | V6 | V8 | V9 | V10 | V11 | V12 | V13 | V14 | V15 | V16 | V17 |
|------------------|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|
| Normal Operation | X | X | X | X | O | * | X | X | X | O | O | X | O | O | O |
| System Purge | O | X | O | X | X | X | * | X | X | O | O | X | O | O | O |
| System Vent | O | O | X | O | X | X | * | X | X | O | O | X | O | O | X |
| Leak Test | O | O | O | X | X | X | * | X | X | O | O | X | O | O | X |
| Prime Pump | X | O | X | X | O | X | * | X | X | O | O | X | O | O | O |

- LEGEND**
- | | | | | | | | | | |
|--|-----------------------------|--|------------------------------------|-----|---|-----|---|-----|-------------------------------------|
| | Normally Closed Valve | | Liquid Odorant - Normal Operation | V2 | Purge Valve (Red Knob) | V11 | Odorant Storage Tank Vapor Return Valve | SV1 | Pump Actuation Pilot Solenoid Valve |
| | Normally Open Valve | | Purge/Drain Line | V3 | Prime Valve (Blue Knob) | V12 | Odorant Storage Tank Relief Valve Isolation Valve | SV2 | Fill Valve |
| | Pneumatic Relay | | Expansion Line | V4 | Expansion Tank Pressure Supply Valve (Gold Knob) | V13 | Odorant Storage Tank Blanket Gas Isolation Valve | PT1 | Expansion Tank Pressure Transducer |
| | Check Valve | | Intrinsically Safe Electrical Line | V5 | Expansion Tank Vent Valve (Green Knob) | V14 | Expansion Tank Drain Valve | PT2 | Odorant Inlet Pressure Transducer |
| | Float Valve | | Exhaust/Vent Line | V6 | Expansion Tank Overflow Preventor Isolation Valve | V15 | Odorant Storage Tank Supply Isolation Valve | | |
| | Pressure Gauge | | Actuation Line 75 psi (5.17 Bar) | V7 | Expansion Tank Pressure Supply Valve (Gold Knob) | V16 | Gas Supply Isolation Valve (Black Knob) | | |
| | Electronic Level Transducer | | Fill Valve Actuation Line | V8 | Expansion Tank Overflow Preventor Isolation Valve | V17 | System Odorant Supply Isolation Valve | | |
| | Solenoid Valve | | Pump Actuation Line | V9 | Fill Rate Control Valve | | | | |
| | Pressure Regulator w/Gauge | | | V10 | Odorant Storage Tank Fill Valve | | | | |
| | Pressure Relief Valve | | | | | | | | |
| | Pressure Transducer | | | | | | | | |

SECTION 13: 8300L SYSTEM TROUBLESHOOTING

How to Use This Section

The recommendations contained in this section should be used as a preliminary information resource to remedy operational issues with the NJEX System. It is important to read all of the definitions and notes prior to initiating work.

Each sub-section contains a description of the alarm and non-alarm indicators followed by a step-by-step trouble shooting procedure.

For sub-sections containing information on alarms and non-alarm indicators, keep in mind that alarms will trigger the alarm relay output, and the red LED light on the display panel will flash. Non-alarm indicators will display on the LCD, cause the green LED to flash on and off and generate an entry in the Sentry reports but, will not trigger the alarm relay.

For Additional Help

Any issue that can not be resolved through the use of this reference, please contact YZ Technical Service at:

T: 1.800.653.9435 (1.800.NJEX-HELP)
T: 1.936.788.5526, International Calls
F: 1.936.788.5720
Em: Service@yzhq.com

Assistance is available 24 hours a day, 7 days a week, 365 days a year, via the telephone numbers listed above.

SAFETY NOTES

- Always use extreme care when performing maintenance on an odorization system. Check to ensure the removal of liquid odorant and pressure from the portion of the system on which work will be performed prior to removing components or fittings.
 - Inspect all tube fittings and valve packings semi-annually to ensure that liquid odorant remains within the system.
-

Step-by-Step Resolution

Using a step-by-step method to resolve issues on the NJEX System will reduce maintenance time and assist in returning the odorization system to service quicker.

The following represent the recommended chronology to resolve issues:

1. Complete the Troubleshooting Form located in the [Appendix C on page 114](#). Some of the information entered on the [For the Record Form on page 113 in Appendix C](#) can be of use.
2. Re-establish the correct pressures.
 - a. Expansion Tank, 25psi (1.72 Bar)
 - b. Bulk Storage Tank, 30-35psi (2.07-2.41 Bar)
 - c. Actuation Supply, 75psi (5.17 Bar)
 - d. Pump Actuation, refer to [figure 4, System Flow Schematic, Section 2](#)
3. Resolve alarm issues to the following order:
 - a. Tank Level, [pages 83](#)
 - b. Battery, [page 84](#)
 - c. Signal, [pages 85](#)
 - d. Verometer, [pages 86](#)
 - e. Pump, [pages 91](#)

Tank Level Alarm

These alarms should only be active with skid mounted odorizer and tank assemblies furnished pre-assembled by YZ Systems, Inc. The set points for these alarms are adjustable in the parameter section of the N-300 controller.

- The **Odor Tank Low Level Alarm** should be set between 5% to 25%. This alarm indicates a tank level at or lower than the alarm set point.
- The **Odor Tank High Level Alarm** should be set between 80% to 90%. This alarm indicates a tank level at or above the alarm set point.

If your system was not purchased as a skid mounted assembly with a tank from YZ Systems, this alarm should be set to disabled in the alarm parameters section of the controller.

SECTION 13: 8300L SYSTEM TROUBLESHOOTING

Tank Level Alarm, *Continued*

IMPORTANT NOTE:

The tank level indication has a variance of $\pm 2\%$ for accuracy. If the alarm is on and the mechanical level indicator is close to the alarm set point the alarm is probably valid and the accuracy variance is all that is being noted.

Tank Level Alarm Troubleshooting Steps

1. Verify the tank level indication on the manual tank gage. If the level indication does not approximately match the electronic level indication perform the following checks.
 - a. Inspect to verify that the wiring to the controller termination strip TB-1 is still intact. Look for loose or broken wires at TB-1, pin number 21 (Red Wire), 22 (Black Wire), and 24 (Shield). Repair any loose or broken wires.
 - b. Inspect the level sensor at the tank for possible damage or moisture in the sensor head. Repair or replace as required if moisture is inside the sensor.
 - c. Inspect the cable between the sensor and control head for damage. Repair or replace as necessary.
 - d. Observe the other values on the N-300 controller such as the temperature, battery voltage, and Verometer level, etc. for any unexpected values. If another value is found to be abnormal, inspect the bulkhead connector to interconnect cable connections for the presence of moisture or corrosion. If moisture or corrosion is found correct by replacing affected components. Simply cleaning the connection may not correct the problem temporarily or permanently.
2. If the level indication on the manual gage and the electronic level indication are approximately the same, within $\pm 2\%$ as indicated above, then the system is working correctly. If you wish to change the alarm set points, or disable the alarm, proceed to the Set Parameters section of the controller and make necessary changes to clear the alarm.

Battery Alarm

- The **Low Battery Alarm** indicates that the battery or power supply voltage for the system has dropped below 11.0 volts.

Battery Alarm Troubleshooting Steps

1. First determine why the battery is low. For example, inspect for charging system issues, battery problems, or excessive current draw.
 - a. Disconnect the charger power supply cable (Yellow cable) from the lower bulkhead connection on the electronics enclosure.
 - b. Evaluate connections for any corrosion that may have prevented current from reaching the battery. If corrosion is found clean or replace affected components as necessary, and place back into service with a fully charged battery pack in place.
 - c. Test the output from the charger power supply cable (yellow) with a volt meter. Voltage from this cable should read 18 - 20VDC, when the Line Power Supply - LPS connected to AC current is in use. If voltage is low, service, or replace LPS components as necessary.
 - d. If everything has checked out to this point, open the control panel assembly to expose the battery pack. Next un-plug the battery pack at the cable connection on the left side of the enclosure. Carefully read the voltage from the battery. Typically, the battery should read over 12.5VDC. If no reading is found here the fuse to the battery is blown and must be replaced. Contact YZ Systems for the a replacement.

Note: Use only the originally specified fuse for replacement.

- e. Finally to evaluate for possible excessive current draw. Begin by disconnecting the cables one at a time to each solenoid and to the verometer. Note the change in voltage reading on the screen as any one cable is disconnected. Should you find one with a significant effect on the system voltage, that component should be replaced.

2. If problem can not be resolved at this point contact YZ Systems Technical Service.

SECTION 13: 8300L SYSTEM TROUBLESHOOTING

Signal Alarm

- The **Loss / Signal** alarm will be active only in the **Analog Proportional-To-Flow** mode. It indicates that the flow signal voltage has dropped below .5VDC. A correct flow signal should never drop below 1VDC.
- **Over Flow >125%** is an indication that the flow signal is showing greater than 125% of the maximum gas flow according to the set up conditions indicated in the parameter and calibration sections of the controller.

Non-Alarm Signal Indicators

- **Over Flow >110%** is an indication that the flow signal is showing greater than 110% and less than 125% of maximum gas flow according to the set up conditions indicated in the Parameter and Calibration sections of the N-300 controller
- **Low Flow Shut Off** is an indication that the flow signal being received by the odorizer, indicates that present flow in the pipeline is less than the set value for the Low Flow shut Off set in the in the Parameter section of the N-300 . When the flow rate drops below this value odorant injection stops and therefore no odorization is presently occurring. Odorization will automatically resume when the flow signal returns to a level above the set point to stop odorization.
- **No Flow** is an indication that the flow signal being received by the NJEX System currently reads a no flow situation in the pipeline and therefore no odorant is currently being injected. Odorization will automatically resume when the flow signal indicates flow in the pipeline.

Signal Alarm & Non-Alarm Troubleshooting Steps

1. The **Loss of Flow** alarm will only be active with a Linear or Non-linear Analog signal. This alarm will be activated any time the flow signal goes completely away or drops below .5v (2Ma). Should this alarm occur check the flow signal on **TB-1** pins **2** and **3** . Be certain the flow signal is connected to **TB-1**, via the ten pin connector at pins **2** and **3** . If the signal is above .5v (2Ma), check your grounding system. If it is .5v (2Ma) or less, repair the flow signal source or cable as required.
2. The **Overflow** alarm will be indicated when the flow signal indicates 125% of the indicated span set point.
 - a. If reading an analog flow signal, linear or non-linear), a grounding reference error can cause this condition. Check that the grounding system is correctly in place. Read the flow signal voltage on **TB-1** pins **2** and **3** . If the voltage reading on the volt meter is greater than 5v, the problem resides with the transmitted signal. Correct as necessary at the signal source. If the voltage on the volt meter is within the 1-5v range, the problem is most likely a grounding or isolation issue. This can be corrected by re-establishing the ground or installing a signal isolator device.
 - b. If the NJEX System is set to receive a pulse signal and this alarm activates, two issues could generate this alarm. First, the span frequency could be set incorrectly. Recalculate the span frequency and inspect the setting in the Calibration section of the N-300 Controller. The other cause could be the result of electrical noise interference resulting in the system interpreting this noise as pulses.
 - c. If it is believed this is in error or the situation continues to reoccur, the flow signal calibrations, and parameters should be re-calibrated with corrected values.

SECTION 13: 8300L SYSTEM TROUBLESHOOTING

Signal Alarm & Non-Alarm Troubleshooting Steps, *Continued*

3. **Low flow** indication is not an actual alarm, but an indication that the system is reading the flow signal to indicate the system is in the low flow shut off condition stipulated by the low flow shut off parameter. If it is felt this indicator should not be on, given the current flow, first check the parameter for the Low Flow Shut-Off to verify it is set as desired. As a second step, evaluate the flow signal being received. Verify that the signal indicates the correct flow, and that the signal spanned and zero referenced correctly. If necessary correct as required.
4. **Overflow** indicator will activate when the flow signal is showing greater than 110% and less than 125% of the maximum gas flow according to the set up conditions indicated in the parameter and calibration sections of the N-300 controller.
 - a. If reading an analog flow signal, linear or non-linear), a grounding reference error can cause this condition. Check that the grounding system is correctly in place. Read the flow signal voltage on **TB-1** pins **2** and **3**. If the voltage reading on the volt meter is greater than 5v, the problem resides with the transmitted signal. Correct as necessary at the signal source. If the voltage on the volt meter is within the 1-5v range, the problem is most likely a grounding or isolation issue. This can be corrected by re-establishing the ground or installing a signal isolator device.
 - b. If the NJEX System is set to receive a pulse signal and receive this alarm, two issues could generate this alarm. First, the span frequency could be set incorrectly. Recalculate the span frequency and inspect the setting in the Calibration section of the N-300 Controller. The other cause could be the result of electrical noise interference resulting in the system interpreting this noise as pulses.

Verometer Alarm

There are a variety of Verometer alarms monitored by the N-300 Controller to ensure correct and safe operation of the NJEX System. The alarms relating to Verometer performance and their description is as follows:

- **Vmtr-Cable** alarm indicates a failure to communicate between the verometer and the N-300 controller.
- **No Fill** alarm is activated triggered if the Verometer fails to fill to 100% within 6 minutes after a fill is requested.
- **Slow Fill** alarm is indicated when a fill of the Verometer is requested and the Verometer does not fill to 100% within 3 minutes. This alarm actuates with either an automatic or manual fill request.
- **Leakage** is indicated when pump displacement is calculated with a greater than 50% above parameter safety. As if Verometer was leaking fluid and system will not continue to refill.
- **Fivalv-Fail** alarm indication is signaled if the level in the Verometer increases when a fill is not requested by the controller.
- **OdorInlet Cable** alarm indicates a failure to communicate between the fill valve pressure transducer on the Bulk Odorant Storage Tank side and the N-300 controller.
- **OdorInlet Lo** alarm indicates that the odorant pressure has dropped lower than defined in the set up parameters in the N-300 controller.
- **OdorInlet Hi** alarm indicates that the odorant pressure has exceeded the maximum pressure as defined in the set up parameters in the N-300 controller.
- **XTank - Cable** alarm indicates a failure to communicate between the Expansion Tank transducer on the fill valve assembly and the N-300 controller.
- **XTank Low** alarm indicates the pressure in the expansion tank has dropped below the defined minimum set point for the Expansion Tank.

SECTION 13: 8300L SYSTEM TROUBLESHOOTING

- **XTank High** alarm indicates the pressure in the expansion tank has exceeded the defined high pressure set point for the Expansion Tank.

Non-Alarm Verometer Indicators

- **Overfill** is indicated when the Verometer has filled to a level of 112% or greater.
- **Fillrate** alarm is indicated when the Verometer fills to 112% or greater in less than 10 seconds.

Verometer Troubleshooting Steps

1. Verify the following operating conditions, and correct as necessary:
 - a. Expansion tank pressure is set at 25 psi (1.72 Bar).
 - b. Bulk odorant storage tank pressure is at least 5 psi (.34 Bar) and not more than 10 psi (.69 Bar), above expansion tank pressure.
 - c. Actuation supply pressure is maintained during operation at 75 psi (5.17 Bar).
 - d. Verify that the bulk odorant storage tank has odorant and all valves are in the correct positions to allow the verometer to fill.
2. **Important:** Check and adjust the throttling valve position for effect on filling prior to proceeding to troubleshooting.

Restart the NJEX System to inspect the verometer for a fill. If no fill occurs, observe if a **No Fill** alarm is indicated under the Verometer display sequence and troubleshoot accordingly.

Verometer Cable Alarm Troubleshooting Steps

When an active **VMTR-Cable** alarm is indicated the following steps should be taken:

1. Inspect all cables for any external damage such as cuts or crimps in the external cable sleeve or moisture inside the cable connector.

2. Loosen and inspect the cable orientation pins for correct positioning. All cables have a specific mating connection to ensure that the correct pins on the opposing sides of the connector align. These pins must be correctly aligned to ensure the electronic signals reach the correct electronic address in the microprocessor.
3. Reconnect cables as noted above, ensuring that the alignment pins are mated correctly and that locking rings are tight. Observe if the alarm is still active, if it is, contact YZ Technical Services.

Verometer No-Fill Alarm Troubleshooting Steps

When an active **No-Fill** alarm is indicated the following steps should be taken:

IMPORTANT NOTE:

Before attempting to troubleshoot the fill valve, verify that the status switch is in the run position and the Verometer is not in a full level position. The fill valve commands can not be processed if the Verometer is full, or the status switch is in the standby position.

1. Check actuation gas supply filter and valves for possible restriction or closure, and adjust or replace as necessary.
2. Check odorant filters for possible restriction and replace as necessary.
3. Check tubing between bulk odorant storage tank and enclosure for damage. If tubing is crimped, bent or damaged by any form that could restrict flow, replace the tubing.
4. Test for adequate fill valve pneumatic actuation pressure. Place a gauge at the tubing connection located on top of the fill valve by disconnecting tubing. During a fill, the valve actuation pressure

SECTION 13: 8300L SYSTEM TROUBLESHOOTING

should be 75 psi (5.17 Bar).

Verometer No-Fill Alarm Troubleshooting Steps, *Continued*

5. Verify that the status switch be in the run position. If no pneumatic supply is received at the fill valve when a fill is called for, test electrical supply to the fill valve solenoid located on the left. With a volt meter the current should read 12VDC at the fill valve solenoid when a fill is requested. If voltage is present when a fill is requested, but gas will not flow to the fill valve, replace the solenoid.
 - a. If a volt meter is unavailable, you may test fire the pump with the test switch to verify the other solenoid and cable are active. To test, temporarily switch the solenoid cables. Now when the test switch is activated, the fill valve solenoid should send pneumatic supply gas to the loosened connection at the fill valve for approximately .2 seconds each time the test switch is activated. If this does occur there is some problem with the fill signal getting to the fill solenoid. However, if the solenoid still does not send actuation gas to the fill valve the solenoid is bad and should be replaced.

If the signal is not getting to the solenoid, test at terminal strip **TB-1**, located inside the termination enclosure just below the N-300 Controller, with a volt meter at pins **7** positive (*orange wire*) and **8** negative (*violet wire*), for 12VDC when the fill is requested from the N-300 controller. If the voltage is present, check the wiring for proper polarity connections. Verify that pin **7** has an orange wire, and pin **8** a violet wire connected.

6. If an electrical signal is not present when a fill is requested, check all cables for corrosion, moisture, or damage and replace if any signs of the previous mentioned problems are present and perform the test again.
7. If an electrical signal is still not present contact YZ Systems Technical Service.

Verometer Slow-Fill Alarm Troubleshooting Steps

IMPORTANT NOTE:

Prior to troubleshooting a slow fill alarm, verify that the Verometer is not in a full level position as the fill valve commands can not be processed if the Verometer is full.

1. Inspect the actuation gas supply filter for possible restriction, and replace as necessary.
2. Inspect the odorant filters for possible restriction and replace as necessary.
3. Check tubing between bulk odorant storage tank and enclosure for damage. If tubing is crimped, bent or damaged by any form that could restrict flow, replace the tubing. Verify that an adequate flow of odorant is supplied to the fill valve.
4. Test for adequate fill valve pneumatic actuation pressure. Place a guage at the tubing connection located on top of the fill valve by disconnecting tubing. During a fill, the valve actuation pressure should be 75 psi (5.17 Bar).
5. Disassemble, clean, and rebuild fill valve assembly.

Verometer Leakage Alarm Troubleshooting Steps

1. Inspect the system for any obvious leaks and repair as necessary.
2. If the **Leakage** alarm occurs during purging of the system or the packing of the lines with odorant on a new system, a manual refill of the verometer will be required and this will clear the alarm.
3. Verify that the pump displacement parameter correctly matches the actual pump performance on the system, and correct if necessary.
4. Verify the correct balance of pressures between the pump actuation pressure and the pipeline pressure, *refer to figure 4, in the System Flow Schematic on page 6, Section 2* for specific system pressures.

SECTION 13: 8300L SYSTEM TROUBLESHOOTING

5. If the pipeline pressure is near or below 250 psi (17.24 Bar), a back pressure regulating device must be installed immediately outside the NJEX enclosure, on the odorant line leading to the pipeline injection point. If this device is installed, verify that it is maintaining a back pressure regulating device above 250 psi (17.24 Bar).
6. Verify that the total run of tubing from the pipeline to the NJEX System does not exceed 15' (4.5 Meters).

Verometer Fill Valve Failure Alarm Troubleshooting Steps

When an active **Fvalv-Fail** alarm is indicated the following steps should be taken:

CAUTION:

Verify the following prior to commencing work:

1. Actuation pressure is not excessive. This can cause the fill valve solenoid to open slightly when the pump strokes, which would open the fill valve and trigger an alarm.
2. Verify that all valves in the system are in the correct position. A valve in the incorrect position may allow odorant to enter the Verometer via a path other than through the fill valve, resulting in a fill valve alarm. For example, if valves **V2** and **V3** were left open, the result would cause a fill valve alarm.

Verometer at 116%

1. Initiate a forward purge to lower Verometer level to approximately 50% and return the NJEX System to normal operating pressures and valve positions.
2. Place the NJEX System in standby mode and observe level changes in the Verometer by monitoring the Verometer level status on the N-300 controller display.
3. If the level increases disconnect the pneumatic supply tube at the top of the fill valve to inspect if actuation gas is present. If actuation gas is not present when the tube is disconnected, and the

Verometer level continues to increase, repair or replace the fill valve. If the actuation gas is present in the tube when disconnected, the Verometer level should stabilize after disconnecting the fill valve pneumatic supply tube. Proceed to step 4.

4. While the fill valve pneumatic supply tube is disconnected, toggle the mode switch from run to standby and back again. This should stop and start the pneumatic supply.
 - a. If the pneumatic supply stays on, disconnect the fill valve solenoid cable. If disconnecting the cable does not stop the pneumatic supply, replace the solenoid.
 - b. If disconnecting the cable in step 4a listed above caused the pneumatic supply to stop, check the electrical connections for the presence of moisture. Dry the connections if moisture is present and try test again. If moisture on the solenoid was not the problem, check the interconnect cable for possible moisture or corrosion where it connects to the mechanical enclosure. Replace if corrosion or moisture is present.
5. If the step taken above do not resolve the issue entire control head assembly must be replaced.

Verometer Odorant Inlet Cable Alarm Troubleshooting Steps

When an active **OdorInlet-Cable** alarm is indicated the following steps should be taken:

1. Inspect all cables for any external damage such as cuts or crimps in the external cable sleeve or moisture inside the cable connector.
2. Loosen and inspect the cable orientation pins for correct positioning. All cables have a specific mating connection to ensure that the correct pins on the opposing sides of the connector align. These pins must be correctly aligned to ensure the electronic signals reach the correct electronic address in the microprocessor.
3. Reconnect cables as noted above, ensuring that the alignment pins are mated correctly and that locking rings are tight. Observe if the alarm is still active, if it is, contact YZ Technical Services.

SECTION 13: 8300L SYSTEM TROUBLESHOOTING

Verometer Odorant Inlet Low Alarm Troubleshooting Steps

When an active **OdorInlet Lo** alarm is indicated the following steps should be taken:

1. Verify that the bulk odorant storage tank pressure exists in a range of 30 to 35 psi (*2.07 to 2.41 Bar*) and re-establish the correct pressure if necessary.
2. Inspect the alarm set point programmed into the N-300 controller and verify that it is correctly programmed and correct if necessary, *refer to the parameters section on programming the N-300 controller Section 5, page 29 or Section 6, page 36 depending on the mode of operation.*
3. Observe if the alarm is still active, if it is, contact YZ Technical Services.

Verometer Odorant Inlet Hi Alarm Troubleshooting Steps

When an active **OdorInlet Hi** alarm is indicated the following steps should be taken:

1. Verify that the bulk odorant storage tank pressure exists in a range of 30 to 35 psi (*2.07 to 2.41 Bar*) and re-establish the correct pressure if necessary.
2. Inspect the alarm set point programmed into the N-300 controller and verify that it is correctly programmed and correct if necessary, *refer to the parameters section on programming the N-300 controller Section 5, page 29 or Section 6, page 36 depending on the mode of operation.*
3. Observe if the alarm is still active, if it is, contact YZ Technical Services.

Verometer Expansion Tank Cable Alarm Troubleshooting Steps

When an active **XTank-Cable** alarm is indicated the following steps should be taken:

1. Inspect all cables for any external damage such as cuts or crimps in the external cable sleeve or moisture inside the cable connector.
2. Loosen and inspect the cable orientation pins for correct positioning. All cables have a specific mating connection to ensure that the correct pins on the opposing sides of the connector align. These pins must be correctly aligned to ensure the electronic signals reach the correct electronic address in the microprocessor.
3. Reconnect cables as noted above, ensuring that the alignment pins are mated correctly and that locking rings are tight. Observe if the alarm is still active, if it is, contact YZ Technical Services.

Verometer Expansion Tank Low Alarm Troubleshooting Steps

When an active **XTank Low** alarm is indicated the following steps should be taken:

1. Verify that the expansion tank pressure is at 25 psi (*1.72 Bar*) and correct if necessary.
2. Inspect the alarm set point programmed into the N-300 controller and verify that it is correctly programmed and correct if necessary, *refer to the parameters section on programming the N-300 controller Section 5, page 29 or Section 6, page 35 depending on the mode of operation.*
3. Observe if the alarm is still active, if it is, contact YZ

SECTION 13: 8300L SYSTEM TROUBLESHOOTING

Technical Services.

Verometer Expansion Tank High Alarm Troubleshooting Steps

When an active **XTank High** alarm is indicated the following steps should be taken:

1. Verify that the expansion tank pressure is at 25 psi (1.72 Bar) and correct if necessary.
2. Inspect the alarm set point programmed into the N-300 controller and verify that it is correctly programmed and correct if necessary, *refer to the parameters section on programming the N-300 controller Section 5, page 29 or Section 6, page 35 depending on the mode of operation.*
3. Observe if the alarm is still active, if it is, contact YZ Technical Services.

Verometer Overfill Non-Alarm Indicator Troubleshooting Steps

When an active **Overfill** non-alarm is indicated the following steps should be taken:

IMPORTANT NOTE:

Prior to troubleshooting an overfill indicator verify that the Verometer is not in a full level position as the fill valve commands can not be processed if the Verometer is full.

1. Empty the Verometer by performing a forward purge.
2. After returning all pressures and valves to their normal operating position. Observe the Verometer level for 5 -10 minutes and note if a change in the Verometer level occurs without operator influence. If level in the Verometer does increases without operator influence, *proceed to the Fill Valve Troubleshooting section of this manual on page 89.* If the level in the Verometer does not increase then otherwise proceed to the next step below.
3. Initiate a Verometer fill and record the time required to fill to 100%, and note the level. If the Verometer fills in a time faster than 30 seconds, partially close the volume throttling valve between the odorant

storage tank and the NJEX System. This should slow the fill rate. Repeat step 3 until the NJEX System fills in over 30 seconds, and the fill valve turns off between 100 - 108% of fill volume.

Verometer Fill Rate Non-Alarm Indicator Troubleshooting Steps

When an active **Fillrate** non-alarm is indicated the following steps should be taken:

1. Verify the correct set points on the following pressures.
 - a. Expansion Tank set at 25 psi (1.72 Bar)
 - b. Bulk Tank set at 30 - 36 psi (2.07-2.41 Bar)
 - c. System Supply set at 75 psi (5.17 Bar)
2. Empty the Verometer by performing a forward purge. Re-establish the pressures and valves to their normal operating position, and then proceed to step 3.
3. Perform the Verometer fill procedure as indicated in *System Maintenance, Section 12, page 78,* and adjust fill rate control valve **V9** to achieve a appropriate fill rate.

Pump Alarm Troubleshooting

There are three pump alarms monitored by the N-300 Controller to ensure correct and safe operation of the NJEX System. The alarms relating to the pump performance and their description is as follows:

- **Over Pump** alarm will indicate if the actual pump displacement exceeds the programmed pump displacement value by 30%.
- **Under Pump** alarm will indicate when the actual pump displacement ranges from 30 - 75% of the programmed pump displacement value.
- **Pump Failure** alarm will indicate when the actual pump displacement is less than 25% of the pro-

SECTION 13: 8300L SYSTEM TROUBLESHOOTING

grated pump displacement value.

IMPORTANT NOTE:

When a system re-start is requested at completion or during the the service of an NJEX System, use the N-300 controller to stop and restart the system from the main menu.

*After a restart, the default values will be used for operation, and alarms will be cleared until actual performance values can be ascertained by the N-300 controller. In the case of the pump displacement this may not occur until the pump has drained the Verometer to approximately the 90% level. An * will appear by the indicated pump displacement after a stop and restart. This indicates that the displayed value is a default parameter value, which is not a real pump performance indication. As a result, this default pump performance indication should not be relied upon as the actual pump performance.*

Do not prematurely assume the problem has been resolved, simply due to the disappearance of the indicators and alarms immediately after a re-start of the NJEX System.

Pump Over Pumping Alarm Troubleshooting Steps

When an active **Over Pumping** alarm is indicated the following steps should be taken:

1. This alarm may occur after service or maintenance has been performed due to variances in the Verometer level during the conduct of service. If service has recently been performed, and this alarm occurs, stop and restart the system to observe if the alarm re-occurs, thus indicating a real alarm. If the alarm re-occurs continue to step 2 below.
2. Verify that the operating conditions remain unchanged and correct as needed. The pipeline pressure should be at least 250 psi (17.24 Bar).
 - a. Inspect the installation for the use of a back pressure regulating device. A back pressure regulating device must be installed immediately outside the NJEX enclosure on the odorant line leading to the pipeline injection point. A back

pressure regulating device can alleviate the over pumping conditions that can result by the varying pressures and temperatures in the pipeline. If a back pressure regulating device is not installed as described above, install the device before proceeding.

- b. Inspect the back pressure regulating device for proper operation, and installation as described above.
3. Verify that the actuation pressure remains unchanged from previous setting.
4. Verify the pump displacement parameter setting is the same as the desired pump displacement.

Pump Under Pumping Alarm Troubleshooting Steps

When an active **Under Pumping** alarm is indicated the following steps should be taken:

1. If maintenance or repair has just been performed, stop and restart the system to see if the alarm re-occurs indicating a real alarm. If the alarm re-occurs continue to the next step.
2. Verify operating conditions. Correct as needed.
3. Verify that the pump displacement parameter matches the accurate pump displacement.

Note: *When starting a system for the first time the expected pump displacement should be set in the N300G controller parameters section. The system should then be run through at least one complete Verometer cycle to get an accurate pump displacement reading. Actual installation conditions may have an effect on the real pump performance. Use the accurate pump displacement as calculated by the controller for the final pump displacement parameter to be entered into the controller.*

4. Check to see if the pump operation sounds the same as previously. A distinct bottoming of the plunger piston and return a return to the top of the plunger piston housing should be audible with each actuation. If not, remove the actuation cylinder. Inspect for a broken return spring, or a

SECTION 13: 8300L SYSTEM TROUBLESHOOTING

stuck / sticking actuator piston or plunger. Replace the spring if broken. Clean and Lubricate the actuation cylinder and actuation piston assembly. Manually push the plunger into the seal assembly and ensure it returns completely and freely. If sticking continues to occur, the seals should be replaced. Reassemble and see if alarm reoccurs after a system restart.

5. If pump actuation is normal:
 - a. Inspect the discharge lines and valves for a restriction.
 - b. Inspect all the check valves on the discharge side of the pump, from the NJEX System to the pipeline, for proper operation.
 - c. A back pressure regulating device must be installed immediately outside the NJEX enclosure on the odorant line leading to the pipeline injection point. Perform a forward purge noting the time required to empty the Verometer. If the time to empty the Verometer is longer than 30-45 seconds, after the level begins dropping, replace the Verometer filter, and restart the system. During the system restart monitor the controller and observe if the alarm reoccurs.
 - d. Replace the inlet check valve to the pump.
6. If problems persist, contact YZ technical service for additional assistance.

Pump Failure Alarm Troubleshooting Steps

When an active **Pump Failure** alarm is indicated the following steps should be taken:

1. Verify that the Verometer has odorant in it, and that the expansion tank has the proper pressure in it of 25 psi (1.72 Bar).

Note: *If the Verometer is empty, restart the system. Stroke to the pump to cycle odorant through the system and observe if the alarm reoccurs.*

2. Verify that the pump volume spacer matches the pump displacement parameter in the controller.
3. Verify that all valves and check valves are properly set system operation. Inspect for valve settings that can restrict pump displacement.
4. Check the actuation gas filter for flow restriction or closure.
5. Ascertain whether the pump is properly stroking.
 - a. If pump actuation does not occur as the Test key is pressed, remove the actuation gas line at the top of the pump and test the pump stroke again. As the **Test** key is pressed, there should be a burst of gas at the open actuation supply connection. If gas is released from the open actuation supply line skip to subsection **5.g.** , otherwise continue to **5.b.**
 - b. If gas is not blown from the loose connection, disconnect the hose leading from the pump solenoid to air relay valve. Test stroke the pump again and observe if gas is discharged from the small hose.
 - c. If gas comes out of the solenoid briefly when the **Test** key is pressed the solenoid is good but, the air relay valve requires service or repair.
 - d. If small hose does not release gas, remove the pump solenoid wiring cable, the solenoid located on the right of the two solenoids. Next, connect a volt meter to the two parallel posts of the solenoid cable. As the **Test** key is pressed, observe if a 12VDC current becomes present. If a voltage is detected the solenoid should be replaced.

If a volt meter is unavailable, the fill valve signal may be used to test the solenoid. First, test the fill valve function to verify that it is working properly before using it to test the pump solenoid. Second, verify that the Verometer is less than 100 % full on the level indication. Third, take the cable connected to the fill valve solenoid, remove it and re-connect it to the


SECTION 13: 8300L SYSTEM TROUBLESHOOTING

pump solenoid. With the status key in the run mode instruct the NJEX System to fill. If the solenoid is good, you should get gas from the solenoid. To stop it, place in the NJEX System in standby mode and gas flow should stop. If no gas flows the pump solenoid is bad and should be replaced.

- e. If the above test indicates the solenoid is functioning, next determine if the signal is being sent by the controller, or lost in the cabling and connections. Open the termination enclosure ,enclosure door just below the N-300, and connect your volt meter to **TB-1** terminals **9** and **10**, with **9** being the positive (yellow wire) and **10** being the negative (blue wire). Now, test fire the pump with the test switch. A momentary voltage pulse, approximately .2 seconds in duration, should be observed. This will be a DC voltage pulse not exceeding 12VDC. If the pulse is at the termination panel next check the polarity of connections of the wiring. The terminal **9** should have a yellow wire attached and, the terminal **10** should have a blue wire attached. If the polarity is correct, on the wiring, the cable assembly to the solenoid should be replaced.
 - f. If no voltage is detected, contact the technical service department at the factory.
 - g. With the actuation gas line reconnected to the pump, test stroke the pump. Observe if there is an audible pump stroke with the piston bottoming out and returning to the top of the pump housing. If an audible pump actuation is not present , remove the actuation cylinder and inspect for a broken return spring, or a stuck / sticking plunger assembly. Replace the spring if broken, clean and relubricate the plunger assembly and actuation cylinder. Make certain the seals are not sticking to the plunger assembly.
 - h. Inspect the pump oil level and action during actuation. The oil level should rise slightly during an actuation of the pump, and the oil level must be above the nipple connecting the reservoir to the pump body. The oil should not smell strongly of odorant and the oil color should be red, not clear. If the oil appears clear and / or smells strongly of odorant, the pump diaphragm and seals need service. If the pump is low on oil, or out of oil, fill to the oil level reference mark inside of the oil reservoir about half way down with proper oil. If the pump was completely out of oil, or if the level was below the top of the nipple, the pump will need repeated stroking to permit the trapped air to work out of the oil reservoir. If possible, let the pump run overnight with the reservoir cap removed. If refilling with oil seems to bring the displacement back, monitor for a while and observe if the oil level drops again. If the pump continues to use oil, service the seals and diaphragm servicing.
6. Assure that the pump is properly primed by:
 - a. Placing the unit in stand by.
 - b. Closing valve **V8** at the pipeline.
 - c. Open valve **V3**.
 - d. Test stroke the pump 15 - 20 strokes with the **Test** key, then place back in standby.
 - e. Close valve **V3** and open valve **V8**.
 - f. Place the controller in run mode.
 - g. Monitor the pump performance and observe if pump actuation is occurring.
 7. If problems persist, contact YZ technical service for additional assistance.

APPENDIX A: ILLUSTRATIONS

NJEX Model 8000 Pump Assembled, *Figure 201*




APPENDIX A: ILLUSTRATIONS

NJEX Model 8000 Pump

Actuation Assembly,

Exploded View, Figure 202




* 8000 Pump Seal Replacement Kit - P/N D3-0102

APPENDIX A: ILLUSTRATIONS

NJEX Model 8000 Pump

Diaphragm/Check Valves,

Exploded View, Figure 203




* 8000 Pump Seal Replacement Kit - P/N D3-0102

APPENDIX A: ILLUSTRATIONS


Fill Valve, Exploded View,

Figure 204



APPENDIX A: ILLUSTRATIONS

VM-2100 Verometer, with Filter Assembly Exploded View, *Figure 205*




¹ Verometer Filter Element Kit
PN: D3-0126

APPENDIX A: ILLUSTRATIONS

Bulk Odorant Filter

Figure 206




*Bulk Odorant Filter Element Replacement Kit (P/N D3-0103)

APPENDIX A: ILLUSTRATIONS

NJEX Gas Filter

Figure 207



¹ NJEX Gas Filter Replacement Element
PN: C4-0133

APPENDIX A: ILLUSTRATIONS


Electronics Assembly

Figure 208



APPENDIX A: ILLUSTRATIONS


LPS-120/240 Charger Supply Unit, *Figure 209*



APPENDIX A: ILLUSTRATIONS

Heater Wiring Diagram


Figure 210



APPENDIX A: ILLUSTRATIONS

Back Pressure Regulator Diagram ,

Figure 211



APPENDIX B: N-300 MODBUS SPECIFICATIONS

Communications Settings

| | |
|------------------------------|----------------------------|
| Protocol | Modbus |
| Data framing | Modbus RTU and ASCII |
| Slave Address range | 0-247, 0 = Modbus disabled |
| Baud rates | 1200, 2400, 4800, and 9600 |
| Number of data bits | 7 or 8 |
| Parity | None, Odd, Even |
| Stop bits:..... | 1 or 2 |
| Serial communications: | Redundant RS-485 2 wire |

N300 Modbus Function Support

| Function Code | Function | Description |
|---------------|---------------------------------|---|
| 1 | Read Coil Status | Reads the ON/OFF status of discrete outputs (coils) |
| 3 | Read Holding Registers | Reads the binary contents of holding registers |
| 5 | Force Single Coil | Forces a single coil to either the ON or OFF state |
| 6 | Preset Single Registers | Presets a value into a single holding register |
| 16 | Preset Multiple Registers | Presets values into a sequence of holding registers |

Boolean Registers

The Boolean data type could be used for status, and control. The discrete outputs or "coils" as defined by the Modbus specification are read/write registers. This ON/OFF data type can be manipulated using Modbus functions 1 and 5.

The valid address range for this data type is 00001 to 09999.

Function 1, allows reading a single coil per query

Function 5, allows writing single or multiple coils per query.

Control Functions

The control functions available via Modbus are listed below. The registers are accessed using Modbus functions 1 and 5. The master device can initiate a state change by setting a control coil. The N300 controller will clear non-toggle type coils to acknowledge the state change has been acted upon. Toggle type coils hold their current state until changed either locally or remotely. The local/remote load cycle control (00007) determines whether a load cycle can be initiated via contact closure (local) connected to the load cycle inputs on the controller or by Modbus coil 00006 (remote). These coils are only active in an N300 Liquid system. Coil 00011 determines whether a remote inhibit can be initiated by a contact closure (local) connected to the inhibit inputs on the controller or by Modbus coil 00010 (remote). Coil 00009 is used to save all the current parameters to the controller EEPROM.

IMPORTANT:

Coil 00009, must be used to save any parameters that were changed via Modbus.

| Address | Access | Description |
|-------------|------------------|---|
| 00001 | Read/Write | Start/Stop the pump (toggle) |
| 00002 | Read/Write | System Standby (toggle) |
| 00003 | Read/Write | Reset Accumulated Stroke Count |
| 00004 | Read/Write | Reset Accumulated Odorant Injected |
| 00005 | Read/Write | Fill Verometer (toggle) |
| 00006 | Read/Write | Start/Stop a Load Cycle (toggle) (Liquid System Only) |

APPENDIX B: N-300 MODBUS SPECIFICATIONS

Boolean Registers

Control Functions, *Continued*

| Address | Access | Description |
|-------------|------------------|---|
| 00007 | Read/Write | Local/Remote Load Cycle Control (toggle) (Liquid System Only) |
| 00008 | Read/Write | Proportional to Time/Flow mode (toggle) |
| 00009 | Read/Write | Save Parameters to EEPROM |
| 00010 | Read/Write | Remote Inhibit / Run the N-300 (toggle) |
| 00011 | Read/Write | Local/Remote Inhibit Control (toggle) |

Status Functions

The status functions available via Modbus are listed below. The registers are accessed using Modbus function 1. Status labeled with an "L" after the Access types are latching type status. A latching status provides a "since the last read" type status where a set condition will hold it's state until a read of that particular register was made by the master device. Once a read is made, the status will reflect the current state.

| Address | Access | Description |
|-------------|---------------------|--|
| 00101 | Read Only | System Stopped (0) / Running (1) |
| 00102 | Read Only | Verometer Not-Filling (0) / Filling (1) |
| 00103 | Read Only | Not in Standby (0) / Standby (1) |
| 00104 | Read Only | Memory Module Invalid (0) / Valid (1) |
| 00105 | Read Only | Z-65 Backup Disabled (0) / Enabled (1) |
| 00106 | Read Only | English (0) / Metric (1) |
| 00107 | Read Only | Proportional to Time (0) / Proportional to Flow (1) |
| 00108 | Read Only | Analog (0) / Pulse (1) |
| 00109 | Read Only | Linear (0) / Non-Linear (1) or Pulses/Sec (0) / Pulses/Min (1)<-Gas PPMV(1)<-LPG |
| 00110 | Read Only | Gas (0) / Liquid (1) |
| 00111 | Read Only (L) | No Power-Up (0) / Power-Up (1) since last coil read |
| 00112 | Read Only | Odorant Tank LowAlarm Enabled (0) / Disabled (1) |
| 00113 | Read Only | Signal Alarms Enabled (0) / Disabled (1) |
| 00114 | Read Only | Verometer Alarms Enabled (0) / Disabled (1) |
| 00115 | Read Only | Pump Alarms Enabled (0) / Disabled (1) |
| 00116 | Read Only | Battery Alarm Enabled (0) / Disabled (1) |
| 00117 | Read Only (L) | No Parm Change (0) / Parm Change (1) since last coil read |
| 00118 | Read Only | Normal (0) / No Flow Standby (1) |
| 00119 | Read Only | Normal (0) / Remote Inhibit (1) |
| 00120 | Read Only (L) | New HOU/FLOW Data Available |
| 00121 | Read Only | No Load Cycle (0) / Load Cycle Active (1) – Liquid System Only |

APPENDIX B: N-300 MODBUS SPECIFICATIONS

Alarm Functions

The alarm functions available via Modbus are listed below. The registers are accessed using Modbus function 1. All the alarms are latching and provide a “since the last read” output where a set condition will hold it’s state until a read of that particular register was made by the master device. Once a read is made, the alarm will reflect the current state.

| Address | Access | Description |
|----------------|-----------------|--|
| 01001 | Read Only | Global Alarm (1) (set if any alarm condition exists) |
| 01002 | Read Only | Pump Failure Alarm (1) |
| 01003 | Read Only | Over Pump Alarm (1) |
| 01004 | Read Only | Under Pump Alarm (1) |
| 01005 | Read Only | Verometer Cable Alarm (1) |
| 01006 | Read Only | Verometer Slow Fill Alarm (1) |
| 01007 | Read Only | Verometer No Fill Alarm (1) |
| 01008 | Read Only | Verometer Over Fill non-Alarm (1) |
| 01009 | Read Only | Verometer Leakage Alarm (1) |
| 01010 | Read Only | Verometer Fill Valve Alarm (1) |
| 01011 | Read Only | Verometer Fill Rate non-Alarm (1) |
| 01012 | Read Only | Signal Low Flow non-Alarm (1) |
| 01013 | Read Only | Signal No Flow non-Alarm (1) |
| 01014 | Read Only | Signal Overflow non-Alarm (1) |
| 01015 | Read Only | Signal Overflow Alarm (1) |
| 01016 | Read Only | Signal Loss of Signal Flow Alarm (1) |
| 01017 | Read Only | Low Battery Alarm (1) |
| 01018 | Read Only | External Tank level High Alarm (1) |
| 01019 | Read Only | External Tank level Low Alarm (1) |
| 01020 | Read Only | Expansion Tank Pressure High Alarm (1) |
| 01021 | Read Only | Expansion Tank Pressure Low Alarm (1) |
| 01022 | Read Only | Expansion Tank Pressure Cable Alarm (1) |
| 01023 | Read Only | Odorant Inlet Pressure High Alarm (1) |
| 01024 | Read Only | Odorant Inlet Pressure Low Alarm (1) |
| 01025 | Read Only | Odorant Inlet Pressure Cable Alarm (1) |

APPENDIX B: N-300 MODBUS SPECIFICATIONS

Integer Registers

The integer data type could be used for the Results data and configuration/control parameters. The "holding registers" as referred to by the Modbus specification, are read/write registers. This 16-bit integer data type can be manipulated using functions 3, 6, and 16.

Function 3, allows the host to read one or more holding registers per query.

Function 6, allows the host to write a single holding register per query.

Function 16, allows the host to write multiple holding registers per query.

Result Data Functions

The result data functions available via Modbus are listed below. The registers are accessed using Modbus function 3.

| Address | Access | Description |
|-------------|-----------------|---|
| 40001 | Read Only | HOU/LOU – Accum. Odorant Usage – High - Unsigned integer *See formatting info. |
| 40002 | Read Only | HOU/LOU – Accum. Odorant Usage – Low - Unsigned integer *See formatting info. |
| 40003 | Read Only | HOU/LOU - Accumulated Flow rate – High - Unsigned integer *See formatting info. |
| 40004 | Read Only | HOU/LOU - Accumulated Flow rate – Low - Unsigned integer *See formatting info. |
| 40005 | Read Only | HOU/LOU Start Date (Day of Month/Month) (1-31/1-12) - BCD |
| 40006 | Read Only | HOU/LOU Start Date (Century/Year) (0000-9999) - BCD |
| 40007 | Read Only | HOU/LOU Start Time (Seconds/Minutes) (00-59/00-59) - BCD |
| 40008 | Read Only | HOU/LOU Start Time (Hours/Day of Week) (00-23/0-7) - BCD |
| 40009 | Read Only | HOU/LOU End Date (Day of Month/Month) (1-31/1-12) - BCD |
| 40010 | Read Only | HOU/LOU End Date (Century/Year) (0000-9999) – BCD |
| 40011 | Read Only | HOU/LOU End Time (Seconds/Minutes) (00-59/00-59) – BCD |
| 40012 | Read Only | HOU/LOU End Time (Hours/Day of Week) (00-23/0-7) – BCD |
| 40013 | Read Only | Stroke Count High (0000-9999) – BCD |
| 40014 | Read Only | Stroke Count Low (0000-9999) – BCD |
| 40015 | Read Only | Total Odorant Injected High (0000-9999) – BCD *See formatting info. |
| 40016 | Read Only | Total Odorant Injected Low (0000-9999) – BCD *See formatting info. |
| 40017 | Read Only | Model Number – Unsigned Integer *See formatting info. |
| 40018 | Read Only | Serial Number (xxxxx) – Unsigned Integer |
| 40019 | Read Only | Verometer Calibration Data – Unsigned Integer *See formatting info. |
| 40020 | Read Only | Odorant Tank Level (xxx %) – Unsigned Integer |
| 40021 | Read Only | Expansion Tank Pressure (xxx.x psi / x.xxx bar) – Unsigned Integer |
| 40022 | Read Only | Odorant Inlet Pressure (xxx.x psi / x.xxx bar) – Unsigned Integer |
| 40023 | Read Only | Calculated Time per Stroke High – Unsigned Integer – sec. |
| 40024 | Read Only | Calculated Time per Stroke Low – Unsigned Integer - (x.xx sec.) |
| 40025 | Read Only | Verometer Level (xxx.x %) – Unsigned Integer |
| 40026 | Read Only | Battery Voltage (xx.x volts) – Unsigned Integer |

APPENDIX B: N-300 MODBUS SPECIFICATIONS

* Model Specific Formatting information for Result Data functions

| Address | Description |
|-------------|---|
| 40001 | High bytes for Accumulated odorant injected, combine with address 40002 for total. |
| 40002 | 6300GE/LE = .XXXXX, 7300GE/LE = X.XXXX, 8300GE/LE = XX.XXX (lbs), 6300GM/LM = .XXXXX, 7300GM/LM = X.XXXX, 8300GM/LM = XX.XXX (kg) Note: Low bytes only, combine with address 40001 for total odorant injected. |
| 40003 | High bytes for Accumulated flow, combine with address 40004 for total. |
| 40004 | 6300GE = .XXXXX, 7300GE = X.XXXX, 8300GE = XX.XXX (MMCF/hr), 6300GM = X.XXX, 7300GM = XX.XXX, 8300GM = XXX.XX (M ³ /sec) 6300LE = XXX.XX, 7300LE = XXXX.X, 8300LE = XXXXX (gallons), 6300LM = XXX.XX, 7300LM = XXXX.X, 8300LM = XXXXX (liters), 6300/7300/8300LE (PPMV mode) = XXXXX (gallons), 6300/7300/8300LM (PPMV mode) = XXXXX (liters) Note: Low bytes only, combine with address 40003 for total accumulated flow. |
| 40015 | High bytes only, combine with address 40016 for total odorant injected. |
| 40016 | 6300 = .XXXX, 7300 = X.XXX, 8300 = XX.XX (lbs/kg) Note: Low bytes only, combine with address 40015 for total odorant injected. |
| 40017 | Model number format: 63XX = 6300, 73XX = 7300, 83XX = 8300. XX= 11= GE, XX=12=GM, XX=21=LE, XX=22=LM. Example: 6311 = 6300 Gas English, 7322 = 7300 Liquid Metric |
| 40019 | 6300 = XX.XXX, 7300 = XXX.XX, 8300 = XXXX.X (cc) |

Parameter functions

The result data functions available via Modbus are listed below. The registers are accessed using Modbus functions 3, 6, and 16.

Note: The system must be stopped in order for any parameter changes to be accepted. An exception response will be returned if a parameter change query is issued while the system is running. Once the parameter changes have been made, use coil 00009 to save the updated parameters before restarting the system.

| Address | Access | Description |
|-------------|------------------|--|
| 40101 | Read Only | Current Date (Day of Month / Month) (01-31 / 01-12) – BCD |
| 40102 | Read Only | Current Date (Century / Year) (0000-9999) – BCD |
| 40103 | Read Only | Current Time (Seconds / Minutes) (00-59 / 00-59) – BCD |
| 40104 | Read Only | Current Time (Hours / Day of Week) (00-23/01-07) – BCD |
| 40105 | Read/Write | Injection Rate - Unsigned Integer *See formatting info. |
| 40106 | Read/Write | Pump Displacement (cc/Stroke) – Unsigned Integer *See formatting info. |
| 40107 | Read/Write | Odorant Density – Unsigned Integer X.XX (GE/LE = lbs/gal, GM/LM = g/cc) |
| 40108 | Read/Write | Proportional to Time Stroke Rate X.XX (minutes) – Unsigned Integer |
| 40109 | Read/Write | Maximum Gas Flow – Unsigned Integer *See formatting info. |
| 40110 | Read/Write | Low Flow Shutoff (xx.x of Max Gas Flow) – Unsigned Integer |
| 40111 | Read/Write | Flow No Signal (xx.x of Max Gas Flow) – Unsigned Integer |
| 40112 | Read/Write | Maximum time per stroke (xxx minutes/stroke) – Unsigned Integer |
| 40113 | Read/Write | Odorant Output (lbs/pulse) – Unsigned Integer *See formatting info. |
| 40114 | Read/Write | Pulses per Second (xx Pulses/Seconds) – Unsigned Integer |
| 40115 | Read/Write | Pulses per Minute / Pulses per Gallon (xx Pulses/Minute - Gas, xx Pulses/Gal– Liquid PPMV) – Unsigned Integer |

APPENDIX B: N-300 MODBUS SPECIFICATIONS

Parameter functions, *Continued*

40116 Read/Write Odorant Tank Level High (xx %) – Unsigned Integer
40117 Read/Write Odorant Tank Level Low (xx %) – Unsigned Integer
40118 Read/Write Expansion Tank Pressure High (xx.x psi / x.xxx bar) – Unsigned Integer
40119 Read/Write Expansion Tank Pressure Low (xx.x psi / x.xxx bar) – Unsigned Integer
40120 Read/Write Odorant Inlet Pressure High (xx.x psi / x.xxx bar) – Unsigned Integer
40121 Read/Write Odorant Inlet Pressure Low (xx.x psi / x.xxx bar) – Unsigned Integer

* Model Specific Formatting Information for Parameter functions

Address 40105: **GE = X.XX (lbs/MMCF)**
 GM = XXX.X (mg/m³)
 LE = X.XX (lbs/10K gal)
 LM = XXX.X (mg/liter)
Address 40106: **6300 = X.XXXX, 7300 = X.XXX, 8300 = XX.XX (cc/stroke)**
Address 40109: **6300GE = X.XXXX, 7300/8300GE = XX.XXX (MMCF/hr)**
 6300GM = XX.XXX, 7300/8300GM = XXX.XX (m³/sec)
 6300LE = XXXX.X, 7300/8300LE = XXXXX (gal/min)
 6300LM = XXXX.X, 7300/8300LM = XXXXX (liter/min)
Address 40113: **6300 = X.XXXX, 7300 = X.XXX, 8300 = X.XX (English = lbs/pulse, Metric = kg/pulse)**

Exception Responses

Exception responses are a means for the Slave device to indicate to the Master device that a query received could not be acted upon for a particular reason. Below is a listing of Exception codes.

| Exception Code | Name/Description |
|----------------|--|
| 1 | Illegal Function: Function received in the query is not supported by the slave |
| 2 | Illegal Data Address: Data address received in the query is not supported by the slave |
| 3 | Illegal Data Value: Value contained in the query data field is not supported by the slave |
| 4 | Slave Device Failure: An unrecoverable error occurred while performing this action |
| 5 | Acknowledge: Query being processed but needs some time to complete |
| 6 | Slave device busy: Slave cannot process an incoming query at this time |
| 7 | Negative Acknowledge: Slave cannot perform the program function received |
| 8 | Memory parity error: A memory parity error occurred in the slave read attempt |

SECTION 16: APPENDIX C FORMS

For the Record

To assist in trouble shooting, if required, please record the following information as the NJEX 8300L is initialized for the first time.

Basic information on the NJEX-8300L

- Serial number: _____
- N-300 version (x.xx): _____
- Manufacturing date: _____
- Date of Start up: _____
- Technician's Name: _____

Location

- Site ID: _____
- Startup Technician: _____
- Site Telephone: _____

Conditions

- Pipeline Pressure: _____
- Expansion Tank Pressure: _____
25 psi (1.72 Bar) expansion tank pressure is required.
- Bulk Tank: _____
30-35 psi (2.07-2.41 Bar) bulk tank pressure range is required.
- Supply Actuation Pressure: _____
75 psi (5.17 Bar) supply actuation pressure is required.
- Pump Actuation Pressure: _____
Refer to System Schematic Illustration, Table 1, page 10 for required pressures.
- Gas Flow Rate: _____
Record in Gal./Min. or Liter/Min.
- Bulk Odorant Storage Level: _____
- Ambient Temp Range: _____
- Pump Stroke Volume: _____
Record in cc/stroke

Parameters

- Injection Rate: _____
- Pump Displacement: _____
- Odorant Density: _____
- Max Gas Flow: _____
- Low Flow Shutoff: _____
- Flow (no signal): _____
- Max Time/Stroke: _____
- Odorant Output: _____

Run Mode

Select One

- Proportional-to-Time
- Proportional-to-Flow

If Proportional to-Flow, select one

- Analog-Linear
- Analog-Non-Linear
- Pulses-per-Second

YZ SYSTEMS

NJEX TROUBLE SHOOTING FORM

ReturnTo: F: 1.936.788.5720,
Em: Service@yzhq.com

NJEX-8300L (serial number/N-300 version x.xx/mfg. date): _____

Date: _____ Your Name: _____

LOCATION :

Site ID: _____

Attending Technicians: _____

Telephone: _____

CONDITIONS :

Pipeline Pressure: _____

Expansion Tank (25 psi) (1.72 Bar): _____

Bulk Tank (30-35 psi) (2.07-2.41 Bar): _____ cc/stroke: _____

Supply Actuation (75 psi) (5.17 Bar): _____

Pump Actuation (See Flow Chart for pressure): _____ meter level: _____

Gas Flow Rate (Gal./Min.) (Liter/Min.): _____

Bulk Odorant Storage Level: _____ flow input: _____

Ambient Temp Range: _____

Date of Last Problem (mm/yr): _____ battery VDC: _____

PARAMETERS :

InjectionRate: _____ **RUN MODE :**

Pump Displacement: _____ Proportional-To-Time _____ Proportional-To-Flow _____

Odorant Density: _____ Analog _____

Max Gas Flow: _____ Linear _____

Low Flow Shutoff: _____ Non-linear _____

Flow (no signal): _____ Pulses _____

Max Time/Stroke: _____ PPS _____

Odorant Output: _____

ALARMS :

Pump

- ___ Overpumping
- ___ Underpumping
- ___ Pump Failure

Verometer

- ___ SlowFill
- ___ NoFill
- ___ Vmtr-Cable
- ___ FLValve-Fail
- ___ Leakage
- ___ Odorant Inlet Cable
- ___ Odorant Inlet Low
- ___ Odorant Inlet High
- ___ XTank Cable
- ___ XTank Low
- ___ XTank High

Signal

- ___ Low Flow
- ___ Over Flow
- ___ Loss of Signal

Tank

- ___ Low Level
- ___ High Level

Battery

- ___ Low Battery

PUMP PROBLEMS ONLY :


The correct hydraulic fluid level should be even with the "Oil Level Indication" located approximately 1/2 way down in the oil reservoir.

- CHECK ONE :** ___ level is fine and moves up and down with each stroke
___ level is low but still moves fine
___ level does not move

APPENDIX D: DOCUMENTS


N-300 Controller Display

Diagram, Figure 212



System Installation Notes and Recommendations

The manufacturer's system installation instructions and the National Electric Code, Canadian Electrical Code where applicable, must be followed when installing this equipment. Tampering or replacement with non-factory components may adversely affect the safe use of the system. Only the specified batteries should be used with this apparatus. For guidance on installation see ANSI/ISA 12.6 Installation of Intrinsically Safe Instrument Systems in Class I Hazardous Locations.




$V_{max} \geq V_{oc}$
 $I_{max} \geq I_{sc}$
 $C_A \geq C_C + C_{CABLE}$
 $L_A \geq L_C + L_{CABLE}$

For CSA Certification:

- Analog input option and pulse input option should not be connected at the same time.
- Barriers must be CSA certified with entity parameters and must be connected in accordance with manufacturers instructions.
- All system I/O wiring must be shielded/grounded twisted pair cable. Typical routing path shown.
- Strip system I/O cable insulation and shield a maximum of 1 1/4" from conductor ends.
- Solar Panel and DC power input option for the SPS-12 cannot be connected at the same time.
- SPS-12 and LPS 120/240 power supplies cannot be connected at the same time.
- SPS-12, SPO-12, and LPS 120/240 power supplies are not ATEX (European) certified.
- No two input power options can be connected at the same time.

| REV | DATE | DESCRIPTION | [REH] |
|-----|---------|--|-------|
| 4 | 8/5/04 | ECO-0270 | [REH] |
| 3 | 2/3/04 | ECO-0259 | [REH] |
| 2 | 9/26/03 | ECO-0248 | [REH] |
| 1 | 3/2/01 | Added Notes 5 & 6. Added DC Power Option | [REH] |



CERTIFIE CONFORME A L'EXECUTION

SIGNATURE _____ DATE _____

** NO CHANGES ARE TO BE MADE TO THIS DRAWING WITHOUT PRIOR CSA APPROVAL.

| | |
|---|---|
| YZ SYSTEMS 3101 POLLOK DR. CONROE, TEXAS 77303 DESCRIPTION NJEX 63/73/8300 WIRING CONTROL DOCUMENT | DRAWING NO: 1E-0345 R4 |
| | SCALE: NTS |
| SHEET 1 OF 1 C SIZE | DRAWN: [Signature] DATE: 2/21/01 CHECKED: _____ DATE: _____ APPROVED: _____ DATE: _____ |

THIS DRAWING, AND ALL INFORMATION CONTAINED HEREIN REMAINS THE PROPERTY OF YZ SYSTEMS, INC. ALL RIGHTS ARE EXPRESSLY RESERVED AND MAY NOT BE REPRODUCED IN WHOLE OR IN PART WITHOUT YZ SYSTEMS, INC. WRITTEN CONSENT.

APPENDIX E: N-300 ATEX CONNECTIONS

ATEX System Connections

Required field connections to place the 7300G into operation are as follows:

1. Connect your I.S. Power Supply to the yellow cable connection coming from the bottom of the N-300 controller, and exiting the rear of your system enclosure, *refer to the Wiring Control Document on page 116 in Appendix D.*
2. Connect the flow signal device to the termination block located in the system control enclosure, *figure 8, refer to the Wiring Control Document on page 116 in Appendix D.*
- 2a. If used, connect the optional Inhibit Input signal to the termination block located in the system control enclosure, *figure 8, refer to the Wiring Control Document on page 116 in Appendix D.*
- 2b. If used, connect the RS-485 communication wiring as required to the termination block located in the system control enclosure, *figure 8, refer to the Wiring Control Document on page 116 in Appendix D.*



I.S. Power Supply
Connection

APPENDIX E: N-300 ATEX CONNECTIONS



3101 Pollok Drive

Conroe, Texas 77303

800.653.9435

P: 936.788.5593

F: 936.788.5698

Em: Service@yzhq.com

Web: www.yzsystems.com

*YZ Systems, Inc. represents and warrants that for a period of 3 years from receipt of the product: (1) the product will be free from defects in materials and workmanship; and (2) the product will perform substantially in accordance with product manuals, literature, or documentation. Any written or oral information or advice given by YZ representatives, agents, or employees will in no way increase the scope of this warranty. If the product fails to comply with the warranty set forth herein, YZ's entire liability and the customer's exclusive remedy will be replacement of the product(s) or, at YZ's option, YZ's reasonable effort to make the product meet the warranty set forth herein. **YZ disclaims all other warranties, either expressed or implied, including but not limited to, implied warranties or merchantability and fitness for a particular purpose, with respect to the product.** This limited warranty gives you specific legal rights. You may have others, which vary from state to state. **These remedies are not available outside of the United States and Canada.** In no event shall YZ or its suppliers be liable for any damages whatsoever (including, without limitation, damages for loss of profits, business interruption, loss of information, or other pecuniary loss) arising out of the use of or inability to use the product, even if YZ has been advised of the possibility of such damages. Information contained in this document is subject to change without notice and does not represent a commitment on the part of YZ Systems, Inc. All prices quoted are in U.S. dollars, F.O.B. Snyder, Texas. LINC, LINC Chemical Pumps, and LINC Level & Flow Switches are trademarks of YZ Systems, Inc. All other product names and/or registered trademarks are the property of their respective holders. YZ support services are subject to YZ's then-current prices, terms, and conditions, which are subject to change without notice. All prices and specifications, if published, are subject to change without notice.*