

## Donning the Sentinel XL® HP Powered Air Purifying Respirator (PAPR) System



### A. CHARGE BATTERY PACK



1. Plug battery charger into socket at back of the battery pack and connect to an electrical outlet. Charge battery pack for approximately five hours before use. The battery charger LED will flash green when charging is complete.

### B. REMOVE VISOR FILM



2. Head cover outer visor protective film: Grasp film and remove completely.
3. Head cover inner visor protective film: Grasp film and remove completely.

### C. PREPARE FILTERS FOR USE




4. Remove sealed cap from filters.

### D. TURN BLOWER ON



5. Depress switch on top of blower. A short beep should sound and light the red LED continuously. Audible beeping and blinking red LED light indicates low battery. Leave contaminated area and recharge.

### E. CHECK AIR FLOW

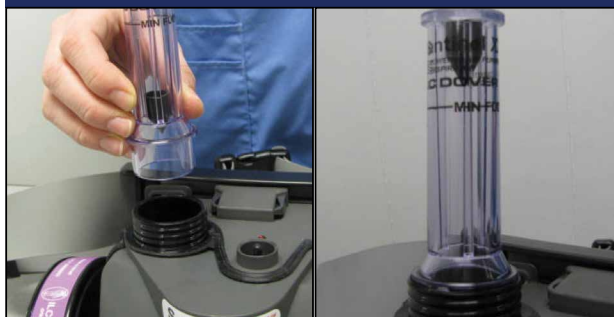

6. Ensure canisters are installed on the blower. Switch blower on. A short beep should sound. Place flow meter in the blower's hose connector.
7. If the upper portion of the black cone is above the indication line on the flow meter, the system is ready for use.

### F. ATTACH BREATHING HOSE



8. Screw female hose connector of breathing hose to male connector on blower. Hand tighten
9. Screw other end of breathing hose to connector on male connector on head cover. Hand tighten.

### G. DONNING BLOWER UNIT



10. Turn on blower and place waist belt with blower attached around waist.
11. Snap buckle closed. Adjust waist belt by pulling belt outward until snug.

### H. DONNING HEAD COVER



12. Open head cover opening.
13. Place over head.
14. Adjust chin opening for comfort.
15. For proper fit, the elasticized head band and face seal should come in contact with your face under the chin and along the jawline.

**Note: Refer to Owner's Manual for detailed instructions.**

### FILTERS REPLACEMENT



1. After Decon, turn filters counterclockwise. Unscrew filters and discard. Before installing new filter check gasket for any damage.

### WAIST BELT REMOVAL



1. After removing filters, grasp waist belt plate and depress both sides of plate tabs while pulling outward.
2. Remove waist belt.