

# Installation and Operation Manual



**Truck Blower**



PRGMAN-05  
Version: C  
January, 2026

## ***Safety Precautions***

- Rotating shafts can be dangerous; they can snag clothes, skin, hair, hands, etc. This can cause serious injury or death.
- **Do not** work under the vehicle when the engine is running.
- **Do not** work on a shaft (with or without a guard) when the engine is running.
- **Do not** engage or disengage driven equipment by hand from under the vehicle when the engine is running.
- In order to avoid becoming entangled, install the power take off and/or shaft behind the frame rail, tanks, battery box, etc.
- If power takes off and/or shaft are still exposed after installation, install a guard.
- Use provided drive shaft flange set screws and apply “Loctite® 243” or equivalent.
- Install a support strap when servicing a drive shaft to prevent personal injury.

### ***A serious or fatal injury can occur. . .***

- If you lack proper training.
- If you fail to follow proper precautions.
- If you do not use proper tools and safety equipment.
- If you assemble drive shaft components improperly.
- If you use incompatible drive shaft components.
- If you use worn-out or damaged drive shaft components.
- If you use drive shaft components in a non-approved application.

### ***This manual contains safety instructions. Read, understand, and follow this manual.***

- Get proper training.
- Learn and follow safe operating procedures.
- Use proper tools and safety equipment.
- Use proper components in good condition.

# Safety Notice



# Table of Contents

<b>Section</b>	<b>Page</b>
Safety Precautions.....	1
Safety Notice .....	2
Blower Specifications.....	4
Mounting .....	5
Power Take Off.....	5
Blower Orientation.....	5
Mounting Bracket Requirements.....	7
Drive Shaft Installation.....	7
Determine Blower Mounting Slope.....	7
Suction Equipment.....	9
Delivery Discharge Pipework.....	9
ECM/TCM Programming .....	10
Blower Operation .....	11
Lubrication Instructions.....	12
Preventative Maintenance .....	13
Safety Checklist .....	14
Parts Listings.....	15
Warranty Information.....	21

# P657 Blower Specifications

Airflow	Max Operating Pressure	Max Vacuum	RPM Range	Weight
221-604 CFM	18 PSI (20 PSI intermittent)	17 inHg	1000-2000 RPM	297

**Note:**

Reduce the maximum operating pressure by 1 PSI for each 2000 feet of altitude above sea level.

(Example: at an altitude of 4000 feet, the max operating pressure of the blower will decrease by 2 PSI)

(Fig. 1)

PTO Speed RPM	Pressure								Vacuum					
	12 PSIG		16 PSIG		18 PSIG		20 PSIG		12 inHg		15 inHg		17 inHg	
	CFM	HP	CFM	HP	CFM	HP	CFM	HP	CFM	HP	CFM	HP	CFM	HP
<b>1000</b>	246	19							247	10	222	12		
<b>1100</b>	282	21	265*	28					283	11	258	13		
<b>1200</b>	318	23	301*	31	293*	34			319	12	294	14		
<b>1300</b>	354	25	337	33	329	37	321*	41	355	14	330	17	310*	19
<b>1400</b>	390	27	372	36	365	40	357*	45	390	14	365	17	346*	19
<b>1500</b>	425	29	408	39	400	43	393*	48	426	14	401	18	328*	20
<b>1600</b>	461	31	444	41	436	46	429*	51	462	15	437	19	418*	22
<b>1700</b>	497	33	480	44	472	49	465*	55	498	16	473	20	453*	23
<b>1800</b>	533	35	516	47	508	52	500*	58	534	17	509	22	489*	24
<b>1900</b>	569	37	551	49	544	55	536*	61	569	18	544	23	525*	26
<b>2000</b>	604	40	587	52	579	58	572*	65	605	19	580	24	561*	27


\*Intermittent operation only

# Mounting the P657 Blower

## Power Take Off

- PTO Horsepower and torque rating must be adequate for desired blower RPM and pressure demand.  
(See P657 Blower Specifications Fig.1, Page 4)
- Select proper ratio for the desired engine speed and correct blower input shaft speed.  
(Engine RPM x PTO ratio = Blower RPM. Blower RPM 1000 min, 2000 max)
- Verify PTO rotation (See Fig.2).

(Fig. 2)

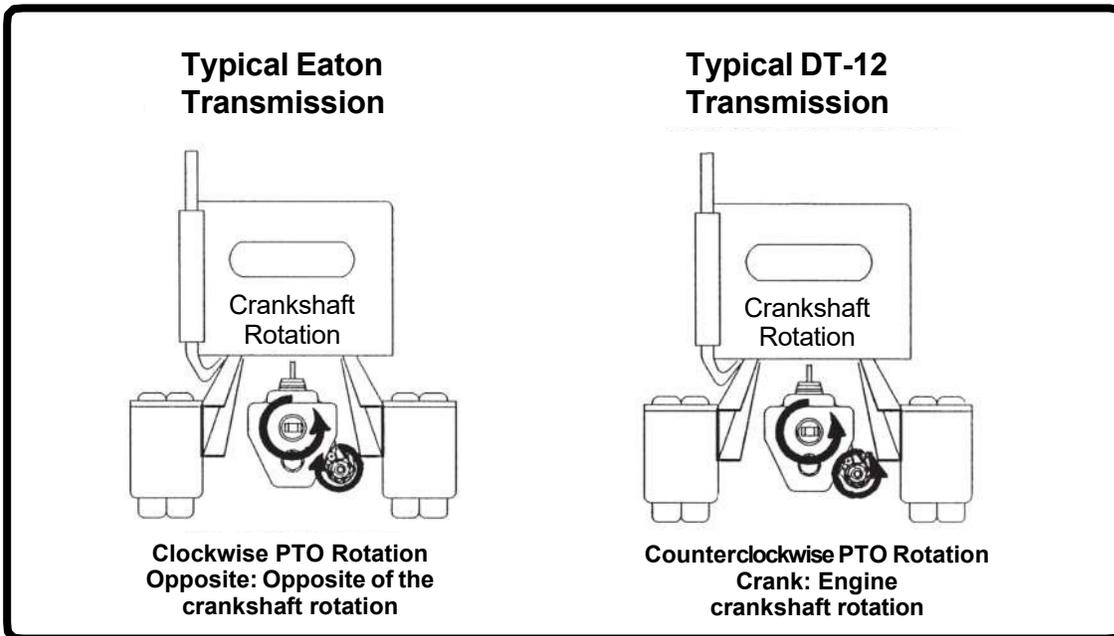

## Blower Orientation (See Fig. 3-Page 6)

- Determine the desired blower orientation prior to mounting.

**Note:**

Blowers should be mounted on the same side of the truck as the PTO Location to keep drive shaft angles to a minimum.

- Ensure sight glasses, melt plugs, magnetic plugs, and breathers are in the correct positions prior to mounting.

**Note:**

Melt plugs are left-hand threads. One plug must be on the discharge side of the blower.

- Sight glass should **ALWAYS** be on the lower side opening, closest to the frame rail.
- The magnetic drain plug should **ALWAYS** be installed pointing down.
- The breathers should **ALWAYS** be installed on the top of the oil tanks, shielded from elements.


**Note:**

Remote breather kits are available for harsh environments.

(Fig. 3)

### Horizontal Airflow - HA

### Vertical Airflow - VA

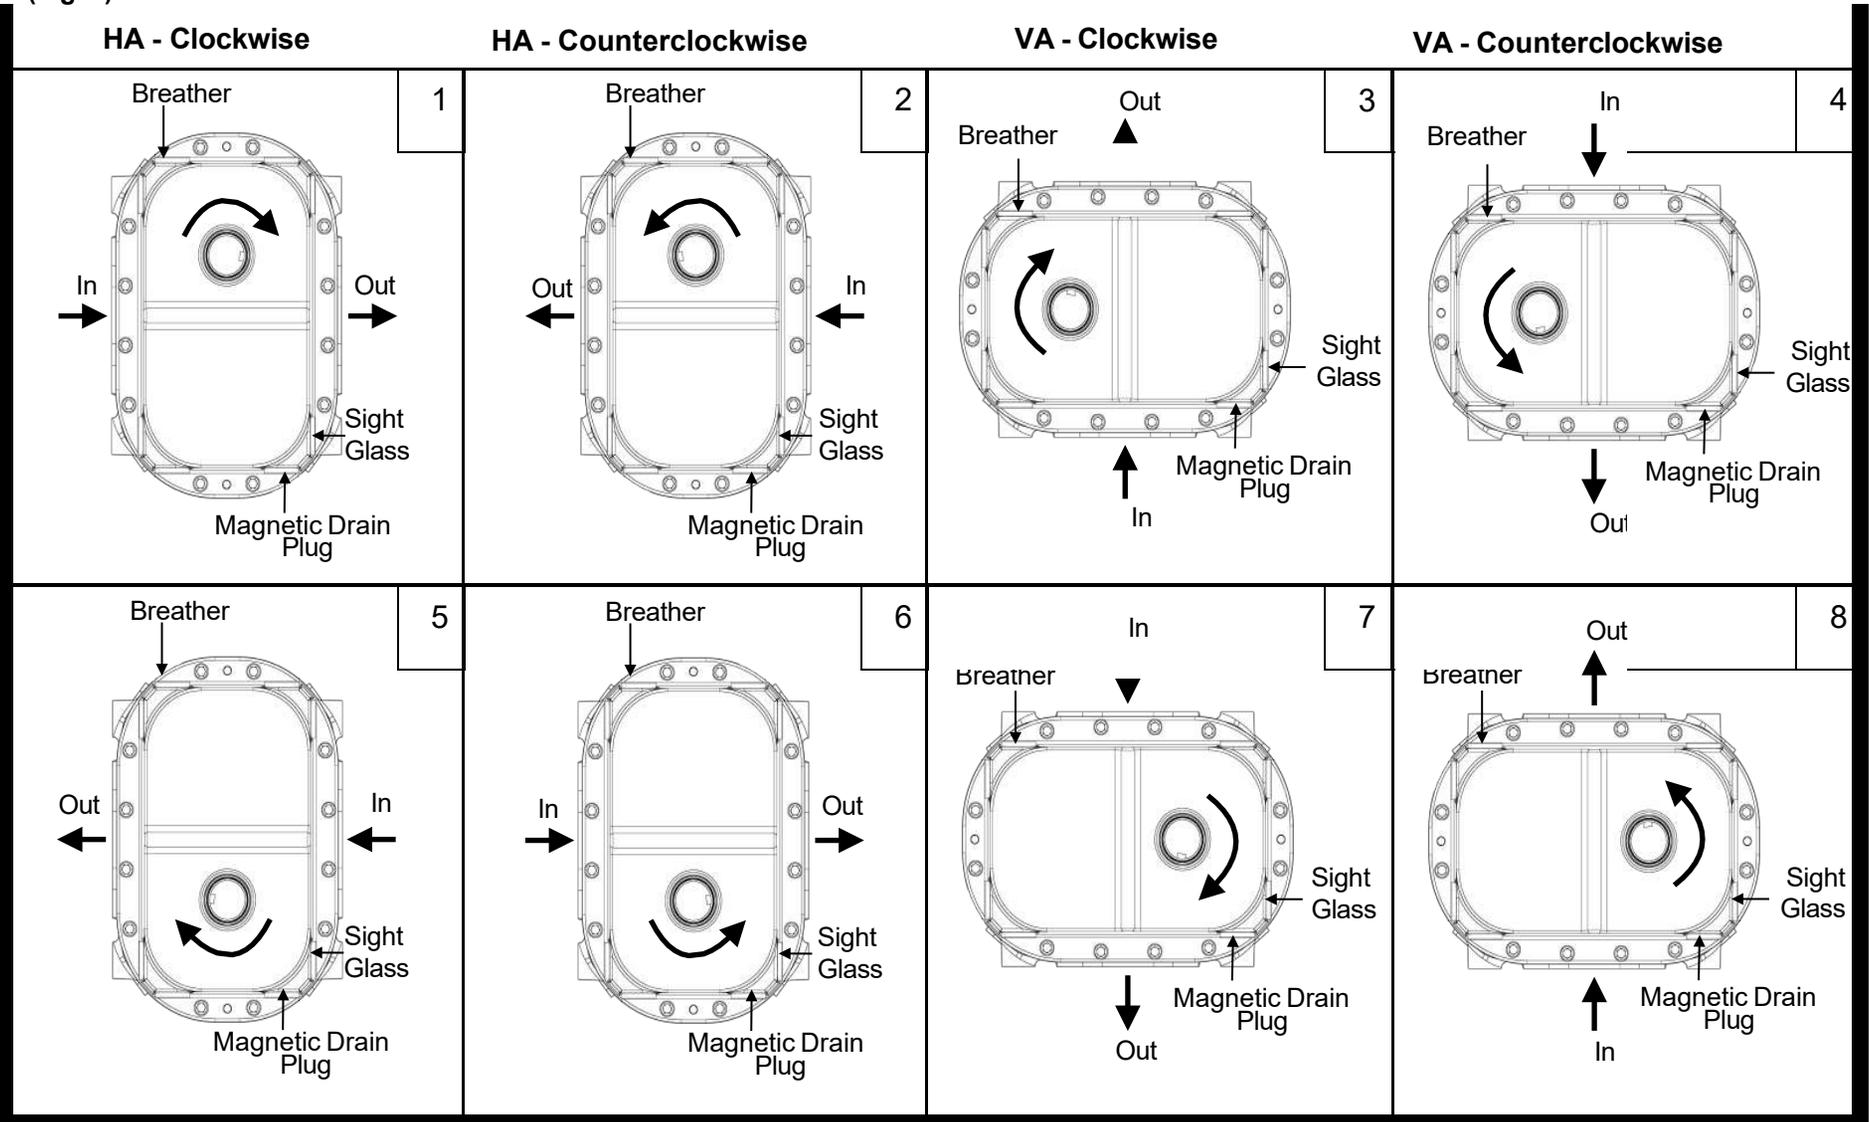

All sight glasses, magnetic drain plugs, and breathers are shown for driver side installation, reverse sight glass locations for passenger side installation.

## Mounting Bracket Requirements

- The use of Paragon brackets is recommended.
- Should be strong enough to support the P657, accessories, and torque required.
- Must allow minimum of 3/4" clearance between the blower and frame rail to prevent damage to the blower.
- Use Qty (4), 5/8" diameter bolts to mount the P657 Mounting Bracket to the tractor frame rail.

## Drive Shaft Installation



### Caution


Drive shaft and other components may shift with changes in suspension.

- Paragon strongly recommends consultation with a local drive shaft specialist **PRIOR** to drilling the tractor frame rail.
- At a minimum a drive shaft specialist should verify the following:
  - Required length meets industry standards for safe operation at the desired rpm.
  - Drive shaft is capable of operations for the required rpm.
  - Equipment slopes are correct to minimize torsional vibrations.
  - Confirm the drive shaft working angles are within industry specifications for safe operation (See Fig.4).
- A minimum 3" diameter DOM Tubing x 0.083 wall thickness be used for P657 Blower applications.
- That each drive shaft section has a "U" bolt hanger bracket for safety (See Fig.5, Page 8).
- A minimum Drive Shaft critical speed of 2000 rpm.

## Determine Blower Mounting Slope

- Attach mounting bracket to the blower.
- Torque mounting bolts to the required torque (77 lbs·ft)
- Clamp the blower in place on the frame rail while supporting the equipment from underneath.
- Contact a drive shaft specialist.

(Fig. 4)

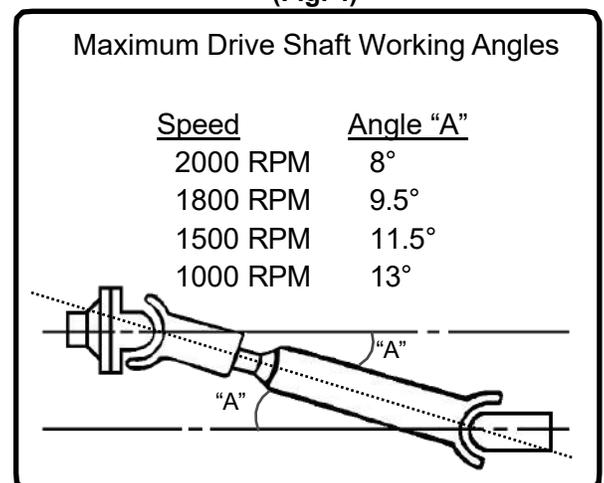

(Fig. 5)


<b>1310 Drive Flange - 1-5/8" w 3/8" key Paragon Part Number: 560-044</b>	<b>1350 Drive Flange - 1-5/8" w 3/8" key Paragon Part Number: 560-039</b>
---	---

**(Included with Paragon Mounting Kits)**

**Drive Shaft to be field supplied.**

<b>1310 Companion yoke Industry part# 2-2-329</b>	<b>1350 Companion yoke Industry part# 3-2-119</b>
---	---

**(not provided by Paragon)**

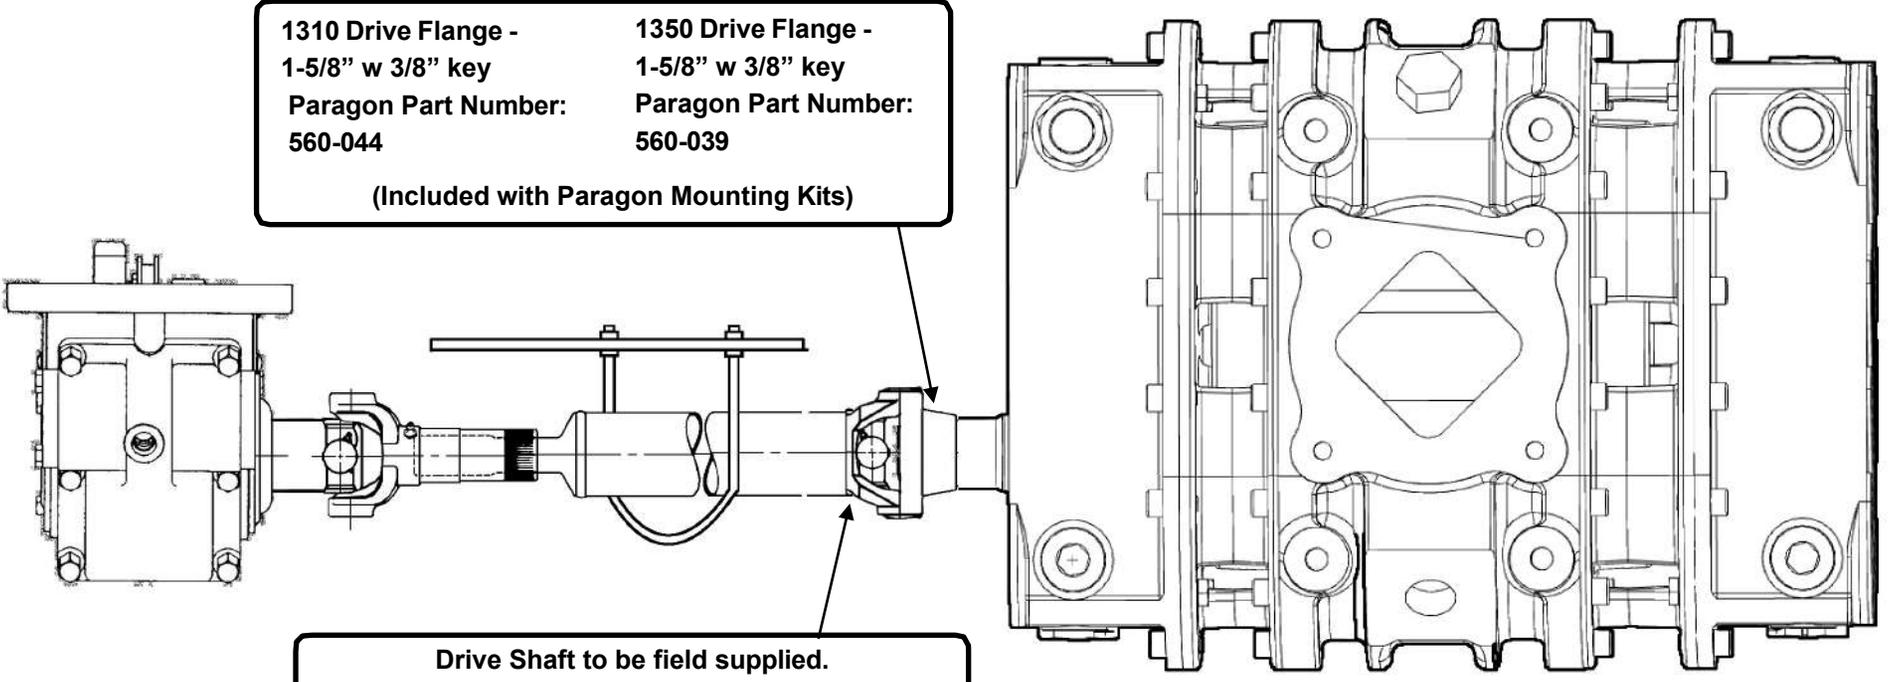

## Suction (Inlet) Equipment

- Ensure the Inlet flange is torqued to 30 lb/ft.
- Ensure the Air Filter is sized for the correct airflow (CFMs) operating range of the blower.
- Ensure the Air Filter is mounted as far from any heat sources as possible.



**Caution** *An undersized filter will cause damage to the equipment (overheating)*



**Caution** *The filter should not exceed 17 inches of water restriction.*

- Ensure a Vacuum Relief Valve is used if any equipment will be used for vacuum duty of any kind.
  - Ensure Vacuum Relief Valve is sized for the correct CFM.
  - Ensure Vacuum Relief Valve rating does not exceed 15 inHg.
  - A Vacuum Relief Valve should be positioned between the filter outlet and P657 Inlet Flange.



**Caution** **If operating under vacuum a Vacuum Relief Valve should be installed.**

- Inlet Pipework should be free of weld beads, foreign metal, and debris before installing.
- For vacuum applications all rubber elbows must have reinforcement to prevent collapsing during normal operations.

## Delivery Discharge Pipework

- Ensure Discharge Flange is torqued to 30 lb/ft when installed.
- Ensure all delivery pipework is free from weld beads, foreign metal, and debris.
- Ensure all pipework components are capable of withstanding discharge temperatures and pressures.
- Ensure the Pressure Relief Valve is mounted as close as possible to the blower discharge.

**Note:**

**Pressure Relief Valves need to be checked weekly and replaced periodically; these must be placed in a serviceable location.**

- If a Silencer or Check Valve is installed, ensure it is sized for the proper CFM range.
- Ensure these are mounted downstream of the Pressure Relief Valves.

**Note:**

**Check Valves will protect the equipment from back flow of product. These must be inspected and replaced periodically.**

## *ECM/TCM Programming*

- Paragon recommends that a factory dealer/technician program your tractor for optimal ECM/TCM performance.
- Ensure the engine range RPM is programmed within the operational limits of the P657 Blower.
- Ensure the engine RPM ramp up rate, after PTO engagement, is set for no more than 100 rpm per second.
- Ensure the torque output settings are correct for the equipment operation parameters.

**Note:**

**For more available options regarding ECM/TCM programming, please contact your local chassis dealer.**

## *Pre-Start Up*

- Engine is off and keys are not in the ignition.
- Ensure all connections are supported.
- Ensure the Camlock (discharge) connection is venting to atmosphere.
- Ensure the air filter is properly installed and free of contamination.
- Ensure the P657 can be turned by hand.
- Ensure all equipment supplied labels are installed.
- Ensure all fasteners are installed and torqued properly.
- Ensure ECM parameters are properly set (if applicable).
- Ensure oil level is correct (see page 12 for details).

## **Blower Operation**

- Inspect blower mounting, drive shaft, P.T.O. and air filter for integrity.
- Remove camlock dust cap and connect the hot air hose.
- Follow trailer manufacturer's recommendation regarding hose connections and proper valve operation.
- Slowly engage P.T.O. with engine at idle as per PTO manufacturer's recommendations.
- Bring engine RPM up to operating speed and engage preprogrammed RPM.
- Unload trailer as per trailer manufacturer's recommendation.
- While discharging, visually check blower for vibration, mechanical noise, or excessive heat.
- If blower relief valve or melt plug is activated, reduce the line pressure to 0 psi.
  - Shut down the P657 by disengaging the PTO, shut off the engine, and check for blockages
- Disengage P.T.O. according to manufacturer's instructions, shut off engine.
- Disconnect blower hose and replace camlock dust cap.



**Caution** The blower and accessories will become hot enough to cause skin burns on contact.



**Warning** Rotating machinery is dangerous.



**Warning** Always wear ear protection when in close proximity to blower.


# Lubrication Instructions

- Use Paragon Lobe Blower Oil (part number: 409-007).

**Note:**

Front oil tank will fill slower than the rear tank. Allow oil to settle after it begins to show in the sight glass.

(Fig. 6)

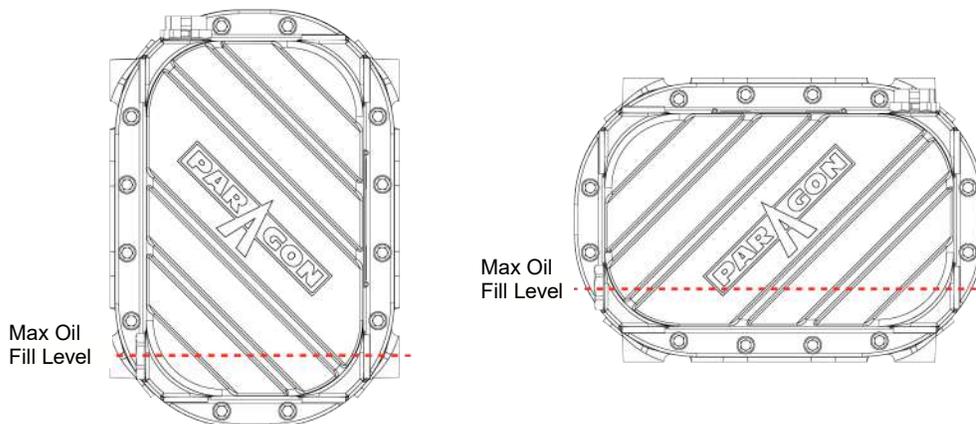

Sight Glass  
Filling  
Instructions



Correct Level



Over filled



Under Filled

Oil Capacity	Horizontal Air Flow (Standard Mount)	Vertical Air Flow
Drive End (Front Cover)	14 oz (0.4 qt.)	28 oz. (0.9 qt.)
Non-Drive End (Rear Cover)	15 oz (0.5 qt.)	29 oz. (0.9 qt.)



**Caution** Mixing or incorrect oil can result in gear and bearing failure.

## Preventative Maintenance

- A proper maintenance program will keep your P657 blower in top running condition. A newly installed P657 blower should be checked frequently during the first month of operation. **Use only Paragon Blower Oil.** Check oil levels and add as needed.
- An oil analysis program is recommended.
  - In the absence of an oil analysis program, change oil in both tanks every 500 hours.

**Note:**

**Correct Oil Level is 1/2 to 7/8 full on the sight glass (See Fig. 6-Page 12). Air bubbles must be visible at the top of sight glass.**

### Daily

1. Check and maintain oil levels, add oil as necessary.
2. Check Air Filter restriction indicator.

### Weekly

1. Check and maintain oil levels, add oil as necessary.
2. Check Air Filter restriction indicator.

### Monthly

1. Inspect the entire system for leaks.
2. Inspect condition of oil and change if necessary.

### Semi-Annually

1. Inspect the PTO components.
2. Use an oil analysis program.

# Safety Checklist

## Complete prior to blower operation

Truck # \_\_\_\_\_

Transmission# \_\_\_\_\_

P.T.O.# \_\_\_\_\_

P.T.O. Ratio \_\_\_\_\_


Blower model # P657 Blower \_\_\_\_\_

Blower serial # \_\_\_\_\_

Date \_\_\_\_\_

Inspected by \_\_\_\_\_


- Read and understand Installation Manual.
- The following have been verified before installing the PTO:
  - PTO model # matches packaged model #.
  - PTO mounting flange is correct for desired P657 mounting location.
  - PTO ratio has been verified.
  - PTO torque capabilities are acceptable for blower operation.
  - PTO rotation is correct for desired P657 orientation.
- PTO is mounted per manufacturer's recommendation.
- Transmission has been filled to the proper oil level as required by the manufacturer.
- The Blower can be rotated by hand without lobes touching or clashing.
- Drive shaft is installed correctly.
- Provided drive shaft flange set screws have been installed with "Loctite® 243" or equivalent.
- Air Inlet is installed as far away from heat sources as possible.
- All bolt torques have been verified.
- All supplied warning labels have been installed.
- The correct Relief Valve has been installed properly.
- Melt Plug is installed on the discharge side of the blower.
- Sight glasses and magnetic drain plug can be seen to identify oil level in P657 oil tanks after installation.
- Breathers are installed in the proper location.
- P657 front and rear oil tanks are filled to the proper levels (1/2 to 7/8 full).

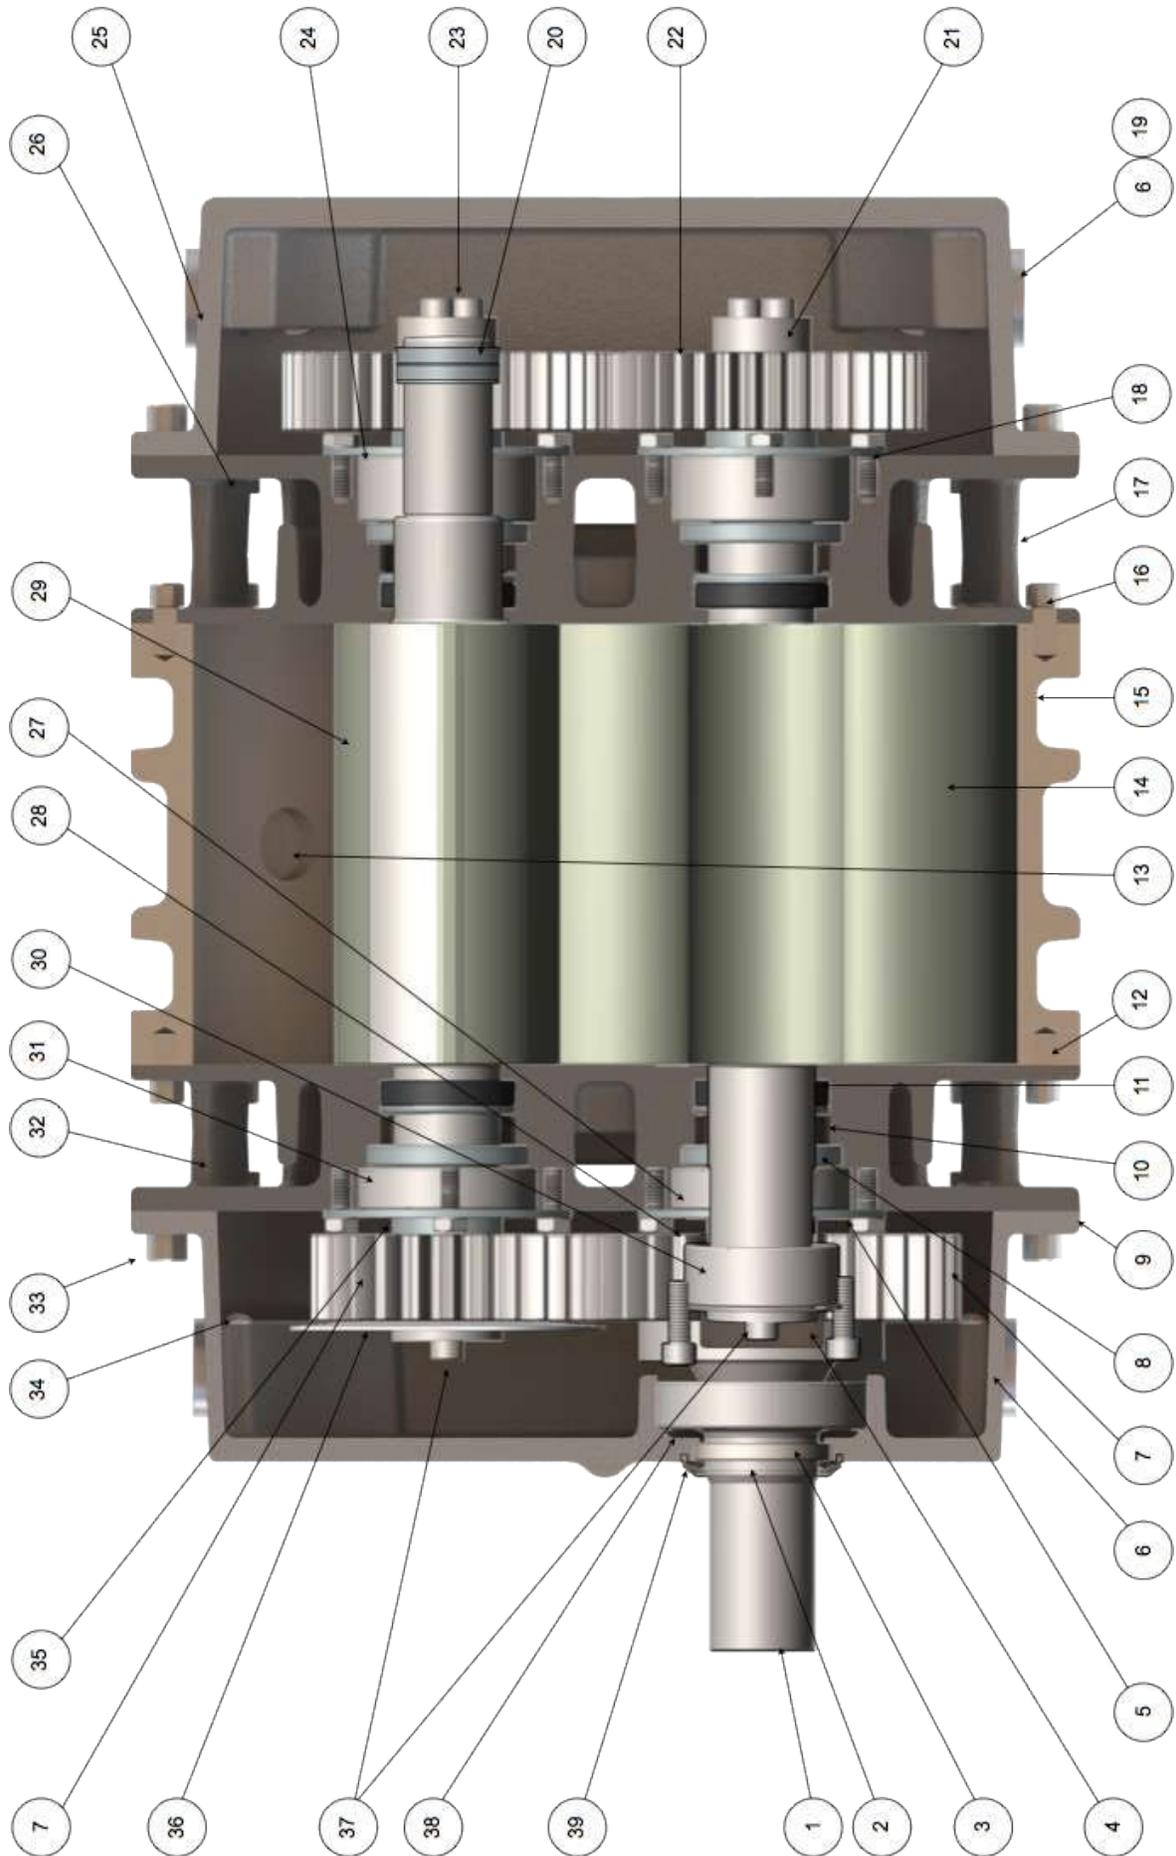

## P657 Blower Spare Parts


Item	Part#	Description	Qty
1	503-005	P657 Shaft Drive	1
2	571-023	Spacer	1
3	555-007	Oil Seal, Shaft	1
4	296-021	Washer, Rotor	2
5	128-008	Capscrew	16
6	141-001	Plug, Magnetic	2
7	529-004	Step Up Gear Set	1
8	555-008	Tank/Sideplate Oil Seal	4
9	523-037	Blower DE Cover	1
10	297-003	Ring, Internal Snap Retaining Lab Seal	4
11	556-038	Labyrinth Seal	4
12	274-002	Dowel Pin	6
13	543-003	Melt Plug	2
14	502-007	Blower Driven Rotor	1
15	500-035	Body	1
16	224-006	Capscrew	32
17	501-010	Sideplate, Blower NDE	1
18	582-018	Bearing Retainer	4
19	323-005	Hyd. Plug	10
20	582-020	Retainer - Inner Lock Ring	4
21	582-019	Retainer Bushing	2
22	529-003	Timing Gear Set	1
23	124-027	Capscrew	10
24	510-006	Double Row Bearing	2
25	523-036	Blower NDE Cover	1
26	228-030	Capscrew	8
27	571-022	Drive Gear Spacer	1
28	582-022	Spiral Ring Retainer	2
29	502-006	Blower Drive Rotor	1
30	510-007	Bearing, Double Row, Step Up	1
31	512-003	Bearing, Rolling	2
32	501-011	Blower DE Sideplate	1
33	224-014	Capscrew	24
34	527-030	Oil Deflector	4
35	571-021	Bearing Spacer	3
36	527-025	Slinger, Blower	1
37	124-008	Socket Capscrew	2
38	512-004	Roller Bearing	1
39	558-002	Seal, Gamma Rotary w/ Labyrinth P657 Drive Shaft	1
40	198-000	Key, Parallel Small Gear <b>(Not Shown)</b>	1
41	174-004	Spring Pin <b>(Not Shown)</b>	1
42	192-000	Rivet <b>(Not Shown)</b>	4
43	See 543-003	Blank Plug - Lefthand <b>(Not Shown)</b>	2
44	355-008	Hyd Sight Glass <b>(Not Shown)</b>	2
45	409-007	Oil, Quart <b>(Not Shown)</b>	3
46	526-037	Bonded Sealing Washer <b>(Not Shown)</b>	16
47	613-001	Hyd Breather Assembly	2

## P657 Air Filter Assembly - Spare Parts

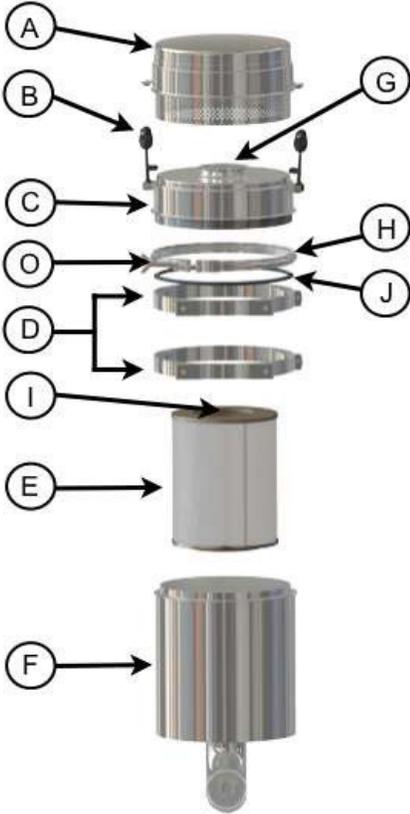

Item	P/N	Description	Qty
A	576-009	Cap Assembly	1
B	576-012	Rubber Flex Latch	2
C	576-010	Head Assembly- P657/CDL9/CDL12/ Latches	1
D	612-043	Kit, Bracket (set of 2) -S/S Air Filter Mounting	1
E	575-005	Filter Element - CDL9/CDL12/P657 *For Filter Assembly 625-003	1
F	576-007	Body-CDL9/CDL12/ P657	1
G	533-045	Camlock 4" Male	1
H	576-008	Clamp Assembly 3/8" *Includes Wingnut (Item O)	1
I	634-000	Wing Nut, filter element - P657 (Not Shown)	1
J	526-000	Gasket	1
O	184-004	SS hex body for Filter Band Clamp	1

Item	P/N	Description	Qty
A	576-009	Cap Assembly (PSI/VAC)	1
B	576-012	Rubber Flex Latch	2
C	576-010	Head Assembly - P657/Latches	1
D	612-043	Kit, Bracket (set of 2) - S/S Air Filter Mounting	1
G	533-045	Camlock 4" male	1
H	576-008	Clamp Assembly 3/8" *Includes Wingnut (Item O)	1
J	526-000	Gasket	1
K	575-007	Filter Sock for 573-003 Element *Installs on the inside of the filter element	1
L	576-013	Cap Assembly (PSI only)	1
M	573-003	Filter Element - P657 *For Filter Assembly 625-006 & 625-002	1
N	576-006	Body - P657 Side Outlet	1
	576-018	Body - P657 Side Outlet w/ Gauge (PSI/VAC only)	1
O	184-004	SS hex body for Filter Band Clamp	1

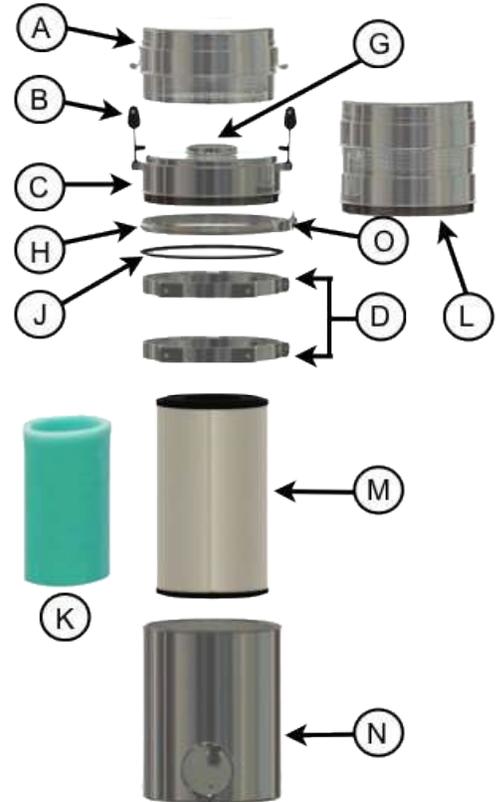



## Vertical (VA) Airflow Diagram




#	P/N	Description	Qty
1	601-014	P657 Blower	1
2	508-109	VA Bracket	1
3	508-110	VA Blower Mounting Strap	2
4	560-044	P657 Drive Flange 1310 Series	1
5	228-093	P657 Blower Mount Bolts	4
6	296-014	Flat Washer	6
7	294-011	Lock Washer	6
8	284-015	Hex Nut	2
9	228-052	Capscrew	4
10	296-022	Flat Washer	4
11	294-009	Lock Washer	4
12	284-009	Nyloc Hex nut	4
13	625-003	Filter Assy S/S PSI/VAC 4" Bottom Outlet	1
14	587-018	Hose, Hump - 4"	1
15	526-036	Gasket, Delivery, Suction - P657	1
16	509-034	Flange, Suction Alum, P657	1
17	224-023	Capscrew- Socket Head	4

#	P/N	Description	Qty
18	296-012	Flat Washer	4
19	291-002	Hose Clamp, Worm	2
20	563-002	Muffer, 4" TTMA X 4" FNPT - Steel	1
21	533-005	Elbow, 2" Street - Galvanized	1
22	610-012	Relief Valve, 2" NMPT - 16 psi	1
22	610-013	Relief Valve, 2" NMPT - 18 psi	1
23	509-033	Flange, Discharge Cast Iron P657 VA	1
24	526-036	Gasket, Delivery, Suction - P657	1
25	526-011	Gasket, 4" TTMA	1
26	567-002	Camlock 3" Maie X 4" MNPT - Alum	1
26	533-045	Camlock 4" Male X 4" MNPT - Alum	1
27	565-001	Camlock Dust Cap 3" - Alum	1
27	565-002	Camlock Dust Cap 4" - Alum	1
28	224-023	Capscrew- Socket Head	4
29	296-011	Flat Washer	4
30	228-105	Capscrew - Hex Head	8
31	284-008	Hex Nut	8
32	296-008	Flat Washer	8



## Horizontal Airflow (HA) Diagram

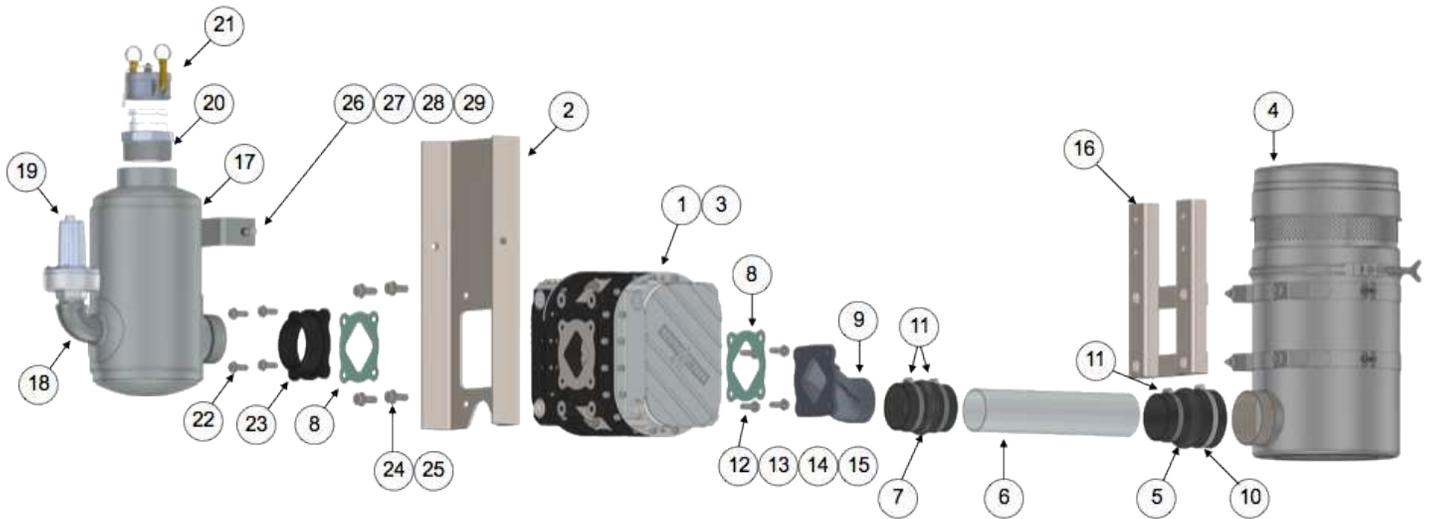


#	P/N	Description	Qty
1	601-014	P657 Blower, with 3 Qts of Oil	1
2	508-107	HA Blower Bracket - P657 (Straight)	1
2	508-113	HA Blower Bracket - P657 Drivers Side	1
2	508-114	HA Blower Bracket - P657 Pass. Side	1
3	560-044	P657 Drive Flange 1310 Series (not shown)	1
4	625-006	Air Filter Assy S/S - P657 PSI Only 5" Side outlet	1
4	625-002	Air Filter Assy S/S - P657 PSI/Vac 5" Side outlet	1
4	625-026	Air Filter Assy S/S - P657 PSI/Vac 5" Side outlet, with Vacuum Gauge	1
5	587-000	Hose, Hump 5" X 4"	1
6	588-010	Tube, 4" od X 24" long	1
7	587-018	Hose, Hump 4"	1
8	526-036	Gasket, Delivery, Suction - P657	1
9	509-032	Flange, Suction Alum - P657 HA	1
10	291-012	Hose Clamp 4" - 6"	1

#	P/N	Description	Qty
11	291-002	Hose Clamp 3" - 5"	3
12	228-052	Capscrew - Hex Head	4
13	296-022	Flat Washer	4
14	294-009	Lock Washer	4
15	284-009	Nyloc Hex Nut	4
16	623-022	Air Filter Mounting Kit	1
17	563-000	Muffler, 4" MNPT X 4" FNPT Steel	1
17	563-007	Muffler, 4" MNPT X 4" FNPT Steel w Temp. Gauge (not for food grade or sensitive products)	1
17	563-001	Muffler, 4" MNPT X 4" FNPT Stainless Steel	1
17	563-002	Muffler, 4" MNPT X 4" FNPT Stainless Steel w Temp. Gauge	1
18	533-005	Elbow, 2" Street - Galvanized	1
19	610-012	Relief Valve, 2" NMPT - 16 psi	1
19	610-013	Relief Valve, 2" NMPT - 18 psi	1



## Horizontal Adjacent Airflow (HAA) Diagram

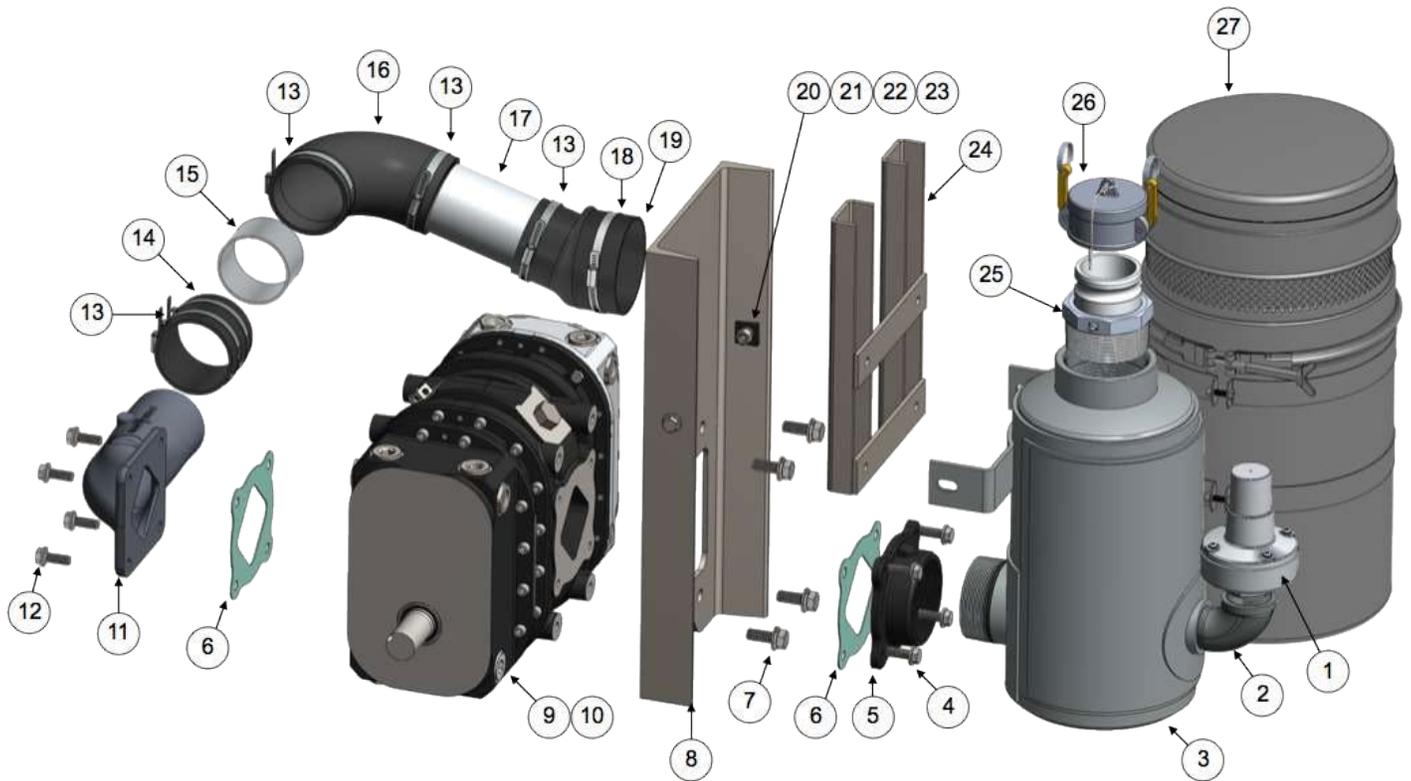

#	P/N	Description	Qty
1	610-012	Relief Valve 2" MNPT - 16 psi	1
1	610-013	Relief Valve 2" MNPT - 18 psi	1
2	533-005	Elbow, 2" Street	1
3	563-007	Muffler - Steel w/ Temp. Gauge	1
3	563-001	Muffler w/ Bracket - Stainless Steel	1
3	563-002	Muffler - Stainless Steel w/ Temp. Gauge	1
3	563-000	Muffler w/ Bracket - Steel	1
4	224-023	Capscrew - Socket Head	4
5	509-031	Discharge Flange	1
6	526-036	Flange Gasket	1
7	228-093	Capscrew - Hex Head	4
7	294-011	Lock Washer	4
8	508-107	Mounting Bracket (Straight)	1
8	508-113	Mounting Bracket - Driver Side	1
8	508-114	Mounting Bracket - Passenger Side	1
9	601-014	P657 Blower	1
10	560-044	Drive Flange	1
11	509-034	Suction Flange	1
12	224-023	Capscrew - Socket Head	4

#	P/N	Description	Qty
12	228-012	Capscrew - Hex Head	4
13	291-002	4" Hose Clamp	5
14	587-019	Hose, 3-1/2" long x 4" ID - EPDM	1
15	588-012	P657 HAA Tube - Aluminum	1
16	533-019	4" Rubber Elbow	1
17	588-011	P657 HAA Tube - Aluminum	1
18	291-012	5" Hose Clamp	1
19	587-000	Hump Hose 5" x 4"	1
20	284-000	Hex Nut	2
21	228-074	Capscrew - Hex Head	2
22	293-004	Beveled Washer	2
23	294-010	Lock Washer	2
24	623-022	Mounting Kit	1
25	567-002	Camlock 3"	1
25	533-045	Camlock 4"	1
26	565-001	Camlock Dust Cap 3"	1
26	565-002	Camlock Dust Cap 4"	1
27	625-006	Bare Filter Assembly	1

# Warranty Statement

PGWAR-1-100

Date Issued: 05/01/2025

## GENERAL PROVISIONS AND LIMITATIONS

Paragon Tank Truck Equipment LLC (the "Company") warrants to each original retail purchaser ("Purchaser") of its products from the Company or its authorized distributor that such products are, at the time of delivery to the Purchaser, made with good material and workmanship. No warranty is made with respect to:

1. Any product which has been repaired or altered in such a way, in the Company's judgment, as to affect the product adversely.
2. Any product which has, in the Company's judgment, been subject to negligence, accident, improper storage, or improper installation or application.
3. Any product which has not been operated or maintained in accordance with the recommendations of the Company.
4. Components or accessories manufactured, warranted and serviced by others.
5. Any reconditioned or prior owned product.

*Claims for items described in (4) above should be submitted directly to the manufacturer.*

## WARRANTY PERIOD

The Company's obligation under this warranty is limited to repairing or, at its option, replacing, during normal business hours at an authorized service facility of the Company, any part which in its judgment proved not to be as warranted within the applicable Warranty Period as follows.

Product Type	Warranty Duration
New	18 months from date of shipment, or 12 months after initial startup date, whichever occurs first.
Remanufactured	12 months from date of shipment, or 12 months after initial startup date, whichever occurs first.
Repair	12 months from date of shipment, or remaining warranty period, whichever is greater.

All product furnished by seller but manufactured by others bear only that manufacturer's standard warranty. Replacement parts not specifically called out in an above table are warranted for 90 days from shipment. Any disassembly or partial disassembly of any of the package components, or failure to return these "unopened" per Company instructions, will be cause for denial of warranty.

The Company reserves the right to withdraw the Warranty where evidence indicates application outside the stated performance area, or where there is evidence of abuse.

## LABOR TRANSPORTATION AND INSPECTION

The Company will provide labor, by Company representative or authorized service personnel, for repair or replacement of any product or part thereof which in the Company's judgment is proved not to be as warranted. Labor shall be limited to the amount specified in the Company's labor rate schedule and would expressly exclude labor for the removal and reinstallation of the Paragon product from the customer's equipment.

Labor costs in excess of the Company rate schedules caused by, but not limited to, location or inaccessibility of equipment, or labor provided by unauthorized service personnel is not provided by this warranty.

All costs of transportation of product, labor or parts claimed not to be as warranted and, of repaired or replacement parts to or from such service facilities shall be borne by the Purchaser. The Company may require the return of any part claimed not to be as warranted to one of its facilities as designated by the Company, transportation prepaid by Purchaser, to establish a claim under this warranty.

If a warrantable complaint occurs within 90 days from shipment:

1. Freight will be reimbursed for both the replacement item and the returned suspect part (if Requested by Paragon). This allowance will cover only transportation via Paragon selected most economical method within the continental United States, Canada and Mexico. Premium transportation and/or handling charges will not be covered or pro-rated.
2. Concerning distributors in Canada & Mexico, reimbursement for duty and brokerage fees at actual cost that cannot be recovered from Customs Officials, but not to exceed 20% of the distributor net price, will be allowed for warrantable complaints within 90 days.
3. Copies of related invoices must be provided with the submission of the claim to be considered.

Replacement materials provided under the terms of the warranty are warranted for the remainder of the Warranty Period of the product upon which installed to the same extent as if such parts were original components.

**DISCLAIMER**

THE FOREGOING WARRANTY IS EXCLUSIVE AND IT IS EXPRESSLY AGREED THAT, EXCEPT AS TO TITLE, THE COMPANY MAKES NO OTHER WARRANTIES, EXPRESSED, IMPLIED OR STATUTORY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY.

THE REMEDY PROVIDED UNDER THIS WARRANTY SHALL BE THE SOLE, EXCLUSIVE AND ONLY REMEDY AVAILABLE TO THE PURCHASER AND IN NO CASE SHALL THE COMPANY BE SUBJECT TO ANY OTHER OBLIGATIONS OR LIABILITIES. UNDER NO CIRCUMSTANCES SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EXPENSES, LOSSES OR DELAYS HOWSOEVER CAUSED.

No statement, representation, agreement, or understanding, oral or written, made by any agent, distributor, representative, or employee of the Company which is not contained in this Warranty will be binding upon the Company unless made in writing and executed by an officer of the Company.

This warranty shall not be effective as to any claim which is not presented within 30 days after the date upon which the product is claimed not to have been as warranted. Any action for breach of this warranty must be commenced within one year after the date upon which the cause of the action occurred.

Any adjustment made pursuant to this warranty shall not be construed as an admission by the Company that any product was not as warranted.



**Paragon Tank Truck Equipment**

[www.paragondirect.com](http://www.paragondirect.com)



©2026 Paragon Tank Truck Equipment, LLC Printed in U.S.A.

PRGMAN-05\_C 1st Ed. 01/26  
Supersedes PRGMAN-05\_B 1st Ed. 04/25

 Please recycle after use.

