



WP Group
Lubricating Oil Delivery System

Operating Instructions



Gardner
Denver


GARDNER DENVER LTD
P.O. Box 468
Cross Lane
Tong, Bradford
England
BD4 0SU
Tel: 01274 683131

INDEX

	Page
System Control using Remote Handset	3 - 6
Basic Meter Head Operating Instructions	7
Manual Override Operation	8


Lube Oiler Operating Instructions

1. Engage vehicle Power Take-off unit.
2. Press system enable and ensure selector switched to Remote pump.

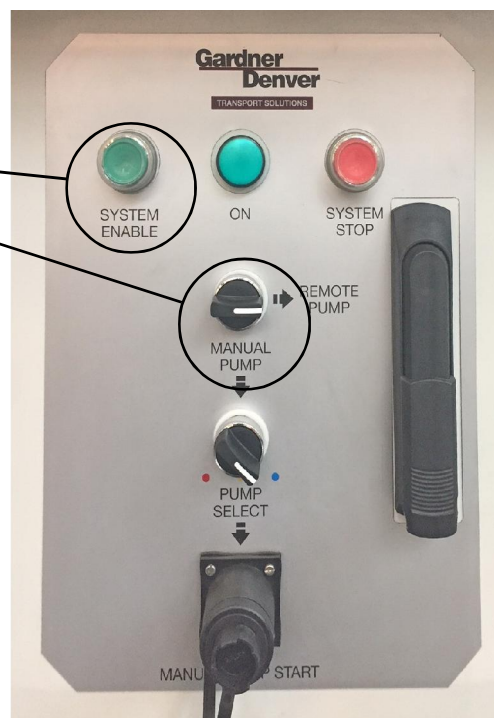

3. On Remote, Press and hold Green Menu button to turn on remote


4. Press DEL.SETUP

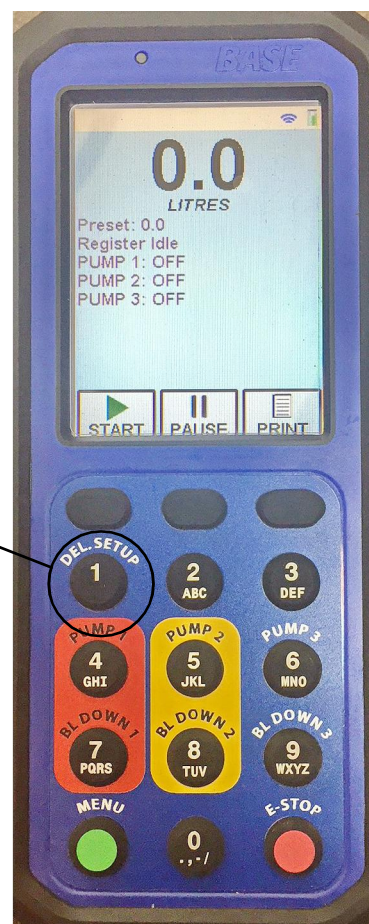

Lube Oiler Operating Instructions

5. Note - The Meter highlighted will be the current Meter selected.

Press SELECT to display all Meters, then use arrow keys (up / down) to select and highlight desired Meter and press SELECT.

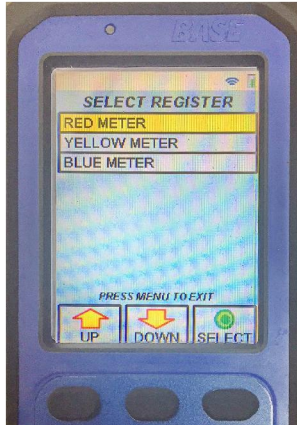

6. Use arrow keys to highlight 'preset window' then press SELECT.



7. Enter required amount and press SELECT.



Lube Oiler Operating Instructions

8. Selected Meter and preset will be displayed.
Press Green Menu button.




9. Press 'START'. This will send programmed information to Meter Head.




10. To commence product flow press required PUMP button:

RED pump	=	4
YELLOW pump	=	5
BLUE pump	=	6

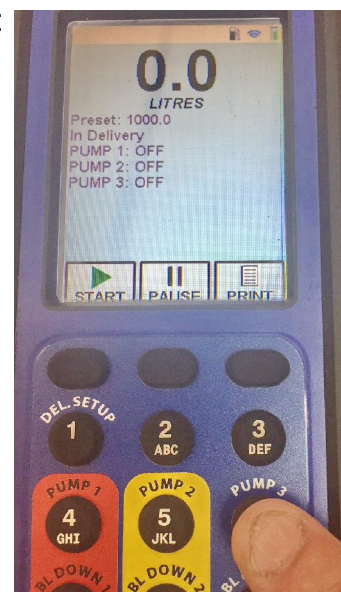

Lube Oiler Operating Instructions


11. Adjust hydraulic speed control valve to attain desired product flow rate.

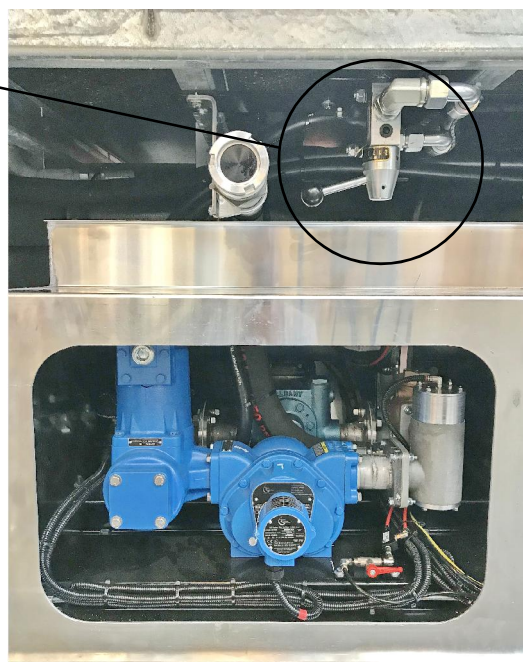

12. When delivery complete press selected PUMP button again to stop the pump.

- ☐ If you wish to add to the preset:
a. Press DEL.SETUP and follow steps 6 onward.


13. Press PRINT to print ticket and complete delivery. Press 'BL DOWN' for selected pump to clear the delivery hose

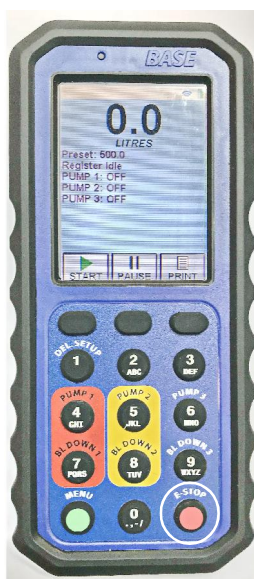

NOTE! - In the event of using the emergency stop button 'E-stop' the system will require re-setting. To do this dis-engage and re-engage the PTO unit and follow set-up procedure - Step 2 onwards.

Lube Oiler Operating Instructions

Basic Operating Instructions

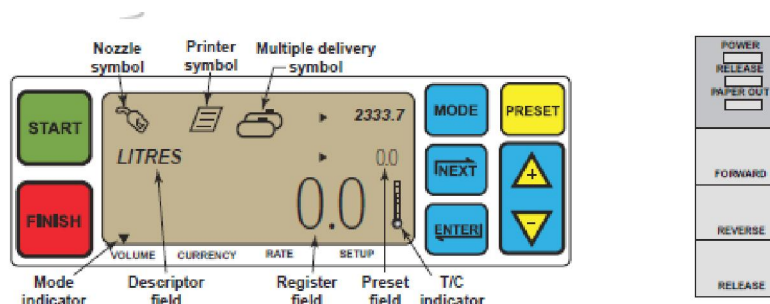

TO MAKE A PRESET DELIVERY

1. To make a Preset delivery, press the "PRESET" button to show preset Litres Then Press Next
2. CHANGE PRESET. will appear Press "NEXT".
3. Use the Next key to move the cursor to the required position then use the + and – keys to put in the quantity to deliver
4. When the number you want is in the preset field press "ENTER" to accept.
Press Start this will now ask you to select product .Select the product required and Press Enter
Open the Manual Preset Valve to commence delivery * if a single product only the meter will start automatically.
5. Attach the delivery hose and attach to the customers tank. (*Please Note that this may be the first operation required - company policy)
6. Begin delivery. The preset value will count down as the delivery value counts up.
7. The system will slow down towards the end of the delivery and then stop when the preset amount is reached. When the delivery is complete, push FINISH twice The ticket will print automatically and the printer symbol will flash when finished

1. INSERT TICKET IN PRINTER

2. PRESS **PRESET** THEN **NEXT**
3. PRESS **NEXT** THEN **+** TO SHOW ZERO PRESET DISPLAY
4. USE **NEXT** TO MOVE THE CURSOR AND **+** / **-** TO ENTER PRESET AMOUNT
5. PRESS **ENTER** TO SET PRESET VALUE
6. PRESS **START**
7. SELECT PRODUCT WITH **+** / **-**
8. PRESS **ENTER** TO BEGIN DELIVERY
9. PRESS **FINISH** TWICE TO PRINT TICKET AND END DELIVERY.

Lube Oiler Operating Instructions

Manual Override Operation

1. Remove black extension lead from the side locker and plug into front of Control Box.
2. Plug Tail lift control into black extension lead.



3. Selection Manual Override on control box.
4. Select Colour of system you wish to use – Red / Yellow / Blue.
5. Depress and hold button on tail lift control to pump, release button to stop.
6. The manual blow down is accessed by lift the side guards and operating the appropriate red handled ball valve in front of each pump.

The delivery should now be complete:

1. Disengage the PTO.
2. Switch the engine off.
3. Close all suction ball valves.
4. Put blank caps back on suction lines.
5. Stow all suction hoses away.
6. Rewind the hose reel.
7. Put the lid back on the IBC.
8. Plug remote control into charge.