OPERATOR'S MANUAL

SP0412X2XXXXXXX

RELEASED: **REVISED:**

11-26-21

INCLUDING: OPERATION, INSTALLATION AND MAINTENANCE.

INCLUDE MANUALS: AF0412SXXXXXX-XX-X Extrusion Pump (97999-1497), AF0412TXXXXXX-XX-X Extrusion Pump (97999-1924), 66732-X Follower Assembly (pn 97999-213), 67485-X Follower Assembly (pn 97999-1808), 67347-X Follower Assembly (pn 97999-1102), 67532-X, Follower Assembly (pn 97999-1914), 67536-X Follower Assembly (pn 97999-1912), RM051S-XXX-XX-B Single Post Lift / Ram (pn 97999-1790), and S-636 General Information (pn 97999-636).

(REV: B)

4-1/4" AIR MOTOR 12:1 RATIO 6" STROKE

SINGLE POST RAM PACKAGE **5 GALLON**




READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS EQUIPMENT.


It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

SERVICE KITS

- Use only genuine ARO® replacement parts to assure compatible pressure rating and longest service life.
- **637489** for repair of AF04XX-XX air motor.
- 104302 for repair of R37121-100 regulator.
- **104327** for repair of P39344-110 filter / regulator.
- **637465** for repair of lift / ram seals.
- **637071-XX3-B** for repair of 66243-XX3-B lower pump section on SP0412S2XXXXXXX models.
- K1756TXXXXXX for repair of 1756T11XX47 lower pump section on SP0412T2XXXXXXXX models.

MODEL DESCRIPTION CHART

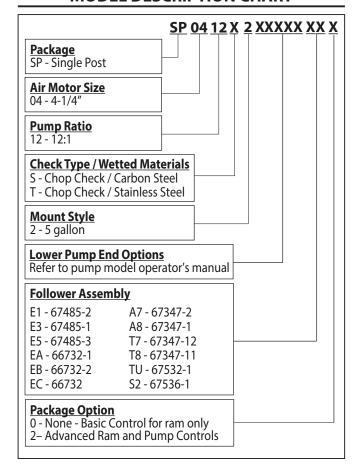

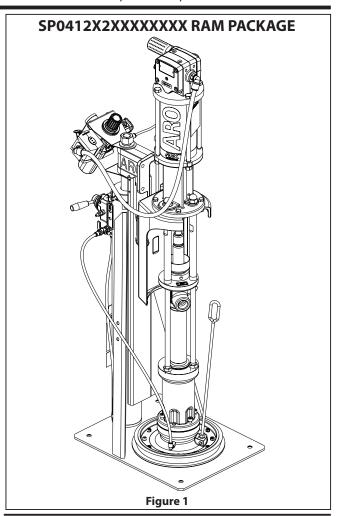

GENERAL DESCRIPTION

By delivering a smooth, continuous bead of the proper size, an ARO system helps the operator maintain both production rate and produce high quality standards. Maintained quality standards assures that the material benefits are realized. To further maximize operator production time, the ARO system has a built-in lift / ram feature for quick and easy drum changeover and easy lifting of the pump assembly from the

container. ARO systems are totally enclosed, sealing the material in the system from air and moisture, preventing premature cure-out of the material. This allows for either continuous or intermittent use of the system and allows the need for daily system clean-up.





INSTALLATION

The SP0412X2XXXXXXXX Ram System comes completely assembled. Remove the unit from the crate and place on a level surface. Install the material hose and dispensing device as required.


When the following instructions are observed, heavy paste materials can be pumped directly from their original drum without air inclusion or excessive waste. The follower plate creates an air tight seal as well as clean-wiping action in its progressive downward movement into the drum.

OPERATING INSTRUCTIONS

OPERATING INSTRUCTIONS / INITIAL SET-UP PROCEDURE

AWARNING STAND CLEAR WHEN RAISING OR LOWERING THE LIFT.

Read the warnings on page 3 of RM051S-XXX-XX-B Single Post Lift / Ram Operator's Manual.

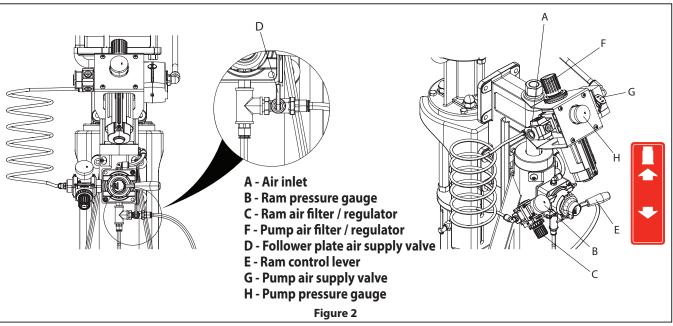

TO RAISE THE LIFT, (the first time):

- Take note of the pump / drum clearance above. Be certain the lift / ram is clear of any objects above. Also, refer to "Operating and Safety Precautions" found on page 3 of RM051S-XXX-XX-B Single Post Lift / Ram Operator's Manual.
- 2. Connect the air supply (120 psig / 8.27 bar max.) to the air inlet. Adjust the air pressure on the lift / ram pressure regulator (turn the knob clockwise) to 20 psig (1.4 bar).
- 3. Shift the control valve lever to the "up" position.
- 4. Raise the lift / ram high enough to clear the height of the drum. Stop the lift upward travel by moving the control valve lever to the "neutral" (center) position.
- 5. Once the lift / ram assembly and pump are in the "up" position, place and center an opened 5 gallon drum of material on the lift / ram base.
- Lubricate the lower follower wiper plate seal with grease.
 This ensures a smooth fit into the drum, as well as prevents curing type compounds from bonding to the seal.
 NOTE: Make certain the grease is compatible with the material being dispensed.
- 7. Check the vent plug on the follower plate to be sure it easily threads in and out. It is recommended to lubricate the threads of the plug to help prevent possible set-up of the compound at this point (see RM051S-XXX-XX-B Operator's Manual).

TO LOWER LIFT:

NOTE: Be certain the follower plate vent plug has been removed so that the air trapped between the follower and the material is allowed to escape from this vent. Captured air between the follower plate and drum will escape.

NOTE: The lift / ram may hesitate momentarily before starting downward. The air pressure inside the post air chamber must decrease before it will begin to descend.

- 1. Shift the control valve lever to the "down" position and proceed to lower the pump.
- 2. Replace the vent plug once the material begins to ooze from the vent opening.
- The unit is now ready for operation. Open the pump air supply valve. Adjust the air pressure on the pump filter / regulator (turn the pump regulator knob clockwise) until the pump begins to cycle.
- 4. Trigger the gun to prime the pump with material.

Page 2 of 4 SP0412X2XXXXXXXX (en)

TO RAISE LIFT, (normal operation):

- 1. Close the pump air supply valve.
- 2. Adjust the follower plate air valve pressure up to approximately 8 psig (0.55 bar). **DO NOT OVER PRESSURIZE THE DRUM** to avoid damage. NOTE: Air from this valve will only pass when the control lever is in the "up" position.
- 3. Shift the control valve lever to the "up" position.
- 4. Raise the lift / ram high enough to clear the height of the drum. Stop the lift upward travel by moving the control valve lever to the "neutral" (center) position.


TO CHANGE THE DRUM:

NOTE: The control valve lever must be in the "neutral" position

- 1. To avoid damage, **DO NOT OVER PRESSURIZE THE DRUM.**
- 2. Open the follower plate supply valve to allow air under the follower plate.
- 3. Shift the control valve lever to the "up" position.
- 4. Unscrew the thumb screw and remove the old drum.

		-				
			PARTS LIST / SP	041	12X2	2XXXXXXXX
Item	Description (size)	Qty	Part No.		Item	Description (size)
*1	Tubing (1/2" OD x 33")	(1)	94978-(①)		8	Lock Washer (3/8")
*2	90° Male Fitting (1/2 NPT x 1/2" OD)	(1)	59756-362		9	Cap Screw (3/8" - 16 x
*3	Tubing (5/16" OD x 38")	(1)	94980-(②)		10	Nut (3/8" - 16)
4	Pump Assembly	(1)	AF0412S1XXXXX		11	Wet-Sol "Plus" (1 qu
		(1)	(for SP0412S2XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX		*12	Male Elbow
			(for SP0412T2XXXXXXXXX)		*13	Cap Screw
*5	Single-Post Lift / Ram	(1)	RM051S-XXX-XX-B		1	Bulk Tubing (1/2" OD
*6	Follower Assembly	(1)			2	Bulk Tubing (5/16" O
<u> </u>	(refer to model description on page 4)				*	Included with RM0
7	Washer	(4)	Y13-6-C	'		

Item	Description (size)	Qty	Part No.			
8	Lock Washer (3/8")	(4)	Y14-616-C			
9	Cap Screw (3/8" - 16 x 1-1/2")	(4)	Y6-67-C			
10	Nut (3/8" - 16)	(4)	Y12-6-C			
11	Wet-Sol "Plus" (1 quart) (not shown)	(1)	66333-B			
*12	Male Elbow	(1)	59756-58			
*13	Cap Screw	(4)	Y99-63-C			
1	Bulk Tubing (1/2" OD x 100')	(1)	94978-100			
2	Bulk Tubing (5/16" OD x 100')	(1)	94980-100			
*	Included with RM051S-XXX-XX-B					

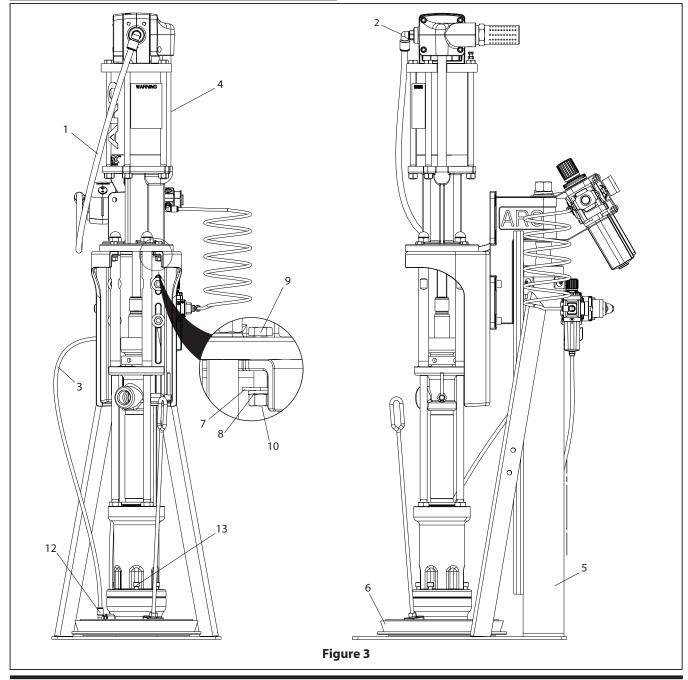

SP0412X2XXXXXXX (en) Page 3 of 4

MODEL DESCRIPTION / FOLLOWER PLATE OPTIONS											
Model	Pump Size	Follower Plate Material	Seal Type	Seal Material	Seal Diameter	Follower Asm.					
SP0412S2XXXXXA7X		Aluminum	Single Tube	EPR		67347-2					
SP0412S2XXXXXA8X				Nitrile	11.440" (290.6 mm)	67347-1					
SP0412S2XXXXXT7X		Aluminum with PTFE Coating		EPR		67347-12					
SP0412S2XXXXXT8X				Nitrile		67347-11					
SP0412T2XXXXXTUX				EPR		67532-1					
SP0412S2XXXXXE1X	Standard	Carbon Steel, Electroless Nickel Coating	Single Lip	Nitrile / Polyethylene	11.614" (295.0 mm)	67485-2					
SP0412S2XXXXXE3X	Footprint "A"			Polyurethane / Polyethylene	11.437" (290.5 mm)	67485-1					
SP0412S2XXXXXE5X	^			Nitrile / Polyethylene	12.281" (311.9 mm)	67485-3					
SP0412T2XXXXXS2X		Stainless Steel		PTFE Coated Nitrile / Polyethylene	11.437" (290.5 mm)	67536-1					
SP0412S2XXXXXEAX		Carbon Steel, Electroless Nickel Coating	Double Lip	Polyurethane		66732-1					
SP0412S2XXXXXEBX				EPR	11.609" (294.9 mm)	66732-2					
SP0412S2XXXXXECX				Nitrile		66732					

