


2236QXPA, Air Impact Wrench - Exploded View

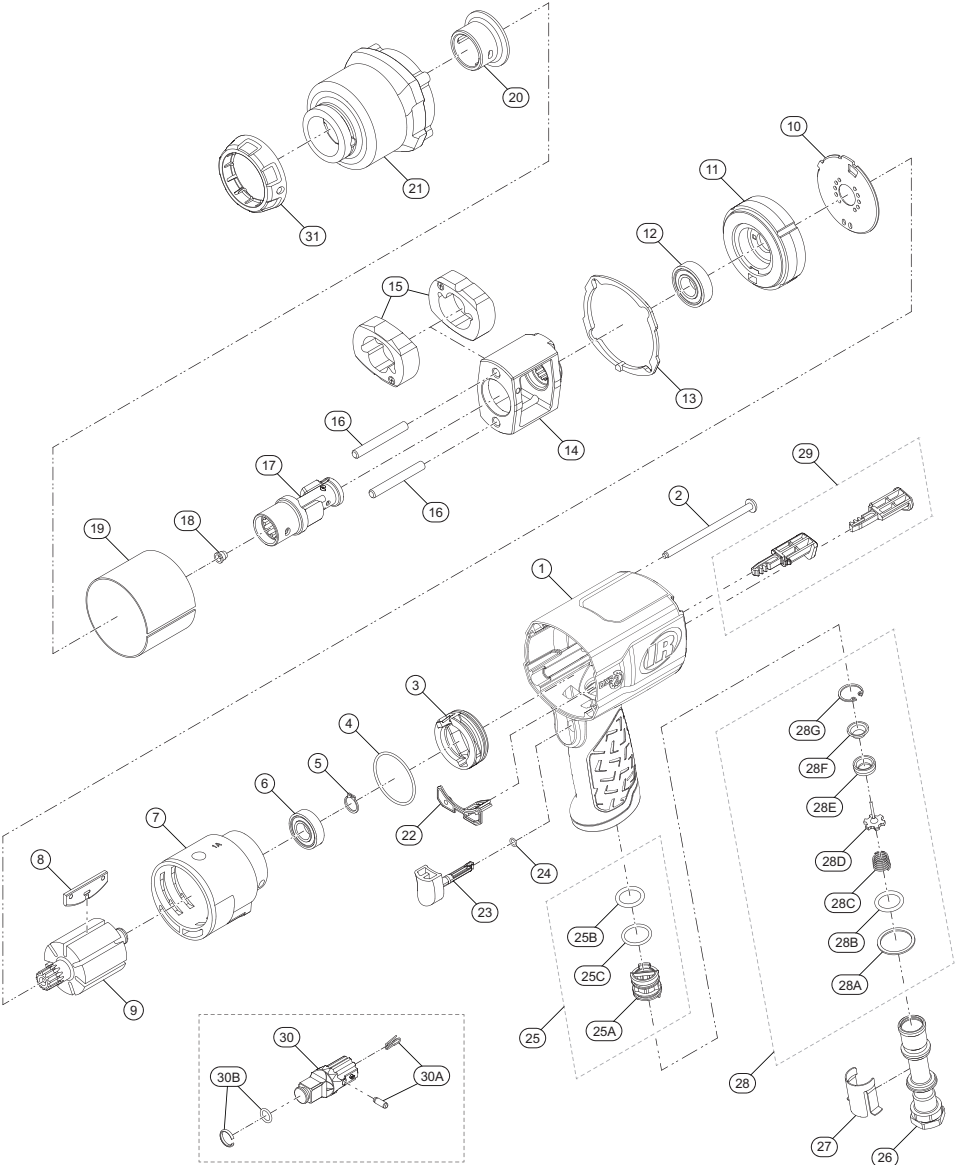

(Dwg. TL-2236QXPA-PLM-1)

2236QXPA, Air Impact Wrench - Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
*	Housing Assembly	TA-2236QXPA-A040	*	Inlet Bushing Assembly	2135-D565A
1	Housing	---	26	Inlet Bushing	---
22	Gasket, Motor	---	27	Inlet Clip	2131-57
25	Reverse Valve Assembly	---	28	Inlet Parts Kit	2135-K303
29	Button Kit	---	28A	Washer	---
2	Screw, Hammer Case (4 required)	2135-638	28B	O-Ring, Seal	---
*	Power Regulator Assembly	TD-2236-249RD	28C	Throttle Spring	---
3	Power Regulator	---	28D	Throttle Valve	---
4	O-Ring, Power Regulator	---	28E	Valve Seat	---
5	Retaining Ring	2131-6	28 F	Seat Support	---
6	Ball Bearing (Cylinder)	2131-97	28G	Retainer	---
7	Cylinder	TP-2236-003	*	Anvil Assembly (replaceable)	A41H
† 8	Vane Pack (set of 7)	2235-42-7	30	Anvil	---
9	Rotor	2235-53	30A	Anvil Retainer Kit (all Splined Anvils)	TK-2236-716
10	Wear Plate	TP-2236-011X	† 30B	Socket Retainer Kit (1/2" ring-type)	2125QTI-K425
11	End Plate	TP-2236-011	*	Tune-up Kit	TK-2236-GTK
12	Ball Bearing (End Plate)	2235-97	4	O-Ring, Power Regulator	---
† 13	Hammer Case Gasket	TP-2236-036RD	5	Retaining Ring	---
*	Hammer Mechanism Kit	2235-THK1	6	Ball Bearing (Cylinder)	---
14	Hammer Frame	---	8	Vane Pack (set of 7)	---
15	Hammer (2 required)	2235-724	12	Ball Bearing (End Plate)	---
16	Hammer Pin (2 required)	---	13	Hammer Case Gasket	---
*	Anvil Assembly (internal)	TD-2236-526SD	22	Gasket, Motor	---
17	Anvil	---	24	O-Ring, Trigger	---
18	Grease Fitting	131-188	25B	O-Ring, Reverse Valve (top-black)	---
*	Hammer Case Assembly	TD-2236QI-727AL	25C	O-Ring, Reverse Valve (bottom-blue)	---
19	Hammer Case Sleeve	2235-110	28	Inlet Parts Kit	---
20	Bushing, Hammer Case	TP-2236-641SD	*	Grease	---
21	Hammer Case	---	*	DXS Tool Kit - 10 Pack	TK-DXS-TOOL-10
31	Retaining Pin Guard	TP-2236XP-961RD	*	Inlet Clip Removal Tool	2131-322
† 22	Gasket, Motor	TP-2236-283	*	Socket Retainer Kit (1/2" ring-type) - 10 Pack	2125QTI-K425-10
† *	Trigger Assembly	2135-D93	† *	Air Care Kit (Grease Gun, Grease, and Oil)	105-LBK1
23	Trigger	---	*	Grease (replacement tube for LBK1)	105-4T
24	O-Ring, Trigger	---	*	Air Tool Oil (4 oz. bottle)	1024
25	Reverse Valve Assembly	2131-A329	*	Grease (1 lb can)	105-1LB
25A	Reverse Valve	---	*	Grease (8 lb can)	105-8LB
25B	O-Ring, Reverse Valve (top-black)	---	*	Grease Gun	R000A2-228
25C	O-Ring, Reverse Valve (bottom-blue)	---	* Indicates not illustrated.		
29	Button Kit	TK-2236-075RD	† Indicates common-wear parts. To minimize downtime, it is recommended to maintain a stock of these repair parts and keep one (pair or set) of each part for every four tools in service.		
*	Forward Button	---			
	Reverse Button	---			

Parts and Maintenance

When tool life has expired, it is recommended that the tool be disassembled, degreased and parts separated by material for proper recycling.

Tool repair and maintenance should only be carried out by an Authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** office or distributor.

Related Documentation

Manuals can be downloaded from [ingersollrand.com](https://www.ingersollrand.com)

For additional information, refer to:

Product Safety Information Manual 04580916

Product Information Manual TL-2236QXPA-PIM

CE-Declaration of Conformity TL-2236QXPA-DOC

UK-Declaration of Conformity TL-2236QXPA-DOC-UK



ingersollrand.com
© 2025 Ingersoll Rand

TL-2236QXPA-PLM
Edition 1
November 2025