



16572885  
Edition 4  
December 2021

## Air Drill

44SMA, 44SMA-EU

---

## Parts Information




Save These Instructions

 *Ingersoll Rand*

---

#### 44SMA, Air Drill - Exploded View

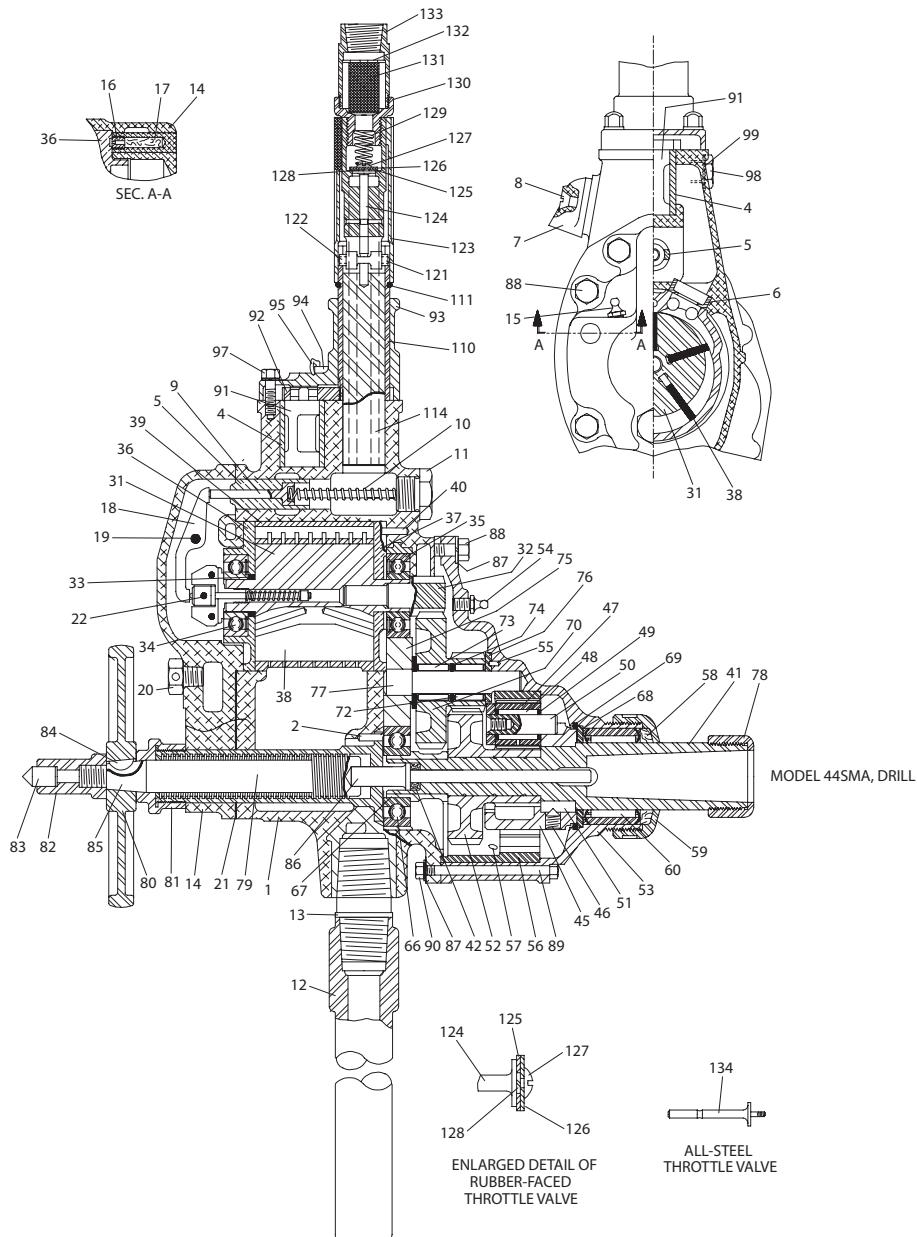


## 44SMA, Air Drill - Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
1	Motor Housing		52	Spindle Gear	R4SM-9
	for models ending in -EU	R44H-EU-40	53	Gear Case	R4SM-37
	for all other models	R44H-40	54	Grease Fitting	23-188
*	Warning Label		55	Thrust Plate Dowel	R3G-34
	for models ending in -EU	EU-99	56	Internal Gear	R4SM-406
	for all other models	WARNING-8-99	57	Internal Gear Rivet (5 required)	R4SM-407
*	Nameplate		58	Spindle Packing	R3H4-14
	for models ending in -EU	R2H-EU-99	59	Spindle Packing Nut	R3H4-15
	for all other models	R2H-99	60	Spindle Bearing	R3H4-510
2	Feed Screw Dowel	R3H-527	66	Spindle Thrust Bearing	TB-105
4	Reverse Valve Bushing	R44H-330	67	Spindle Thrust Bearing Spacer	R4SM-100
5	Governor Valve Bushing	R3H-429	68	Spindle Thrust Ring	R4H-511
6	Air Port Gasket (2 required)	R44H-210A	69	Spindle Thrust Ring Retainer	R3SM-83
7	Exhaust Deflector	R33H-23	70	Intermediate Gear	R4SM-82
8	Exhaust Deflector Screw	R44H-312	72	Intermediate Gear Front Bearing	R4SM-500
9	Governor Valve	R4H-425	73	Intermediate Gear Rear Bearing	R4SM-501
10	Governor Valve Spring	R4H-431	74	Intermediate Gear Bearing Spacer	R4SM-573
11	Governor Valve Cap	R4H-433	75	Intermediate Gear Thrust Washer	R30-645
12	Dead Handle	TA-48A	76	Intermediate Gear Thrust Plate	R4SM-570
13	Dead Handle Stud	TB-364	77	Intermediate Gear Shaft	R4SM-502
14	Backhead	R4H-102	78	Protection Nut	T01-43A
15	Grease Fitting	23-188	79	Outer Feed Screw	R4H-290
16	Oiler Adjusting Screw (2 required)	JA4-71		Feed Screw Assembly	TB-A291
17	Oiler Felt (6 required)	JA4-75	80	Feed Handle	TB-2
18	Governor Lever	R4H-436	81	Feed Screw Cap	TB-392
19	Governor Lever Pin	N00-15	82	Feed Handle Lock Nut	TB-388A
20	Oil Chamber Plug	P25-227	83	Feed Screw Center	TB-244
† 21	Backhead Gasket	R4H-283	84	Feed Handle Key	TC-18
22	Governor Assembly	R5H-A424B	85	Inner Feed Screw	TB-291
31	Rotor	R44H-53	86	Drill Ejecting Pin	R4SM-114
32	Rotor Pinion	R4J-17	87	Lock Washer (5/16") (17 required)	T11-58
33	Rotor Bearing Spacer	555-65	88	Cap Screw (8 required)	B8-240
† 34	Rear Rotor Bearing	555-22	89	Gear Case Bolt	
† 35	Front Rotor Bearing	555-24		Long	R4SM-126
† 36	Rear End Plate	R44H-12		Short (3 required)	R4SM-125
† 37	Front End Plate	R44H-11	90	Gear Case Bolt Nut (1 for each Bolt)	D02-428
† 38	Vane Packet (set of 5 Vanes)	555-42-5	91	Reverse Valve	R44H-329
† 39	Cylinder	R44H-3	92	Reverse Valve Sector	R44H-488
40	Cylinder Dowel	R4H-98	93	Sector Cover	R44H-489
	Spindle Assembly	R4SM-B108	94	Reverse Stop	R44H-568
41	Spindle	R4SM-108	95	Reverse Stop Lever	R44H-569
42	Ejecting Pin Packing	R4H-408	*	Reverse Stop Washer	R44H-572
	Planet Gear Frame Assembly	R4SM-A367	97	Sector Cover Screw (5 required)	R44H-490A
45	Planet Gear Frame	R4SM-367	98	Throttle Body Set Screw	TCCW-433
46	Planet Gear Frame Set Screw (3 required)	R4SM-574	99	Throttle Body Set Screw Lock Washer	D02-537
47	Planet Gear (3 required)	R4SM-10			
48	Planet Gear Roller (45 required)	R4SM-152			
49	Roller Retaining Plate	R4SM-468			
50	Planet Gear Shaft (3 required)	R4SM-191			
51	Planet Gear Frame Key	R4SM-410			

\* Indicates not illustrated.

† To keep downtime to a minimum, it is desirable to have on hand certain repair parts. We recommend that you stock one (pair or set) of each part indicated by a (†) for every four tools in service.

## 44SMA, Air Drill - Exploded View

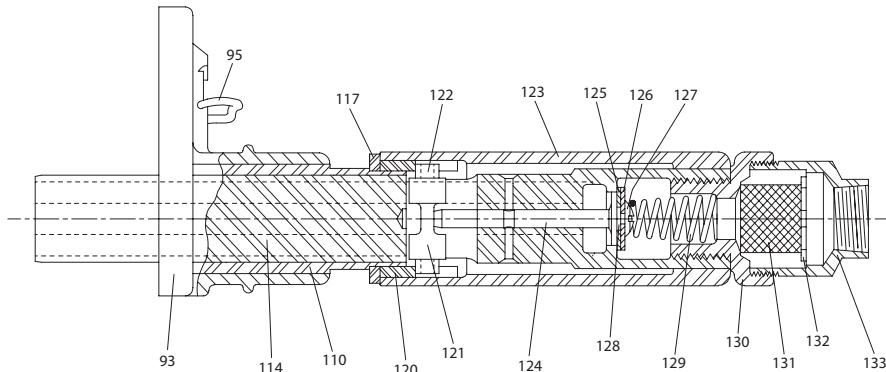

(Dwg. TPD1182-1)

## 44SMA, Air Drill - Parts List

Item	Part Description	Part Number
	Throttle Assembly	R44H-A518
110	Throttle Sector	R44H-497
111	Throttle Sector Snap Ring	R44H-486
** 114	Throttle Body	R44H-518
121	Throttle Valve Lift Pin	R4H-306
*	Rotational Label (reversible)	R22H-100
122	Lift Pin Roller (2 required)	TAA-426
123	Throttle Sleeve	R4H-305
# 124	Rubber-Faced Throttle Valve	R4H-402
† 125	Throttle Valve Face	R4H-159
126	Throttle Valve Face Cap	4H-157
127	Throttle Valve Face Retaining Screw	R4-158
128	Retaining Screw Lock Washer	H54U-352
129	Throttle Valve Spring	TAA-418
	Air Strainer Assembly	R4H-A565
130	Air Strainer Cap	R4H-566
131	Air Strainer Screen	R3H-61
132	Air Strainer Screen Support	R3H-567
133	Air Strainer Body	R3H-565
134	All Steel Throttle Valve	R4H-302


\* Indicates not illustrated.

\*\* If ordered as a replacement for a Throttle Body Equipped with an All Steel Throttle Valve, also order the Rubber-Faced Throttle Valve (124). The body for use with the All Steel Throttle Valve is discontinued.

† Cannot be used as a replacement for the All Steel Throttle Valve

‡ To keep downtime to a minimum, it is desirable to have on hand certain repair parts. We recommend that you stock one (pair or set) of each part indicated by a (†) for every four tools in service.

## 44SMA, Air Drill - Exploded View

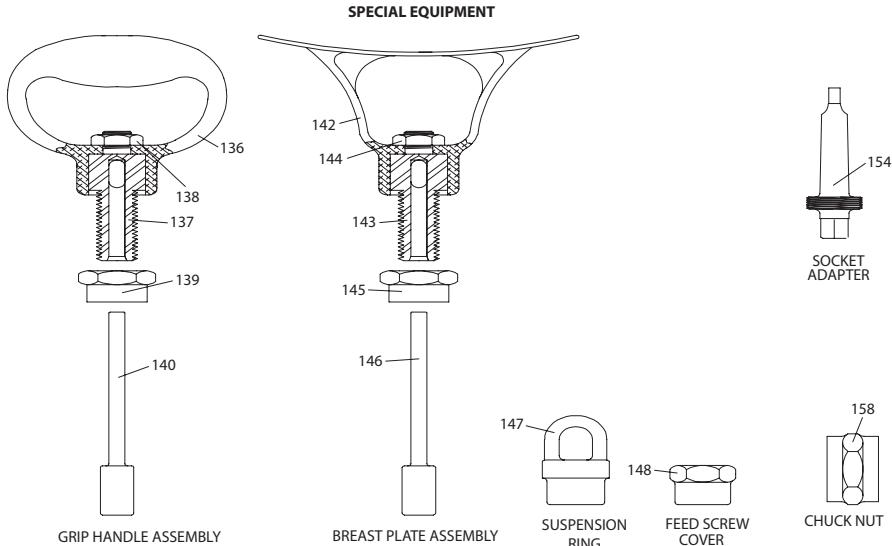

(Dwg. TPB10-3)

## 44SMA, Air Drill - Parts List

Item	Part Description	Part Number
	Grip Handle Assembly	
136	Grip Handle	TB-A41
137	Grip Handle Stud	A-41
138	Grip Handle Stud Nut	TB-448
139	Grip Handle Nut	TB-447
140	Grip Handle Ejecting Pin	TB-50
	Breast Plate Assembly	TB-A79
142	Breast Plate	TC-79
143	Breast Plate Stud	TB-448
144	Breast Plate Stud Nut	B12-249
145	Breast Plate Nut	TB-447
146	Breast Plate Ejecting Pin	TB-50
147	Suspension Ring	TB-365
148	Feed Screw Cover	TB-461
154	Socket Adapter (No. 4 Morse Taper to 1" square drive)	R40-214
158	Chuck Nut	T01-347
*	Male Hose Nipple (3/4" hose to 1/2" male pipe)	A03-46

\* Indicates not illustrated.

---

## Parts and Maintenance

When tool life has expired, it is recommended that the tool be disassembled, degreased and parts separated by material for proper recycling.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** office or distributor.

---

## Related Documentation

Manuals can be downloaded from [ingersollrand.com](http://ingersollrand.com)

For additional information, refer to:

Product Safety Information Manual 04580353

Product Information Manual 16572240

Maintenance Information Manual 16572554

---

**Notes:**

[ingersollrand.com](http://ingersollrand.com)

© 2021 *Ingersoll Rand*

