



Part #: **PJDI246**



**D6M22 - 26 GPM
INJECTION
SEAL KIT**

**GENUINE
DOSATRON
PARTS**

This kit contains:

(1) JDI121	Plunger seal
(1) JDI122	Injection stem o-ring
(1) JDI100	Sleeve o-ring
(1) PJDI200	Check valve assembly

Vea el reverso para
instrucciones en Español.




LIT-PJDI246

Kit Contents:

PJDI200: Check
valve assembly

JDI100: Sleeve
o-ring

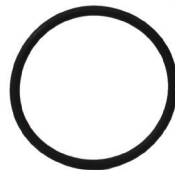

JDI121:
Plunger seal



JDI122: Injection
stem o-ring



We recommend cleaning all parts with warm soapy water and a toothbrush before installing the new parts.

Water normally lubricates the parts, but you may use silicone on the o-ring to facilitate insertion.

Check valve may be taken apart and cleaned in between maintenance to remove particles.




CAUTION: Parts may contain concentrated chemicals. The use of Proper Protective Equipment is recommended when performing maintenance.

Instructions

(Parts included in kit noted in **blue**)


1. Unscrew injection stem assembly nut (PDI1312) and set aside. Pull down on stem to detach from body of unit. Unscrew hose nut (PDI1184).

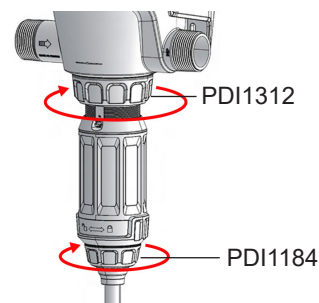

2. Unscrew check valve nut (PDI1183) and pull out check valve assembly (**PJDI200**). It will come out in one piece. Discard.



3. Remove "C" clamp (PDI180) by slightly spreading the opening and gently sliding it down over the threads. Unscrew locking nut (PPDI066). Unscrew adjusting sleeve (PPDI063). Holding the sleeve (PDI1323), push up on the threaded part of the injection stem (PDI1174) and slide it out of the sleeve from the top. Replace both sleeve and injection stem o-rings (**JDI100** and **JDI122**).

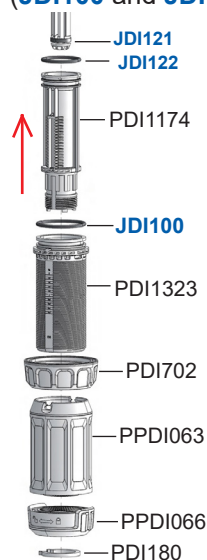


! To remove o-ring easily without tools, squeeze it on either side to raise the seal, then slide it over the groove

4. Remove and replace plunger seal (**JDI121**), using same method as above.

! Using tools could damage the plunger and affect the injection rate

5. Slide the injection stem (PDI1174) down into the sleeve (PDI1323), making sure the small key located on the bottom inside of the sleeve is properly aligned with the longest groove on the white stem. Holding the sleeve, pull down on the stem as far as it will go. Screw adjusting sleeve (PPDI063) back onto the sleeve (PDI1323).

Screw locking nut (PPDI066) back on.

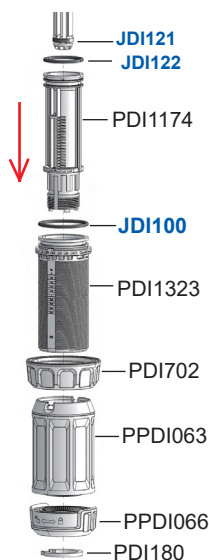

Reinstall "C" clamp by sliding it gently over the thread at the bottom of the white stem. Rotate clamp until it clicks into place.

6. Insert new check valve (**PJDI200**) at the bottom of the stem, making sure that the 4 white keys on the check valve seat next to the 4 black keys on the bottom of the stem. Screw check valve nut (PDI1183) back on.



7. Push complete injection stem assembly in position at the bottom of the blue body, making sure desired scale is facing front of injector. Keys at the top of the black sleeve should slide into the slots at the bottom of the body. Slide injection stem nut (PDI1312) up the sleeve and screw back on. Insert hose back onto the barb at the bottom of the check valve (**PJDI200**). Screw hose nut (PDI1184) back on.

! To ensure hose is air-tight, you may choose to carefully cut the top of hose before reinserting.


Contenido del Kit:

PJDI200:

Válvula cheque

JDI100: O-ring del

cono de inyección

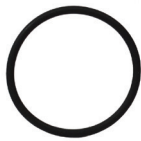

JDI121: Sello
del embolo



JDI122:
O-ring parte
superior




! Recomendamos limpiar todas las partes con agua tibia jabonosa y un cepillo de dientes, antes de instalar las partes nuevas. El agua normalmente lubrica las partes, pero usted puede usar silicona en el o-ring para facilitar la inserción. La válvula cheque se puede desarmar y limpiar entre mantenimientos para remover las partículas.

STOP PRECAUCIÓN: Las partes pueden contener químicos concentrados. El uso de Equipo de Protección Adecuado es recomendado cuando se efectúa el mantenimiento.

Instrucciones

(Partes en color azul están incluidas en el kit)


1. Desatornille la tuerca del bástago de inyección (PPDI1312) y colóquela a un lado. Jale hacia abajo el bástago de inyección hasta separarlo del cuerpo de la unidad. Desatornille la tuerca de la manguera (PDI1184).

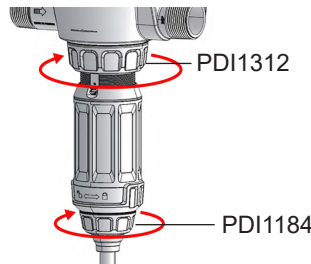

2. Desatornille la tuerca (PDI1183) y remueva la válvula cheque (**PJDI200**). Esta saldrá en una sola pieza. Deséchela.



3. Remueva la arandela en forma de "C" (PDI180). Desatornille la tuerca de seguridad (PPDI066). Desatornille la manga de ajuste (PPDI063). Sujete la manga (PDI1323), empuje hacia arriba la barra de inyección con rosca (PDI1174) y sáquela completamente de la manga. Reemplace ambos o-rings de la manga y de la barra de inyección (**JDI100** y **JDI122**).

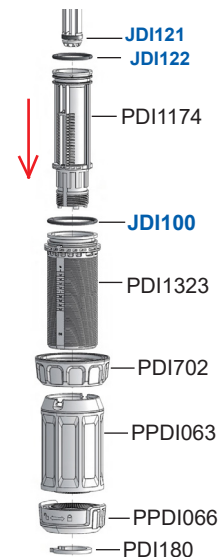


! Para remover fácilmente el o-ring sin uso de herramientas, simplemente apriete ambos lados del o-ring y este levantará una parte para poder ser extraído.

4. Remueva y reemplace el sello del embolo (**JDI121**), usando el mismo método descrito anteriormente.

! El uso de herramientas podría dañar el embolo afectando el índice de inyección

5. Inserte la barra de inyección (PDI1174) dentro de la manga (PDI1323), asegurándose que las marcas ubicadas en la parte inferior dentro de la manga coincidan con las ranuras en la barra de inyección. Sujetando la manga, jale hacia abajo la barra tanto como pueda. Atornille la manga de ajuste (PPDI063) a la manga (PDI1323).

Atornille la tuerca de seguridad (PPDI066).

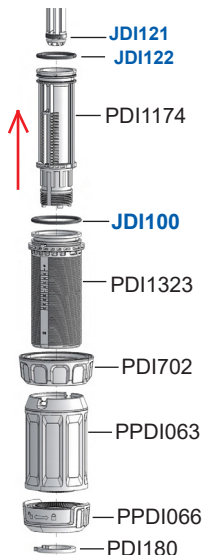

Reinstale la arandela en forma de "C", rotándola hasta que haga clic.

6. Inserte la nueva válvula cheque (**PJDI200**) en la parte inferior de la barra (PDI1174). Asegúrese que las 4 marcas en la válvula cheque estén alineadas con las 4 marcas en la parte inferior de la barra. Atornille de nuevo la tuerca de la válvula cheque (PDI1183).



7. Inserte todo el montaje de inyección en la unidad, empujándolo completamente hasta que esté en posición. Girando el montaje de inyección, usted puede asegurarse que la escala deseada (porcentajes o proporciones) se encuentra en la parte frontal del inyector. Atornille la tuerca (PDI1312). Inserte la manguera en la parte inferior al final de la válvula cheque (**PJDI200**) y atornille la tuerca de la manguera (PDI1184) en su lugar.

! Para asegurarse que haya una succión adecuada, usted puede cortar con cuidado el final de la manguera en línea recta.

2090 Sunnydale Blvd.
Clearwater, FL 33765
1-800-523-8499 • 1-727-443-5404
www.dosatron.com