



oberdorfer[®]

An Ingersoll Rand Business



Model N211M Bronze Close Coupled Rubber Impeller Pump



Features

- Pipe Size 3/8" ID and 3/4" OD Garden Hose
- Bronze construction - corrosion resistant
- Garden hose threads (external) & pipe threads (internal) port connections
- Impeller & cam easily replaced
- Large vent openings separate pump & motor
- Motor shafts are stainless steel
- Shaft slinger protects motor bearings
- Convenient carrying handle
- Sealed and grounded 3-conductor plug-in cord
- Meets U.S. Coast Guard Ignition Protection Requirements, 33CFR 183.410(a)

Drive and Rotation

Motor drive is clockwise facing pump end. Liquid flow direction is right to left facing pump end - see dimension drawing on reverse side. Motor is 1/6 HP, 1725 RPM, 115VAC. O.D.P.

Do Not Run Dry

Rubber impellers generate high rubbing friction unless lubricated by liquid pumped. Lack of liquid will cause impeller to burn up. Standard impeller in Neoprene (O4), optional Buna impeller (O5) available.

Performance

Capacity Water at 60°F

FT. HD	0	10	20	30	40	50	60	70
PSI	0	4.3	8.7	13.0	17.3	21.7	26.0	30
GPM	12 1/2	12 1/4	11 1/2	11	10	9	8	6 1/2

Extremes of cold and heat will affect impeller life. Limits of 40°F to 140°F should be observed. Do not allow liquid in pump to freeze. Drain pump by loosening cover screws. Use methyl alcohol based anti-freeze compounds such as Zerex, Shell Zone, Pyro Permanent, Permaguard, Dowgard.

Suction Lift

Suction lift to 10 ft. for model N211M is possible when impeller is wet. Suction lines must be air tight in order for pump to self prime. Always use foot valve at beginning of suction line to keep suction line full and impeller wet.

Liquids & Temperature

Liquids compatible with neoprene can be pumped including fresh and salt water solutions. Do not pump severe solvents or acids. When possible, flush pump with fresh water after each usage. Extremes of cold and heat will affect impeller life. Limits of 40° to 140°F should be observed. Do not allow liquid in pump to freeze. Drain pump by loosening cover screws. Use methyl alcohol based anti-freeze compounds such as Zerex, Shell Zone, Pyro Permanent, Permaguard, Dowgard.

Impeller Replacement

The impeller must be replaced if it is worn out or has been damaged by debris or by running the pump dry. Symptoms of a defective impeller are low pumping pressure and low flow.

To replace the impeller remove screws and cover. Pull out the impeller with nose pliers or two screwdrivers. Be careful not to dent the pumping chamber with these tools. When inserting new impeller, line up key slot in impeller with the key in the shaft. Use oil on shaft and avoid forcing the impeller onto the shaft.

The impeller should also be removed for storage periods to prevent the blades from taking a permanent set.






Seal Replacement

If water drips from the area where the shaft exits the pump, the seal is defective and must be replaced. While the shaft slinger barrier seal provides a first line of defense, prolonged running of the pump with a leaky seal can destroy the ball bearings of the electric motor.

For seal replacement, the pump must be removed from the motor and disassembled in order to gain access to the seal area. The Buna seal must be pushed out of the press-fitted position and a new lip seal pressed into place, using a sealant on the outside of the lip seal housing.

Refer to exploded view drawings for seal location and part numbers for ordering purposes.

Exploded View and Parts List

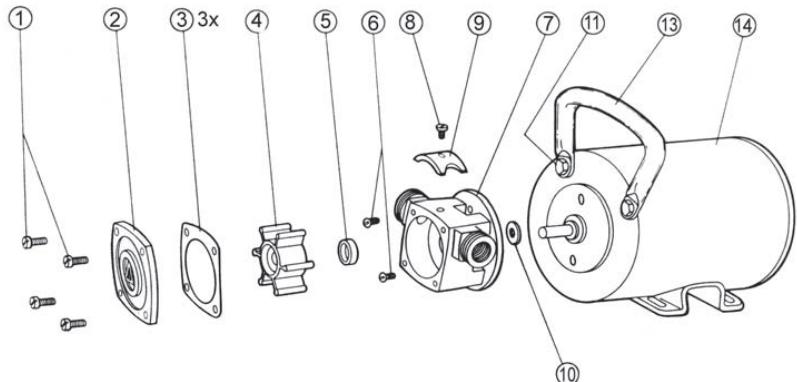

	1	2	3*	4*	4a*#	5*	6	7	8	9	10	11	12*	13	14	Repair Kit
Pump No.	Qty. 4	Qty. 1	Qty. 3	Qty. 1	Qty. 1	Qty. 1	Qty. 4	Qty. 1	Qty. 1	Qty. 1	Qty. 1	Qty. 2	Qty. 4	Qty. 1	Qty. 1	OB10910
OBN211M-F34	OB5385	OB6638	OB7547	OB6593	--	OB5007	OB7424	OB6653	OB7300-41	OB6592	OB6757	OB5411	OB6761	OB7766	OB7462	

* Requires 2 6074 not represented in diagram

Dimensions

